




POLITECNICO
MILANO 1863

FeST

flash–Flood Event–based

Spatially distributed rainfall– runoff Transformation

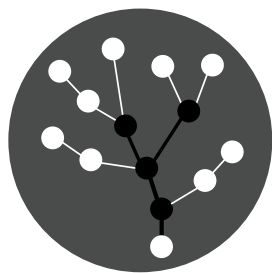

{ FeST }
Hydrological Model

User's Manual

April, 2024

Approved for public release. Distribution unlimited.

FeST

flash–Flood Event–based

Spatially distributed rainfall–

runoff Transformation

User’s Manual

April, 2024

Politecnico di Milano

Department of Civil and Environmental Engineering

Real Time Hydrology Group

Piazza Leonardo da Vinci 32

20133 Milano – Italy

www.fest.polimi.it

Revision sheet

Release No.	Date	Revision Description
Rev. 0	01/01/2024	FEST User's manual original document

Table of contents

TABLE OF CONTENTS	I
LIST OF FIGURES	IV
LIST OF TABLES	VI
INTRODUCTION	1
CHAPTER 1 SUPPORTED FORMATS	1
1.1 RASTER MAP FORMATS	1
1.1.1 <i>ESRI ASCII grid</i>	1
1.1.2 <i>ESRI BINARY grid</i>	2
1.1.3 <i>NetCDF</i>	4
1.2 SUPPORTED SPATIAL REFERENCE SYSTEMS	5
1.3 DATE AND TIME FORMAT	10
1.4 TIME SERIES OF SITE DATA	10
1.5 TIME SERIES OF GENERIC VARIABLE	12
1.6 TABLES	13
CHAPTER 2 CONFIGURATION FILES: GENERAL TIPS	15
2.1 ASSIGNING A MAP AS INPUT	16
CHAPTER 3 THE MAIN CONFIGURATION FILE	19
3.1 TIME	21
3.2 RESULT	21
3.3 DOMAIN	22
3.4 MORPHOLOGY	23
3.5 METEO	23
3.6 PLANTS	25
3.7 SNOW	26
3.8 GLACIER	27
3.9 SOIL WATER BALANCE	28

3.10 DISCHARGE ROUTING.....	28
3.11 GROUNDWATER	29
3.12 SPATIAL AVERAGE.....	30
3.13 IRRIGATION	31
3.14 BASIN AVERAGE.....	31
3.15 RASTER EXPORTING	32
CHAPTER 4 SETTING DOMAIN PROPERTIES	35
CHAPTER 5 MORPHOLOGICAL PROPERTIES.....	39
CHAPTER 6 METEO CONFIGURATION FILE.....	43
6.1 PRECIPITATION WITH ARBITRARY TIME CUMULATION.....	45
6.2 DAILY PRECIPITATION.....	49
6.3 SUBDAILY AIR TEMPERATURE AVERAGED OVER ARBITRARY TIME	49
6.4 DAILY MEAN AIR TEMPERATURE.....	53
6.5 DAILY MINIMUM AIR TEMPERATURE	54
6.6 DAILY MAXIMUM AIR TEMPERATURE	54
6.7 SOLAR RADIATION	54
6.8 AIR RELATIVE HUMIDITY	57
6.9 WIND SPEED.....	61
CHAPTER 7 SNOW ACCUMULATION AND MELTING	65
CHAPTER 8 GLACIER ACCUMULATION AND ABLATION.....	73
CHAPTER 9 PLANTS.....	79
CHAPTER 10 SOIL WATER BALANCE.....	81
10.1 BALANCE ID	83
10.2 STATE VARIABLES INITIALIZATION.....	84
10.3 INFILTRATION	85
10.4 EVAPOTRANSPIRATION	91
CHAPTER 11 DISCHARGE ROUTING.....	95
11.1 RESERVOIRS	100
11.1.1 Dam and lake simulation.....	107
11.1.2 Dam with an assigned level in time.....	111
11.1.3 On stream detention basin	115
11.1.4 Dam with flow diversion	118
11.1.5 Off stream detention basin.....	122

11.2 DIVERSIONS.....	123
11.2.1 <i>Diversion channel</i>	124
CHAPTER 12 GROUNDWATER.....	129
12.1 RIVER-GROUNDWATER FLUX EXCHANGE	133
CHAPTER 13 SPATIAL AVERAGE.....	137
CHAPTER 14 IRRIGATION	141
CHAPTER 15 BASIN AVERAGE.....	147
CHAPTER 16 RASTER EXPORTING.....	151
REFERENCES.....	155

List of figures

- Figure 1.1 three-dimensional data: Data over an area varying with time (source: <http://pro.arcgis.com/en/pro-app/help/data/multidimensional/fundamentals-of-netcdf-data-storage.htm>) 4
- Figure 1.2 Four-dimensional data: Data over an area varying with time and altitude (source: <http://pro.arcgis.com/en/pro-app/help/data/multidimensional/fundamentals-of-netcdf-data-storage.htm>) 5
- Figure 5.1 The coding of the direction of flow according to ESRI convention. (source: <https://pro.arcgis.com/en/pro-app/latest/tool-reference/spatial-analyst/how-flow-direction-works.htm>) 40
- Figure 6.1 Hourly precipitation data measured on 2000-10-14T05:00:00+00:00 over the Toce river basin (Italy) interpolated with Thiessen, IDW, and Kriging methods. 44
- Figure 6.2 Hourly precipitation data measured on 2000-10-14T05:00:00+00:00 over the Toce river basin (Italy) interpolated with Thiessen (id = 1) and IDW (id = 2). Left map shows spatial distribution of interpolation Id. 45
- Figure 10.1 Example of Balance id map for the simulation of the Idro lake basin, in Italy. Blue cells mark lake cells. Note the location of gate that regulates outflow and lake water surface elevation. 84
- Figure 11.1 Location of the Idro lake regulation dam along the flow accumulation map of the Chiese river basin. 108
- Figure 11.2 Input and output discharge and water elevation inside the Idro lake simulated by FEST model. 110
- Figure 11.3 The Malga Bissina dam on the Cjiese river for hydropower production. (*image* source: https://dgdighe.mit.gov.it/categoria/articolo/_dighe_di_rilievo/diga_malga_bissina). 111
- Figure 11.4 Water surface elevation simulated by FEST model and assigned as target. 114

Figure 11.5	The Gurone dam on the Olona river for flood risk mitigation. (<i>image source: PIANO EMERGENZA DIGA – PED DIGA DI OLONA (VA).</i>)	115
Figure 11.6	Location of the Gurone dam along the flow accumulation map of the Olona river basin.	116
Figure 11.7	Input and output discharge and water elevation inside the basin simulated by FEST model.	118
Figure 11.8	Santa Caterina dam, seen from upstream (source: https://progettodighe.it/dighe/santa-caterina/).	119
Figure 11.9	The CSNO bypass channel on the Seveso river. <i>Source: Stefano Stabile, CC BY-SA 3.0 <https://creativecommons.org/licenses/by-sa/3.0/>, via Wikimedia Commons.</i>	125
Figure 11.10	Path of the CSNO bypass channel. <i>Source: https://www.openstreetmap.org/relation/4633456.</i>	125
Figure 11.11	Discharge in the Seveso river upstream and downstream the diversion channel intake section.	128
Figure 11.12	Input and output discharge in and from the CSNO diversion channel.	128
Figure 12.1	Example of map to set boundary condition and active cells.	133
Figure 12.2	Map of flow accumulation (black cells) and river direction (white arrow) overlaid to boundary condition id map of Figure 11.1.	135
Figure 12.3	Map of flow <code>river-groundwater</code> id overlaid to boundary condition id map of Figure 11.1.	135

List of tables

Table 1.1. Definition of keywords in ESRI ASCII grid file.	2
Table 1.2. Definition of keywords in ESRI BINARY header file .hdr.	3
Table 1.3. Definition of keywords in time series of site data file.	10
Table 3.1. Definition of keywords to set simulation time.	21
Table 3.2. Definition of keywords to set result folder.	22
Table 3.3. Definition of keywords to set simulation domain configuration file.	22
Table 3.4. Definition of keywords to set the file to configure morphological properties.	23
Table 3.5. Definition of keywords to set parameters for configuring meteorological forcings.	23
Table 3.6. Name of files created for exporting sites meteorological data. The folder assigned in [result] section (see 3.2) is appended to the name of file as a prefix.	24
Table 3.7. Definition of keywords to set parameters to configure plants properties and simulation.	25
Table 3.8. Definition of keywords to set parameters for configuring snow simulation.	26
Table 3.9. Definition of keywords to set parameters for configuring glacier simulation.	27
Table 3.10. Definition of keywords to set parameters for configuring soil water balance simulation.	28
Table 3.11. Definition of keywords to set parameters for configuring discharge routing.	28
Table 3.12. Definition of keywords to set parameters for configuring groundwater.	29
Table 3.13. Definition of keywords to set the configuration file for exporting spatial average data.	30
Table 3.14. Definition of keywords to set parameters for configuring irrigation.	31
Table 3.15. Definition of keywords to set the configuration file for exporting basin average data.	32

Table 3.16. Definition of keywords to set the configuration file for exporting raster maps.	32
Table 4.1. Definition of keywords to set domain properties.	35
Table 4.2. Corine land cover classes.	36
Table 5.1. Definition of maps to be set as morphological properties.	39
Table 5.2. Keywords for setting stream network delineation.	40
Table 6.1. Definition of keywords in precipitation section of meteo configuration file.	45
Table 6.2. Definition of keywords in temperature section of meteo configuration file.	50
Table 6.3. Definition of keywords in radiation section of meteo configuration file.	54
Table 6.4. Definition of keywords in relative humidity section of meteo configuration file.	57
Table 6.5. Definition of keywords in wind speed section of meteo configuration file.	61
Table 7.1. Definition of [melt-model] section in the snow configuration file.	65
Table 7.2. Definition of [snow-water-equivalent] section in the snow configuration file.	66
Table 7.3. Definition of [melt-coefficient] section in the snow configuration file.	67
Table 7.4. Definition of [melt-threshold-temperature] section in the snow configuration file.	68
Table 7.5. Definition of [partitioning-upper-temperature] section in the snow configuration file.	68
Table 7.6. Definition of [partitioning-lower-temperature] section in the snow configuration file.	69
Table 7.7. Definition of [hydraulic-conductivity] section in the snow configuration file.	70
Table 7.8. Definition of [water-in-snow] section in the snow configuration file.	70
Table 8.1. Definition of doyr-snow-ice-transformation keyword in the snow configuration file.	73
Table 8.2. Definition of [melt-model] section in the glacier configuration file.	73
Table 8.3. Definition of [initial-condition] section in the glacier configuration file.	74
Table 8.4. Definition of [melt-coefficient] section in the glacier configuration file.	75
Table 8.5. Definition of [melt-threshold-temperature] section in the glacier configuration file.	76
Table 8.6. Definition of [hydraulic-conductivity] section in the glacier configuration file.	76

Table 9.1. Definition of keywords in plants configuration file.	79
Table 10.1. Definition of keywords in soil water balance configuration file.	82
Table 10.2. Maps to be assigned for initializing state variables.	85
Table 10.3. Definition of keywords in infiltration configuration file.	86
Table 10.4. Parameters to be included in <code>soil-types-file</code> .	90
Table 10.5. Definition of keywords in evapotranspiration configuration file.	92
Table 10.6. Definition of keywords for configuring crop coefficient.	92
Table 11.1. Definition of keywords in discharge routing configuration file.	96
Table 11.2. Definition of common keywords in reservoirs configuration file.	100
Table 11.3. Information to provide for on-stream basin (dam, lake or flood detention basin).	100
Table 11.4. Optional subsections of on-stream reservoir for managing high flow condition, and flow diversion from reservoir.	103
Table 11.5. Information to provide for off-stream detention basin.	105
Table 11.6. Definition of common keywords in diversions configuration file.	123
Table 11.7. Information to provide for configuring a diversion channel.	123
Table 12.1. How to configure aquifers to simulate groundwater.	129
Table 12.2. How to configure flux exchange between river and groundwater.	133
Table 13.1. spatial average file name.	139
Table 14.1. Definition of main keywords in irrigation configuration file.	141
Table 14.2. Information to provide for each intake.	141
Table 15.1. basin average variable description and unit.	148
Table 15.2. basin average file name.	149
Table 16.1. raster variables that can be exported: description and unit.	152
Table 16.2. raster file name.	153

INTRODUCTION

FEST is a spatially distributed hydrological model, developed at Politecnico di Milano by the Real Time Hydrology Group (www.fest.polimi.it) since the 1990s. FEST is the acronym of “flash–Flood Event–based Spatially distributed rainfall–runoff Transformation” that denotes how the first release of the model was oriented to the simulation of rainfall-runoff transformation of single flood events. After the first version was released, the FEST model has been subjected to continuous improvement and several hydrological processes have been integrated in the original code, transforming the FEST into a continuous integrated hydrological model. Several hydrological models have been derived from FEST such as AFFDEF (Moretti and Montanari, 2007), and DIMOSOP (Ranzi et al., 2003).

The FEST model has been designed to be applied across a wide range of spatial and temporal scales. All internal state variables (discharge, soil moisture, evapotranspiration, snow water equivalent, groundwater head, etc...) can be written as output. All output can be written as time series at user-defined points or areas. The user has complete control on the saving of the output data, thus minimising any waste of disk space or CPU time.

FEST has been applied to a wide range of water resources applications such as discharge assessment for flood risk analysis (Ravazzani et al., 2014), flood forecasting, soil moisture assessment and forecasting for irrigation scheduling, impacts assessment of climate and land-use changes (Ceppi et al., 2022) on water resources availability and flood severity.

CHAPTER 1

SUPPORTED FORMATS

This section lists the file format supported by the *FeST* model.

1.1 Raster map formats

The FEST model supports natively three file formats for grid map:

- ESRI ASCII grid
- ESRI BINARY grid
- Net CDF

1.1.1 ESRI ASCII grid

The ESRI ASCII raster format file begins with header information that defines the properties of the raster such as the cell size, the number of rows and columns, and the coordinates of the origin of the raster. The header information is followed by cell value information specified in space-delimited row-major order, with each row separated by a carriage return.

The basic structure of the ESRI ASCII raster has the header information at the beginning of the file followed by the cell value data:

```
NCOLS xxx
NROWS xxx
XLLCORNER xxx
YLLCORNER xxx
CELLSIZE xxx
NODATA_VALUE xxx
  row 1
  row 2
  ...
  row n
```

WARNING

Currently the supplementary .prj file used to assign spatial reference system to the grid is not supported. Spatial reference information should be set in FEST configuration files.

Header format

The syntax of the header information is a keyword paired with the value of that keyword. The definitions of the keywords are:

Table 1.1. Definition of keywords in ESRI ASCII grid file.

Parameter	Description	Requirements
NCOLS	Number of cell columns.	Integer greater than 0.
NROWS	Number of cell rows.	Integer greater than 0.
XLLCORNER	X coordinate of the origin by lower left corner of the cell	Match with Y coordinate type.
YLLCORNER	Y coordinate of the origin by lower left corner of the cell	Match with X coordinate type.
CELLSIZE	Cell size.	Greater than 0.
NODATA_VALUE	The input values to be NoData in the output raster.	Default is -9999 but a different value can be used

Data format

The data component of the ESRI ASCII raster follows the header information.

- Cell values should be delimited by spaces.
- No carriage returns are necessary at the end of each row in the raster. The number of columns in the header determines when a new row begins.
- Row 1 of the data is at the top of the raster, row 2 is just under row 1, and so on.

1.1.2 ESRI BINARY grid

ESRI BINARY grid is similar to ESRI ASCII grid, however, there are two differences. First, in ESRI BINARY grid the gridded data values are in binary form, typically resulting in smaller files. Second, ESRI BINARY grid is a pair of files: a simple text file with extension .hdr that contains the same information as the first six lines of the equivalent ESRI ASCII grid with

one additional line; and the primary content of numeric values in binary form in a file with extension .flt. The two files are associated by sharing the filename before the period, e.g., myfile.flt and myfile.hdr.

Header format

The header file defines the properties of the grid, such as the cell size, the number of rows and columns, and the coordinates of the origin of the rectangular grid. The header keywords can be in upper or lower case.

The syntax of the header information is a keyword paired with the value of that keyword. The definitions of the keywords are:

Table 1.2. Definition of keywords in ESRI BINARY header file .hdr.

Parameter	Description	Requirements
NCOLS	Number of cell columns.	Integer greater than 0.
NROWS	Number of cell rows.	Integer greater than 0.
XLLCORNER	X coordinate of the origin by lower left corner of the cell	Match with Y coordinate type.
YLLCORNER	Y coordinate of the origin by lower left corner of the cell	Match with X coordinate type.
CELLSIZE	Cell size.	Greater than 0.
NODATA_VALUE	The input values to be NoData in the output raster.	Default is -9999 but a different value can be used
BYTEORDER MSBFIRST or BYTEORDER LSBFIRST	Specifying whether the values have the most significant byte first or the least significant byte first	BYTEORDER LSBFIRST

Data format

The .flt file holds values for a single numeric measure, a value for each cell in the rectangular grid. The numeric values are in IEEE floating-point 32-bit (aka single-precision) signed binary format. The first number in the .flt file corresponds to the top left cell of the raster/grid. Going from left to right along the top row, the first 32 bits form the value for the first cell, the next 32 bits the value for the second cell, and so on, to the end of the top row. This is repeated for the second row of the raster, continuing to the lower right-hand cell.

1.1.3 NetCDF

NetCDF (network Common Data Form) is a file format for storing multidimensional scientific data (variables) such as temperature, humidity, pressure, wind speed, and direction. NetCDF file has usually extension .nc, however different extensions may be encountered.

NetCDF data is:

- Self-Describing. A netCDF file includes information about the data it contains.
- Portable. A netCDF file can be accessed by computers with different ways of storing integers, characters, and floating-point numbers.
- Scalable. A small subset of a large dataset may be accessed efficiently.
- Appendable. Data may be appended to a properly structured netCDF file without copying the dataset or redefining its structure.
- Sharable. One writer and multiple readers may simultaneously access the same netCDF file.

The data in a netCDF file is stored in the form of arrays. For example, temperature varying over time at a location is stored as a one-dimensional array. Temperature over an area for a given time is stored as a two-dimensional array.

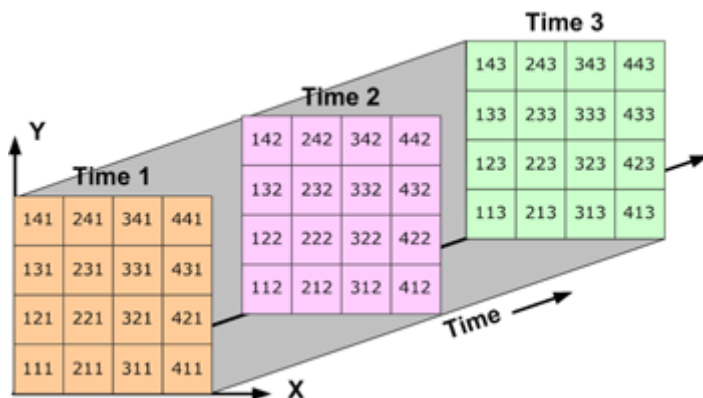


Figure 1.1 three-dimensional data: Data over an area varying with time (source: <http://pro.arcgis.com/en/pro-app/help/data/multidimensional/fundamentals-of-netcdf-data-storage.htm>)

Three-dimensional (3D) data, like temperature over an area varying with time, or four-dimensional (4D) data, like temperature over an area varying with time and altitude, is stored as a series of two-dimensional arrays.

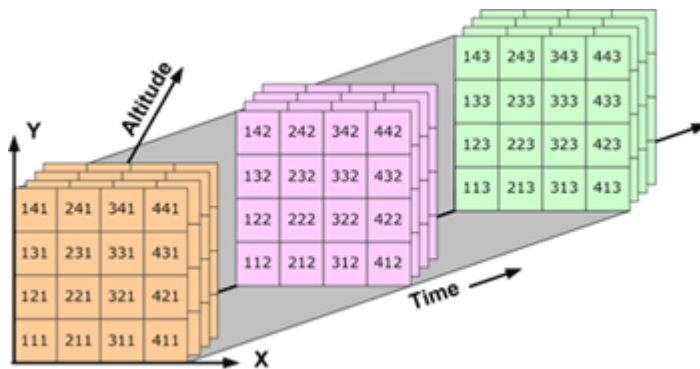


Figure 1.2 Four-dimensional data: Data over an area varying with time and altitude (source: <http://pro.arcgis.com/en/pro-app/help/data/multidimensional/fundamentals-of-netcdf-data-storage.htm>)

A netCDF file contains dimensions, variables, and attributes. These components are used together to capture the meaning of data and relations among data fields in an array-oriented dataset.

Many organizations and scientific groups in different countries have adopted netCDF as a standard way to represent some forms of scientific data, sometimes by defining a convention. The conventions define metadata that provides a definitive description of the data in each variable and their spatial and temporal properties. A convention helps users of data from different sources to decide which quantities are comparable. The name of the convention is presented as a global attribute in a netCDF file. Currently, the Climate and Forecast (CF) (<http://cfconventions.org/>) is supported.

For more information about NetCDF, visit: <http://www.unidata.ucar.edu/software/netcdf/>

1.2 Supported spatial reference systems

All maps of input parameters (i.e. the digital elevation model, soil saturated hydraulic conductivity, etc..) and site data (i.e. precipitation, air temperature, etc..) must be spatially referenced in either one of the supported Spatial Reference Systems.

List of supported projections:

- Geodetic
- Universal Transverse Mercator
- Transverse Mercator
- Gauss Boaga (Italy)
- Hotine Oblique Mercator
- Swiss Oblique Cylindrical

List of supported datums:

- World Geodetic System 1984

- European Datum 1950
- Monte Mario
- Swiss grid (CH1903)

Assignment of SRS is done within the input file for maps in netCDF format and site data, or through the FEST configuration files for ESRI ASCII and ESRI BINARY grids. SRS assignment is done according to EPSG (<http://www.epsg.org/>).

List of accepted values:

4326 GEODETIC, WGS84
4230 GEODETIC, ED50
3003 Gauss Boaga West
3004 Gauss Boaga East
21781 CH1903 Swiss topo
23028 ED50 / UTM zone 28N
23029 ED50 / UTM zone 29N
23030 ED50 / UTM zone 30N
23031 ED50 / UTM zone 31N
23032 ED50 / UTM zone 32N
23033 ED50 / UTM zone 33N
23034 ED50 / UTM zone 34N
23035 ED50 / UTM zone 35N
23036 ED50 / UTM zone 36N
23037 ED50 / UTM zone 37N
23038 ED50 / UTM zone 38N
32601 WGS 84 / UTM zone 1N
32602 WGS 84 / UTM zone 2N
32603 WGS 84 / UTM zone 3N
32604 WGS 84 / UTM zone 4N
32605 WGS 84 / UTM zone 5N
32606 WGS 84 / UTM zone 6N
32607 WGS 84 / UTM zone 7N
32608 WGS 84 / UTM zone 8N
32609 WGS 84 / UTM zone 9N
32610 WGS 84 / UTM zone 10N
32611 WGS 84 / UTM zone 11N
32612 WGS 84 / UTM zone 12N
32613 WGS 84 / UTM zone 13N

32614 WGS 84 / UTM zone 14N
32615 WGS 84 / UTM zone 15N
32616 WGS 84 / UTM zone 16N
32617 WGS 84 / UTM zone 17N
32618 WGS 84 / UTM zone 18N
32619 WGS 84 / UTM zone 19N
32620 WGS 84 / UTM zone 20N
32621 WGS 84 / UTM zone 21N
32622 WGS 84 / UTM zone 22N
32623 WGS 84 / UTM zone 23N
32624 WGS 84 / UTM zone 24N
32625 WGS 84 / UTM zone 25N
32626 WGS 84 / UTM zone 26N
32627 WGS 84 / UTM zone 27N
32628 WGS 84 / UTM zone 28N
32629 WGS 84 / UTM zone 29N
32630 WGS 84 / UTM zone 30N
32631 WGS 84 / UTM zone 31N
32632 WGS 84 / UTM zone 32N
32633 WGS 84 / UTM zone 33N
32634 WGS 84 / UTM zone 34N
32635 WGS 84 / UTM zone 35N
32636 WGS 84 / UTM zone 36N
32637 WGS 84 / UTM zone 37N
32638 WGS 84 / UTM zone 38N
32639 WGS 84 / UTM zone 39N
32640 WGS 84 / UTM zone 40N
32641 WGS 84 / UTM zone 41N
32642 WGS 84 / UTM zone 42N
32643 WGS 84 / UTM zone 43N
32644 WGS 84 / UTM zone 44N
32645 WGS 84 / UTM zone 45N
32646 WGS 84 / UTM zone 46N
32647 WGS 84 / UTM zone 47N
32648 WGS 84 / UTM zone 48N
32649 WGS 84 / UTM zone 49N

32650 WGS 84 / UTM zone 50N
32651 WGS 84 / UTM zone 51N
32652 WGS 84 / UTM zone 52N
32653 WGS 84 / UTM zone 53N
32654 WGS 84 / UTM zone 54N
32655 WGS 84 / UTM zone 55N
32656 WGS 84 / UTM zone 56N
32657 WGS 84 / UTM zone 57N
32658 WGS 84 / UTM zone 58N
32659 WGS 84 / UTM zone 59N
32660 WGS 84 / UTM zone 60N
32701 WGS 84 / UTM zone 1S
32702 WGS 84 / UTM zone 2S
32703 WGS 84 / UTM zone 3S
32704 WGS 84 / UTM zone 4S
32705 WGS 84 / UTM zone 5S
32706 WGS 84 / UTM zone 6S
32707 WGS 84 / UTM zone 7S
32708 WGS 84 / UTM zone 8S
32709 WGS 84 / UTM zone 9S
32710 WGS 84 / UTM zone 10S
32711 WGS 84 / UTM zone 11S
32712 WGS 84 / UTM zone 12S
32713 WGS 84 / UTM zone 13S
32714 WGS 84 / UTM zone 14S
32715 WGS 84 / UTM zone 15S
32716 WGS 84 / UTM zone 16S
32717 WGS 84 / UTM zone 17S
32718 WGS 84 / UTM zone 18S
32719 WGS 84 / UTM zone 19S
32720 WGS 84 / UTM zone 20S
32721 WGS 84 / UTM zone 21S
32722 WGS 84 / UTM zone 22S
32723 WGS 84 / UTM zone 23S
32724 WGS 84 / UTM zone 24S
32725 WGS 84 / UTM zone 25S

32726 WGS 84 / UTM zone 26S
32727 WGS 84 / UTM zone 27S
32728 WGS 84 / UTM zone 28S
32729 WGS 84 / UTM zone 29S
32730 WGS 84 / UTM zone 30S
32731 WGS 84 / UTM zone 31S
32732 WGS 84 / UTM zone 32S
32733 WGS 84 / UTM zone 33S
32734 WGS 84 / UTM zone 34S
32735 WGS 84 / UTM zone 35S
32736 WGS 84 / UTM zone 36S
32737 WGS 84 / UTM zone 37S
32738 WGS 84 / UTM zone 38S
32739 WGS 84 / UTM zone 39S
32740 WGS 84 / UTM zone 40S
32741 WGS 84 / UTM zone 41S
32742 WGS 84 / UTM zone 42S
32743 WGS 84 / UTM zone 43S
32744 WGS 84 / UTM zone 44S
32745 WGS 84 / UTM zone 45S
32746 WGS 84 / UTM zone 46S
32747 WGS 84 / UTM zone 47S
32748 WGS 84 / UTM zone 48S
32749 WGS 84 / UTM zone 49S
32750 WGS 84 / UTM zone 50S
32751 WGS 84 / UTM zone 51S
32752 WGS 84 / UTM zone 52S
32753 WGS 84 / UTM zone 53S
32754 WGS 84 / UTM zone 54S
32755 WGS 84 / UTM zone 55S
32756 WGS 84 / UTM zone 56S
32757 WGS 84 / UTM zone 57S
32758 WGS 84 / UTM zone 58S
32759 WGS 84 / UTM zone 59S
32760 WGS 84 / UTM zone 60S

1.3 Date and time format

The date and time string adheres to the International Standard ISO 8601 specifications. Date and time is expressed in the form `YYYY-MM-DDThh:mm:ssTZD` where:

`YYYY` = four-digit year

`MM` = two-digit month (01=January, etc.)

`DD` = two-digit day of month (01 through 31)

`hh` = two digits of hour (00 through 23) (am/pm NOT allowed)

`mm` = two digits of minute (00 through 59)

`ss` = two digits of second (00 through 59)

`TZD` = time zone designator (+hh:mm or -hh:mm)

A time zone offset of "+hh:mm" indicates that the date/time uses a local time zone which is "hh" hours and "mm" minutes ahead of UTC (Coordinated Universal Time). A time zone offset of "-hh:mm" indicates that the date/time uses a local time zone which is "hh" hours and "mm" minutes behind UTC.

Example: `2007-03-05T01:00:00+02:00`

1.4 Time series of site data

Time series of site data, such as precipitation or air temperature data acquired by meteorological stations, are stored in plain text files. File suffix assigned to the file is usually `.fts` (fast time series), but any suffix is allowed. Every file contains data of the same variable of all available stations. So for performing an hydrological simulation you need to prepare one file with all precipitation data available, one with air temperature data, and so on. The time step must be regular along one file. Time step can be different from file to file (for example hourly precipitation and daily air temperature data are allowed).

In each file, the first 7 rows define general information of the included data in a key-value paradigm (see Chapter 2):

Table 1.3. Definition of keywords in time series of site data file.

Key	Description
<code>description</code>	Describes data included
<code>unit</code>	Unit of data included
<code>epsg</code>	EPSG code of data spatial reference system
<code>count</code>	Total number of stations
<code>dt</code>	Time step in second

Key	Description
missing-data	Number for missing data value
offsetz	Station height above terrain in meter

A section identified by the keyword `metadata` follows. It marks the beginning of the station metadata information. For each station the user must include, in the order, station name (without blank spaces), station id, easting and northing coordinate, and elevation.

A section identified by the keyword `data` follows. It marks the beginning of time series data. The first line after the `data` keyword is a comment line usually used to recall station id, but any kind of comment can be included here without compromising the simulation. The following lines after the comment line include the date and time of the data, and the list of data acquired by the stations in the same order used to list stations in the metadata section.

Note that time steps must be perfectly regular (no any gap in date and time is allowed) and no any gap (blank space) must be present in data section. When one data is missing, it must be substituted by the missing data value code. Data and strings are separated by one or more blank spaces or tabs. A dot (.) is used as decimal separator.

The next example shows a time series file that contains air temperature data from 3 stations at hourly time step for a total of 24 hours. Coordinate reference system is Monte Mario / Italy zone 1 (epsg code 3003), value for missing data is -999.9 and station height above terrain is 2 m.

```
description = air temperature
unit = degree_Celsius
epsg = 3003
count = 3
dt = 3600 # second
missing-data = -999.9
offsetz = 2 #station height above terrain(m)

metadata
station1 id1 1520147.2 5038191.3 120.4
station2 id2 1538227.4 5003859.6 80.7
station3 id3 1520740.5 5038780.8 120.5

data
time id1 id2 id3
2004-03-27T00:00:00+00:00 6.1 5.7 5.8
2004-03-27T01:00:00+00:00 5.6 5.6 5.5
2004-03-27T02:00:00+00:00 5.7 5.6 5.5
2004-03-27T03:00:00+00:00 5.5 5.4 5.3
2004-03-27T04:00:00+00:00 5.3 5.2 5.2
2004-03-27T05:00:00+00:00 5.4 5.1 5.3
2004-03-27T06:00:00+00:00 5.5 4.9 5.4
2004-03-27T07:00:00+00:00 5.7 -999.9 5.4
2004-03-27T08:00:00+00:00 5.7 -999.9 5.5
2004-03-27T09:00:00+00:00 5.8 5.5 5.7
2004-03-27T10:00:00+00:00 6.6 5.7 6.3
2004-03-27T11:00:00+00:00 7.1 6.5 6.9
2004-03-27T12:00:00+00:00 7.5 7.7 7.3
2004-03-27T13:00:00+00:00 7.9 8.7 7.5
2004-03-27T14:00:00+00:00 8.5 9.3 8.5
2004-03-27T15:00:00+00:00 9.9 9.3 9.6
2004-03-27T16:00:00+00:00 9.7 9.6 9.5
2004-03-27T17:00:00+00:00 9.1 8.8 9.2
2004-03-27T18:00:00+00:00 7.9 7.5 8.4
2004-03-27T19:00:00+00:00 6.8 6.3 8.2
2004-03-27T20:00:00+00:00 6.7 6.1 7.3
2004-03-27T21:00:00+00:00 6.8 6.0 7.2
2004-03-27T22:00:00+00:00 6.9 5.9 7.1
2004-03-27T23:00:00+00:00 6.9 5.7 6.9
```

Example of time series of site data file

1.5 Time series of generic variable

Time series of generic variables, are stored in plain text files. File suffix assigned to the file is usually `.out` (generic time series output), but any suffix is allowed. One file may contain one or more variables of different kind. The time step is regular along one file. The first lines of file contains information about file content, without a specific order or format.

A section identified by the keyword `data` follows. It marks the beginning of time series data. The first line after the `data` keyword is a comment line usually used to mark the content of each column in the file. Data are separated by one or more blank spaces or tabs. A dot (.) is used as decimal separator.

The next example shows a time series file that contains average precipitation and air temperature over the Piave river at Longarone.

```
spatial average values of meteorological variables
extent id: 01
extent name: longarone
extent area (km2):      1328.18872
number of variables:    2

data
DateTime      precipitation_mm  air-temperature_Celsius
2018-10-15T00:00:00+00:00  0.00000E+00      0.34635E+01
2018-10-15T01:00:00+00:00  0.00000E+00      0.35652E+01
2018-10-15T02:00:00+00:00  0.00000E+00      0.33697E+01
2018-10-15T03:00:00+00:00  0.00000E+00      0.35632E+01
2018-10-15T04:00:00+00:00  0.00000E+00      0.38865E+01
2018-10-15T05:00:00+00:00  0.00000E+00      0.39953E+01
2018-10-15T06:00:00+00:00  0.12359E-02      0.41558E+01
2018-10-15T07:00:00+00:00  0.13124E-02      0.46632E+01
2018-10-15T08:00:00+00:00  0.00000E+00      0.53044E+01
2018-10-15T09:00:00+00:00  0.00000E+00      0.61314E+01
2018-10-15T10:00:00+00:00  0.41156E-02      0.64432E+01
2018-10-15T11:00:00+00:00  0.18876E-01      0.67689E+01
2018-10-15T12:00:00+00:00  0.37281E-01      0.63840E+01
```

Example of generic variables time series file

1.6 Tables

Tables are used to organize information with column information in the header and one line of data per record. Tables are stored on plain text files. They are formatted according to a standard that takes inspiration from the ODT file format (http://math.nist.gov/oommf/doc/userguide11b2/userguide/Data_table_format_ODT.html).

Tables can be used within a *ini* configuration file (see Chapter 2) or within a file that contain only tables. In this case, it is recommended that files be given names ending in the file extension `.tab` so that table files can be easily identified. Every file can contain one or more tables. Table may contain an unlimited number of columns and lines. An header and a unit is

associated to each column. Hash (#) indicates the beginning of a comment. Table may contain blank lines.

The lines of a table should be comments, data, or any of the following 5 recognized descriptor tag lines:

- `Table Start`: mandatory, used to mark the beginning of a new table.
- `Title`: optional; everything after the colon is interpreted as a title for the table.
- `Id`: mandatory; an alphanumeric string that define uniquely the table.
- `Columns`: mandatory. One parameter per column, enclosed between two square brackets [].
- `Units`: mandatory. One parameter for each column, enclosed between two square brackets [], giving a unit label for the corresponding column.
- `Table End`: mandatory, no parameters. Should be paired with a corresponding `Table Start` record to mark the end of the table.

Data may appear anywhere after the `Units` descriptor record and before any `Table End` line, with one record per line. The data should be numeric values or string separated by whitespace.

```
Table      Start
Title: This is a small example of table
# This is a sample comment. You can put anything you want
# on comment lines.
Id: type here Id of table      # example of inline comment
Columns:   [header1]          [header2]          [header3]
Units:     [-]                [-]                [m3/s]
           1                  name1             13.2
           2                  name2             10.8
           3                  name3             5.35

# this is a comment: the above line is blank
Table End
```

Example of table

CHAPTER 2

CONFIGURATION

FILES: GENERAL TIPS

Configuration files are used to initialize variables, assign file names, or choose options to run hydrological simulations. Configuration files follow the INI file format. INI files are plain text files with a basic structure composed of sections and subsections, properties, and values.

The basic element contained in an INI file is the key or property. Every key has a name and a value, delimited by an equals sign (=). Order of key-value pairs is arbitrary (i.e. there's no need to pay attention to the position of lines in a file). The name appears to the left of the equals sign:

```
name = value
```

Example of name-value pair

Keys may be grouped into arbitrarily named sections or subsections. The section name appears on a line by itself, in square brackets ([and]). All keys after the section declaration are associated with that section. The subsection name appears on a line by itself, in double square brackets ([[and]]). All keys after the subsection declaration are associated with that subsection. Properties that are declared before any section and subsection are declared are considered "global" properties.

Hash (#) at the beginning or in the middle of the line indicates a comment. Comment lines are ignored.

```
name1 = value
name2 = value
# comment
[section1]
  name1 = value # comment
  name2 = value
  [[subsection]]
    name1 = value
    name2 = value

[section2]
  name1 = value
  name2 = value
  name3 = value
```

Example of INI file with two sections and one subsection and comments.

2.1 Assigning a map as input

A common means to assign maps in FEST configuration files is by setting a section (within square brackets []) or subsection (within double square brackets [[]]) that specifies the file to read, the format and optional properties that change according to the specified format. Supported formats are: `esri-ascii`, `esri-binary`, and `net-cdf`. For `esri-ascii` and `binary` formats, spatial reference system is assigned by setting `epsg` property.

```
[dem] # section named dem defining a map
  file = ./data/dem.asc
  format = esri-ascii
  epsg = 3003
```

Example of section that defines a map in `esri-ascii` format with spatial reference system UTM 32 north wgs84 (EPSG code 3003).

NetCdf is the preferred format when a parameter is assumed to change during simulation time span, like in the case of leaf area index for vegetation, or the snow melt coefficient. When NetCdf format is assigned as input map, different options must or can be assigned in order to properly read the map. The variable to be read can be assigned by variable name (`variable =`) or its standard name (`standard_name =`). The first map to be read can be assigned by specifying a date and time (`time = YYYY-MM-DDThh:mm:ss+hh:mm`) or setting the `sync-initial-time` option (`sync-initial-time = 1`) that automatically sets the proper map to be read according to the simulation starting date and time.


```
[lai] # leaf area index map
      file = ./data/lai.nc
      format = net-cdf
      variable = lai
      epsg = 3003
      sync-initial-time = 1
```

Example of section that defines a map in net-cdf format with spatial reference system UTM 32 north wgs84 (EPSG code 3003), and lai as name of variable to be read. The date and time of the first map to be read is automatically assigned by the model (`sync-initial-time = 1`)

For some parameters an option to set a constant value for the entire simulation domain is to use the `scalar` keyword, as in the example below.

```
[hydraulic-conductivity]
      scalar = 0.00001
```

Example of section that defines a map with a constant value. Spatial extent and reference system is inherited from the reference ones assigned to the simulation run.

Parameter map values can be modified with `scale_factor` and `offset` keywords. The keyword `scale_factor` is used to multiply all cells value by a numerical factor. The keyword `offset` is used to add (or subtract) a fixed value to all cells value. Keywords `valid_min` and `valid_max` can be used optionally to bound the resulting values to a minimum and a maximum value.

```
[hydraulic-conductivity]
      file = ./data/ksat.asc
      format = esri-ascii
      epsg = 3003
      scale_factor = 0.1
```

Example of section that defines the map of hydraulic conductivity from a file in esri-ascii format. Values are multiplied by 0.1 (one order of magnitude reduction).

```
[curve-number]
  file = ./data/cn.asc
  format = esri-ascii
  epsg = 3003
  offset = 10
  valid_max = 100
```

Example of section that defines the map of curve number from a file in esri-ascii format. The value 10 is added to all cells value. The maximum value the curve number can reach is set to 100 (valid_max = 100).

CHAPTER 3

THE MAIN CONFIGURATION FILE

This file sets the main parameters for running a simulation such as the starting and ending date and time, the modules to be activated, the results to be put in output files, etc.... The name of the file is chosen by user but, usually, the name `fest.ini` is assigned. The file includes a list of sections, mandatory or optional, that configure a specific module of FEST model. An example of main configuration file is shown below.

```
#set start and stop time. Always use UTC. MANDATORY
[time]
  start = 2005-01-01-00:00:00+00:00
  stop  = 2022-08-31-23:00:00+00:00

# set folder for writing results. MANDATORY
# ./folder/ example for setting a folder
# ./folder/prefix_ append a prefix (prefix_) to all output files
[result]
  folder = ./results/sim0_

# simulation mask and general domain properties. MANDATORY
[domain]
  conf-file = ./conf/domain.ini

# set morphological properties. OPTIONAL
[morphology]
  conf-file = ./conf/morphology.ini

# meteorological forcings. MANDATORY
[meteo]
  dt = 3600
  conf-file = ./conf/meteo.ini
  dt-out-spatial = 3600
  out-point-file = ./conf/point_meteo.fts

# plants simulation. OPTIONAL
[plants]
  dt = 0
  conf-file = ./conf/plants.ini

#snow accumulation and melting. OPTIONAL
[snow]
  dt = 3600
  conf-file = ./conf/snow.ini
  dt-out-spatial = 3600

#soil balance. OPTIONAL
[soil-balance]
  dt = 3600
  conf-file = ./conf/soil-balance.ini
  dt-out-spatial = 3600

#configure spatial average output. OPTIONAL
[spatial-average]
  conf-file = ./conf/spatial_average.ini

#discharge routing on hillslope,rivers, and lakes. OPTIONAL
[discharge-routing]
  dt = 900
  conf-file = ./conf/discharge-routing.ini
  out-point-file = ./conf/discharge_out.fts
```

Example of main configuration file for running a simulation. In this example, all configuration files are stored in `conf` subfolder.

3.1 Time

This mandatory section, marked by `[time]`, sets the starting and ending date and time of simulation. Keywords to be set are listed in the following table.

Table 3.1. Definition of keywords to set simulation time.

Keyword	Description	Requirements
<code>[time]</code>	Marks the beginning line of time section	mandatory
<code>start</code>	Starting date and time of simulation formatted according to ISO 8601 specifications in UTC time zone.	mandatory
<code>stop</code>	Ending date and time of simulation formatted according to ISO 8601 specifications in UTC time zone.	mandatory

The following example sets the starting time of simulation at `2005-01-01-00:00:00+00:00` and ending time at `2022-08-31-23:00:00+00:00`.

```
#set start and stop time. Always use UTC. MANDATORY
[time]
  start = 2005-01-01-00:00:00+00:00
  stop  = 2022-08-31-23:00:00+00:00
```

Example of `[time]` section configuration within the main configuration file

3.2 Result

This mandatory section, marked by `[result]`, sets the folder where to save output files of simulation results. Keywords to be set are listed in the following table.

Table 3.2. Definition of keywords to set result folder.

Keyword	Description	Requirements
[result]	Marks the beginning line of <code>result</code> section	mandatory
folder	Sets folder name to write results. A prefix to be appended to all files can be set as in the example: <code>folder = ./results/sim0_</code> Use <code>folder = ./results/</code> instead, to leave prefix blank	mandatory

The following example sets the folder `output` for storing result files. This example uses the relative path nomenclature to specify the result folder as a subfolder of the current directory. The prefix `sim0_` is appended at the beginning of output files. For understanding how output files are named see the specific sections.

```
# set folder for writing results. MANDATORY
# ./folder/ example for setting a folder
# ./folder/prefix_ append a prefix (prefix_) to all output files
[result]
  folder = ./output/sim0_
```

Example of [result] section configuration within the main configuration file

3.3 Domain

This mandatory section, marked by [domain], sets the file to configure simulation domain. Keywords to be set are listed in the following table.

Table 3.3. Definition of keywords to set simulation domain configuration file.

Keyword	Description	Requirements
[domain]	Marks the beginning line of <code>domain</code> section	mandatory
conf-file	Sets the name of configuration file	mandatory

The following example sets the file `./conf/domain.ini` for configuring simulation domain.

```
# simulation mask and general domain properties. MANDATORY
[domain]
  conf-file = ./conf/domain.ini
```

Example of [domain] section configuration within the main configuration file

3.4 Morphology

This optional section, marked by `[morphology]`, sets the file to configure morphological properties. Keywords to be set are listed in the following table.

Table 3.4. Definition of keywords to set the file to configure morphological properties.

Keyword	Description	Requirements
<code>[morphology]</code>	Marks the beginning line of morphology section	optional
<code>conf-file</code>	name of configuration file	mandatory

The following example sets the file `./conf/morphology.ini` for configuring morphological properties.

```
#set morphological properties. OPTIONAL
[morphology]
conf-file = ./conf/morphology.ini
```

Example of `[morphology]` section configuration within the main configuration file

3.5 Meteo

This mandatory section, marked by `[meteo]`, sets parameters for configuring meteorological forcings management. Keywords to be set are listed in the following table.

Table 3.5. Definition of keywords to set parameters for configuring meteorological forcings.

Keyword	Description	Requirements
<code>[meteo]</code>	Marks the beginning line of meteo section	mandatory
<code>dt</code>	time step for new data reading (s)	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>dt-out-spatial</code>	Time step for writing spatial average data (s). If section is not present or <code>dt-out-spatial = 0</code> , output files are not created and data are not exported.	optional
<code>out-point-file</code>	File that contains coordinate of points for exporting site data. It is a plain text file in time series format with only the metadata section (see example below). The time step defined in the file, sets the export time step (s). If file is not assigned, data are not exported. List of	optional

Keyword	Description	Requirements
	created files in Table 3.6	

Table 3.6. Name of files created for exporting sites meteorological data. The folder assigned in [result] section (see 3.2) is appended to the name of file as a prefix.

Variable	File name
Precipitation	<folder> point_precipitation.fts
Air temperature	<folder> point_temperature.fts
Solar radiation	<folder> point_radiation.fts
Air relative humidity	<folder> point_RH.fts
Wind speed	<folder> point_WS.fts

The following example sets the file `./conf/meteo.ini` for configuring meteorological forcings, a time step for reading data = 3600, a time step for exporting spatial average data = 3600, and sets the file `./conf/point_meteo.fts` for listing the coordinate of points to export site data. A new file is created for each meteorological variable used in the simulation run with file name listed in Table 3.6

```
# meteorological forcings. MANDATORY
[meteo]
dt = 3600
conf-file = ./conf/meteo.ini
dt-out-spatial = 3600
out-point-file = ./conf/point_meteo.fts
```

Example of [meteo] section configuration within the main configuration file

The following is an example of `out-point-file` for exporting data in five sites with time step of 3600 s. Keywords `unit` and `offsetz` are not used by the process but they must exist for adhering to standard time series data format.


```

description = points coordinate for meteo data export
unit = -
epsg = 32632
count = 5
dt = 3600
missing-data = -999.9
offsetz = 2

metadata
site1      01  614452.00  5066300.00  0.00
site2      02  612452.00  5048300.00  0.00
site3      03  609952.00  5022550.00  0.00
site4      04  610702.00  5008550.00  0.00
site5      05  613702.00  5065550.00  0.00

```

Example of out-point-file

3.6 Plants

This optional section, marked by `[plants]`, sets parameters to configure plants properties and simulation. Keywords to be set are listed in the following table.

Table 3.7. Definition of keywords to set parameters to configure plants properties and simulation.

Keyword	Description	Requirements
<code>[plants]</code>	Marks the beginning line of <code>plants</code> section	optional
<code>dt</code>	time step for computation (s). If <code>dt = 0</code> , parameters are kept constant; if <code>dt > 0</code> , parameters are updated in time with a simulation.	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>dt-out-spatial</code>	Time step for writing spatial average data (s). If section is not present or <code>dt-out-spatial = 0</code> , output files are not created and data are not exported.	optional

The following example sets the file `./conf/plants.ini` for configuring plants properties that are kept constant in time (`dt = 0`).

```
# plants simulation. OPTIONAL
[plants]
  dt = 0
  conf-file = ./conf/plants.ini
```

Example of [plants] section configuration within the main configuration file

3.7 Snow

This optional section, marked by [snow], sets parameters for configuring snow simulation (accumulation and melting). Keywords to be set are listed in the following table.

Table 3.8. Definition of keywords to set parameters for configuring snow simulation.

Keyword	Description	Requirements
[snow]	Marks the beginning line of snow section	optional
dt	time step for computation (s)	mandatory
conf-file	name of configuration file	mandatory
dt-out-spatial	Time step for writing spatial average data (s). If section is not present or dt-out-spatial = 0, output files are not created and data are not exported.	optional
out-point-file	File that contains coordinate of points for exporting site snow water equivalent data. It is a plain text file in time series format with only the metadata section (see example in 3.5). The time step defined in the file, sets the export time step (s). If file is not assigned, data are not exported. Name of file created: <folder> point_swe.fts	optional

The following example sets the file ./conf/snow.ini for configuring snow simulation, a time step for computing = 3600, and a time step for exporting spatial average data = 3600.

```
#snow accumulation and melting. OPTIONAL
[snow]
  dt = 3600
  conf-file = ./conf/snow.ini
  dt-out-spatial = 3600
```

Example of [snow] section configuration within the main configuration file

3.8 Glacier

This optional section, marked by `[glacier]`, sets parameters for configuring glacier simulation (accumulation and ablation). Keywords to be set are listed in the following table.

Table 3.9. Definition of keywords to set parameters for configuring glacier simulation.

Keyword	Description	Requirements
<code>[glacier]</code>	Marks the beginning line of <code>snow</code> section	optional
<code>dt</code>	time step for computation (s)	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>dt-out-spatial</code>	Time step for writing spatial average data (s). If section is not present or <code>dt-out-spatial = 0</code> , output files are not created and data are not exported.	optional
<code>out-point-file</code>	File that contains coordinate of points for exporting site snow water equivalent data. It is a plain text file in time series format with only the metadata section (see example in 3.5). The time step defined in the file, sets the export time step (s). If file is not assigned, data are not exported. Name of file created: <code><folder>point_swe.fts</code>	optional

The following example sets the file `./conf/glacier.ini` for configuring glacier simulation, a time step for computing = 3600, and a time step for exporting spatial average data = 3600.

```
#glacier accumulation and ablation. OPTIONAL
[glacier]
  dt = 3600
  conf-file = ./conf/glacier.ini
  dt-out-spatial = 3600
```

Example of `[glacier]` section configuration within the main configuration file

3.9 Soil water balance

This optional section, marked by `[soil-balance]`, sets parameters for configuring snow water balance simulation. Keywords to be set are listed in the following table.

Table 3.10. Definition of keywords to set parameters for configuring soil water balance simulation.

Keyword	Description	Requirements
[soil-balance]	Marks the beginning line of <code>soil-balance</code> section	optional
<code>dt</code>	time step for computation (s)	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>dt-out-spatial</code>	Time step for writing spatial average data (s). If section is not present or <code>dt-out-spatial = 0</code> , output files are not created and data are not exported.	optional

The following example sets the file `./conf/soil-balance.ini` for configuring soil water balance simulation, a time step for computing = 3600, and a time step for exporting spatial average data = 3600.

```
#soil balance. OPTIONAL
[soil-balance]
dt = 3600
conf-file = ./conf/soil-balance.ini
dt-out-spatial = 3600
```

Example of [soil-balance] section configuration within the main configuration file

3.10 Discharge routing

This optional section, marked by [discharge-routing], sets parameters for configuring discharge routing. Keywords to be set are listed in the following table.

Table 3.11. Definition of keywords to set parameters for configuring discharge routing.

Keyword	Description	Requirements
[discharge-routing]	Marks the beginning line of <code>discharge-routing</code> section	optional
<code>dt</code>	time step for computation (s)	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>out-point-file</code>	File that contains coordinate of points for exporting river discharge data at selected sections. It is a plain text file in time series format with only the metadata section (see example in 3.5). The time step defined in the file, sets the export time step (s). If file is not	optional

Keyword	Description	Requirements
	assigned, data are not exported. Name of file created: <folder>point_discharge.fts	

The following example sets the file `./conf/discharge-routing.ini` for configuring discharge routing, a time step for computing = 900, and sets the file `./conf/discharge_out.fts` for listing the coordinate of points to export data at selected sections.

```
# discharge routing on hillslope, rivers, and lakes. OPTIONAL
[discharge-routing]
  dt = 900
  conf-file = ./conf/discharge-routing.ini
  out-point-file = ./conf/discharge_out.fts
```

Example of [discharge-routing] section configuration within the main configuration file

3.11 Groundwater

This optional section, marked by [groundwater], sets parameters for configuring discharge routing. Keywords to be set are listed in the following table.

Table 3.12. Definition of keywords to set parameters for configuring groundwater.

Keyword	Description	Requirements
[groundwater]	Marks the beginning line of groundwater section	optional
dt	time step for computation (s)	mandatory
conf-file	name of configuration file	mandatory
out-point-file	File that contains coordinate of points for exporting groundwater head data at selected sites. It is a plain text file in time series format with only the metadata section (see example in 3.5). The time step defined in the file, sets the export time step (s). If file is not assigned, data are not exported. One file is created for each of n simulated aquifer. Name of file created: <folder>point_aquifer_<i>.fts with i=1,n	optional
dt-out-aquifer	Time step for writing average data (s). If section is not present or dt-out-aquifer = 0, output file are not created and data are not exported. Name of file	optional

Keyword	Description	Requirements
	created: <folder>aquifer.out	

The following example sets the file `./conf/groundwater.ini` for configuring groundwater simulation, a time step for computing = 3600, and sets the file `./conf/point_groundwater.fts` for listing the coordinate of points to export data at selected sites. Results are written every hour.

```
#configure groundwater simulation. OPTIONAL
[groundwater]
dt = 3600
conf-file = ./conf/groundwater.ini
out-point-file = ./conf/point_groundwater.fts
dt-out-aquifer = 3600
```

Example of `[groundwater]` section configuration within the main configuration file

3.12 Spatial average

This optional section, marked by `[spatial-average]`, sets the configuration file for exporting spatial average data. Keywords to be set are listed in the following table.

Table 3.13. Definition of keywords to set the configuration file for exporting spatial average data.

Keyword	Description	Requirements
<code>[spatial-average]</code>	Marks the beginning line of <code>spatial-average</code> section	optional
<code>conf-file</code>	name of configuration file	mandatory

The following example sets the file `./conf/spatial-average.ini` for configuring exporting of spatial average data.

```
#configure spatial average output. OPTIONAL
[spatial-average]
conf-file = ./conf/spatial_average.ini
```

Example of `[spatial-average]` section configuration within the main configuration file

3.13 Irrigation

This optional section, marked by `[irrigation]`, sets parameters for configuring water derivation from rivers and distribution to irrigation districts. Keywords to be set are listed in the following table.

Table 3.14. Definition of keywords to set parameters for configuring irrigation.

Keyword	Description	Requirements
<code>[irrigation]</code>	Marks the beginning line of <code>irrigation</code> section	optional
<code>dt</code>	time step for updating irrigation values (s)	mandatory
<code>conf-file</code>	name of configuration file	mandatory
<code>dt-out</code>	time step for writing into output file. It must be equal to or a multiple of <code>dt</code>	mandatory

The following example sets the file `./conf/intakes.ini` for configuring irrigation, a time step for updating values to 3600 s, as well as the time step for exporting data.

```
# irrigation management. OPTIONAL
[irrigation]
dt = 3600 # time step for new update (s)
conf-file = ./conf/intakes.ini #configuration file
dt-out = 3600 # time step for exporting data (s)
```

Example of `[irrigation]` section configuration within the main configuration file

3.14 Basin average

This optional section, marked by `[basin-average]`, sets the configuration file for exporting average values over river basins given by the coordinate of outlet section. Keywords to be set are listed in the following table.

Table 3.15. Definition of keywords to set the configuration file for exporting basin average data.

Keyword	Description	Requirements
<code>[basin-average]</code>	Marks the beginning line of <code>basin-average</code> section	optional
<code>conf-file</code>	name of configuration file	mandatory
<code>out-</code>	File that contains coordinate of points for exporting basin	mandatory

Keyword	Description	Requirements
point-file	average data at selected sections. It is a plain text file in time series format with only the metadata section (see example in 3.5). The time step defined in the file, sets the export time step (s). For name of created files see Chapter 15.	

The following example sets the file `./conf/basin-average.ini` for configuring exporting of basin average data for basin outlets listed in `./conf/basin_out.fts` file.

```
#configure basin average output. OPTIONAL
[basin-average]
conf-file = ./conf/basin-average.ini
out-point-file = ./conf/basin_out.fts
```

Example of `[basin-average]` section configuration within the main configuration file

3.15 Raster exporting

This optional section, marked by `[raster-export]`, sets the configuration file for exporting raster maps of a list of variables. Keywords to be set are listed in the following table.

Table 3.16. Definition of keywords to set the configuration file for exporting raster maps.

Keyword	Description	Requirements
<code>[raster-export]</code>	Marks the beginning line of <code>raster-export</code> section	optional
<code>conf-file</code>	name of configuration file	mandatory

The following example sets the file `./conf/raster-export.ini` for configuring exporting of raster maps.

```
#configure variables for raster export. OPTIONAL
[raster-export]
conf-file = ./conf/raster-export.ini
```

Example of `[raster-export]` section configuration within the main configuration file

CHAPTER 4

SETTING DOMAIN PROPERTIES

This file sets general properties of analysis domain (whether a river basin, crop fields, etc.). Variables to be set are listed in the following table.

Table 4.1. Definition of keywords to set domain properties.

Keyword	Description	Requirements
[mask]	this map sets the domain of simulation and coordinate reference system. All new variables created at runtime use mask as reference grid. All maps must have the same extent and coordinate reference system of mask, unless differently specified.	mandatory
[albedo]	Ground albedo	optional
[land-cover]	Land cover map according to level 3 Corine project classification.	optional

The following example sets mask and albedo of a river basin stored in ESRI-ASCII grid format using UTM 32N datum ED50 as coordinate reference system (epsg code 23032) .

```
# set domain properties

[mask]
file = ./data/mask.asc
format = esri-ascii
epsg = 23032

[albedo]
file = ./data/albedo.asc
format = esri-ascii
epsg = 23032
```

Table 4.2. Corine land cover classes.

Level 1	Level 2	Level 3
1. ARTIFICIAL SURFACES	1.1 Urban fabric	1.1.1 Continuous urban fabric 1.1.2 Discontinuous urban fabric
	1.2 Industrial, commercial and transport units	1.2.1 Industrial or commercial units
		1.2.2 Road and rail networks and associated land
		1.2.3 Port areas
		1.2.4 Airports
	1.3 Mine, dump and construction sites	1.3.1 Mineral extraction sites
		1.3.2 Dump sites
		1.3.3 Construction sites
	1.4 Artificial, non-agricultural vegetated areas	1.4.1 Green urban areas
		1.4.2 Sport and leisure facilities
2. AGRICULTURAL AREAS	2.1 Arable land	2.1.1 Non-irrigated arable land
		2.1.2 Permanently irrigated land
		2.1.3 Rice fields
	2.2 Permanent crops	2.2.1 Vineyards
		2.2.2 Fruit trees and berry plantations
		2.2.3 Olive groves
	2.3 Pastures	2.3.1 Pastures
	2.4 Heterogeneous agricultural areas	2.4.1 Annual crops associated with permanent crops
		2.4.2 Complex cultivation patterns
		2.4.3 Land principally occupied by agriculture, with significant areas of natural vegetation
2.4.4 Agro-forestry areas		
3. FOREST AND SEMI NATURAL AREAS	3.1 Forests	3.1.1 Broad-leaved forest
		3.1.2 Coniferous forest
		3.1.3 Mixed forest
	3.2 Scrub and/or herbaceous vegetation associations	3.2.1 Natural grasslands
		3.2.2 Moors and heathland
		3.2.3 Sclerophyllous vegetation
		3.2.4 Transitional woodland-shrub
	3.3 Open spaces with little or no vegetation	3.3.1 Beaches, dunes, sands
		3.3.2 Bare rocks
		3.3.3 Sparsely vegetated areas
	3.3.4 Burnt areas	

		3.3.5 Glaciers and perpetual snow
4. WETLANDS	4.1 Inland wetlands	4.1.1 Inland marshes
		4.1.2 Peat bogs
	4.2 Maritime wetlands	4.2.1 Salt marshes
		4.2.2 Salines
		4.2.3 Intertidal flats
5. WATER BODIES	5.1 Inland waters	5.1.1 Water courses
		5.1.2 Water bodies
	5.2 Marine waters	5.2.1 Coastal lagoons
		5.2.2 Estuaries
		5.2.3 Sea and ocean

Details about Corine land cover classification can be found here:
<https://land.copernicus.eu/user-corner/technical-library/corine-land-cover-nomenclature-guidelines/html>.

CHAPTER 5

MORPHOLOGICAL PROPERTIES

This file sets morphological properties of investigated domain. In this file the user can set 3 maps (digital elevation model, flow direction and flow accumulation) as listed in the following table. When flow direction map is assigned, the flow direction convention among ESRI and GRASS must be specified.

Table 5.1. Definition of maps to be set as morphological properties.

Keyword	Description	Requirements
[dem]	Digital elevation model map	optional
[flow-direction]	Flow direction map according to D8 approach (Figure 5.1)	optional
flow-direction-convention	Set flow direction conventions choosing among ESRI (NW=32, N=64, NE=128, W=16, E=1, SW=8, S=4, SE=2) and GRASS (NW=3, N=2, NE=1, W=4, E=8, SW=5, S=6, SE=7)	Required by [flow-direction]
[flow-accumulation]	Flow accumulation map in number of cells	optional

There are eight valid output directions relating to the eight adjacent cells into which flow could travel. This approach is commonly referred to as an eight-direction (D8) flow model and follows an approach presented in Jenson and Domingue (1988).

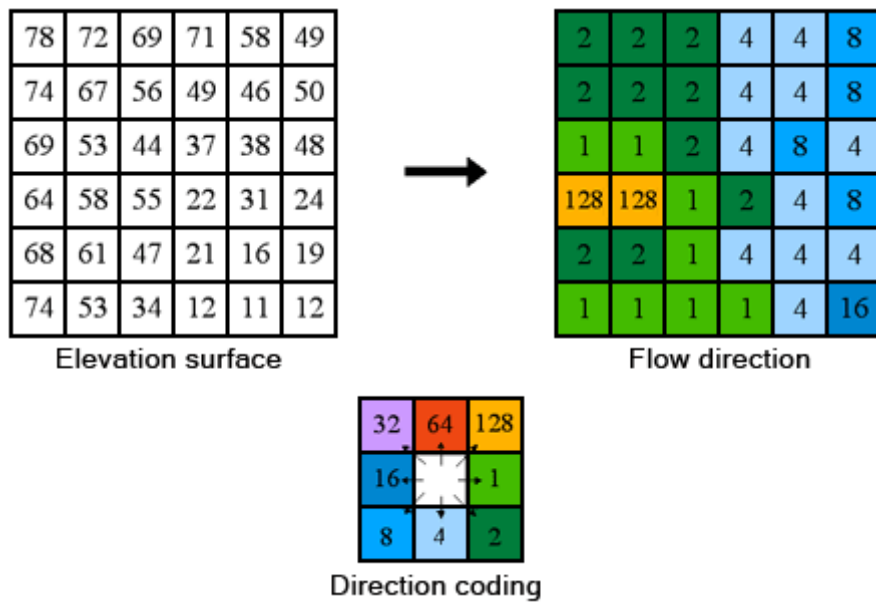


Figure 5.1 The coding of the direction of flow according to ESRI convention. (source: <https://pro.arcgis.com/en/pro-app/latest/tool-reference/spatial-analyst/how-flow-direction-works.htm>)

When the optional section `[stream-network]` is present in the morphological properties configuration file, the topology of river network is created starting from information of elevation, and flow direction. This information is used when computation cannot be performed on a raster in arbitrary order, like for river discharge routing that requires to start from source nodes and going on till the basin outlet following the Horton stream order topology. The stream network is space filling that means that every single cell of the domain is crossed by a reach. The keywords for setting stream network delineation are listed in the following table.

Table 5.2. Keywords for setting stream network delineation.

Keyword	Description	Requirements
<code>[stream-network]</code>	marks the beginning of section	optional
<code>max-reach-length</code>	maximum reach length value [m]. When a reach longer than this value is detected it is split in sub-reaches so that they are lower than maximum	Optional. When keyword is missing, reaches are not split whatever their length is.
<code>negative-slope-</code>	While computing the reach	Optional. The correction

Keyword	Description	Requirements
correction	slope, when a negative slope is found, it is corrected with this value. Unit is m/m.	prevents that run-time error occurs when discharge routing is computed. When keyword is missing, negative values are left unchanged.
file-export	A plain text file is exported with topology information	Optional. Possible values: 1=export file, 0=do not export file. When keyword is missing file is not written.
shp-export	A line vector shape file is created with reaches and	Optional. Possible values: 1=export file, 0=do not export file. When keyword is missing file is not written. This option is available only on Windows operating system machines

The following example sets digital elevation model, flow direction, and flow accumulation maps stored in ESRI-ASCII grid format using UTM 32N datum ED50 as coordinate reference system (epsg code 23032) . Stream network is derived from dem and flow direction with a constraint on the maximum length of single reach of 2000 m, negative values of reach slope are corrected to 0.0005 m/m. No any files are written.

```
# set morphological properties

[dem]
  file = ./data/dem.asc
  format = esri-ascii
  epsg = 23032

[flow-direction]
  file = ./data/flowdir.asc
  format = esri-ascii
  epsg = 23032
  flow-direction-convention = esri

[flow-accumulation]
  file = ./data/flowacc.asc
  format = esri-ascii
  epsg = 23032

[stream-network]
  max-reach-length = 2000
  negative-slope-correction = 0.0005
  file-export = 0
  shp-export = 0
```


CHAPTER 6

METEO

CONFIGURATION FILE

Two formats for input meteorological forcing time series are accepted: at site data measured by weather stations and raster dataset generally coming from weather prediction or climatic models. Variables that may be configured in meteo configuration file, and related section name, are listed as follows:

- precipitation with arbitrary time cumulation [precipitation],
- daily cumulated precipitation [precipitation-daily],
- subdaily air temperature averaged over arbitrary time [temperature],
- daily averaged air temperature [temperature-daily-mean],
- daily minimum air temperature [temperature-daily-min],
- daily maximum air temperature [temperature-daily-max],
- wind speed [windspeed],
- solar radiation [solar-radiation],
- air relative humidity [relative-humidity].

When one section is missing (or commented out with # character) that variable is not initialized in FEST simulation run. Definition of precipitation with sub-daily or daily time cumulation in the same simulation is useful when user needs to run simulation at sub-daily time scale and, contemporary, export daily precipitation maps. In this case daily cumulated precipitation does not affect simulation results because it is only used for reporting purposes. Definition of daily and subdaily air temperature in the same simulation is useful when user needs to run simulations that require different time discretization of input temperature. For instance this is the case when user is running a simulation with snow module activated that requires subdaily time step and has chosen the Hargreaves-Samani method to compute

potential evapotranspiration that requires daily time step. In this case daily maximum and minimum air temperature are required as well.

No any global properties, i.e. out of any section, are required in this file.

Some features are common to all meteorological variables. Three interpolation methods are available:

1. Thiessen polygons (id = 1)
2. Inverse distance weighting (IDW, id = 2)
3. Ordinary kriging (id = 3)

Interpolation method over a domain can be set in two ways. The first way implies to use only one method all over the domain (`interpolation-assignment = 1`). In this case, interpolation method is set by interpolation keyword (`interpolation = 1` for Thiessen, `interpolation = 2` for IDW, `interpolation = 3` for kriging).

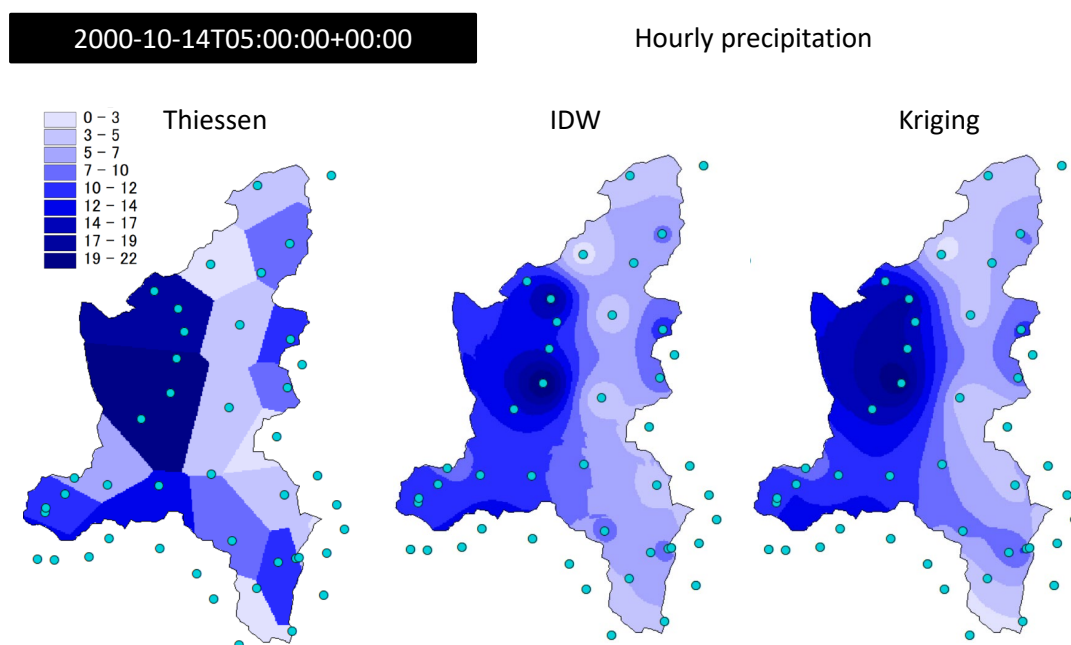


Figure 6.1 Hourly precipitation data measured on 2000-10-14T05:00:00+00:00 over the Toce river basin (Italy) interpolated with Thiessen, IDW, and Kriging methods.

A fourth option (`interpolation = 0`) is set when input data are provided in forms of netCDF maps (for example coming from weather prediction models). In this case there's no need to interpolate site data but some adjustments are applied by FEST in order to match spatial resolution and coordinate reference system of the analysis (coordinate conversion and nearest neighbours sampling are used for these purposes).

The second way to interpolate station data implies to use a different methods for each subareas of the domain (`interpolation-assignment = 2`). In this case a map is

provided (set in `[[interpolation]]` sub-section) that sets for each cell the id of interpolation method among the three available (1 = Thiessen, 2 = IDW, 3 = Kriging). Virtually every cell may have an interpolation method associated that differs from the ones of the surrounding cells.

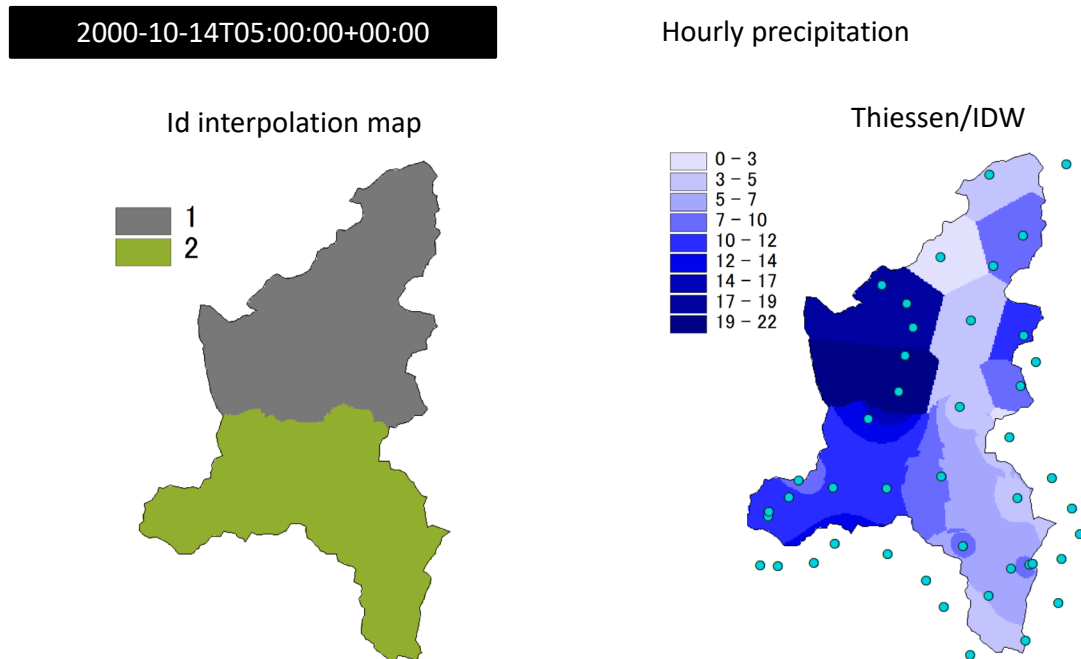


Figure 6.2 Hourly precipitation data measured on 2000-10-14T05:00:00+00:00 over the Toce river basin (Italy) interpolated with Thiessen (id = 1) and IDW (id = 2). Left map shows spatial distribution of interpolation Id.

When an interpolation method is activated, whether by an id map or by `interpolation =` keyword, specific parameters may be required or set as option by the user.

Meteorological maps can be exported to files by setting `export = 1`.

6.1 Precipitation with arbitrary time cumulation

This section is defined by `[precipitation]` in meteo configuration file. Unit of input data is mm cumulated in dt. The definitions of the keywords are reported in the Table below. Where not specified as MANDATORY, keywords are assumed to be optional.

Table 6.1. Definition of keywords in precipitation section of meteo configuration file.

Keyword	Description	Requirements
<code>[[interpolation]]</code>	map with interpolation method codes	Used when <code>interpolation-assignment = 2</code>

Keyword	Description	Requirements
[[lapse-rate-map]]	Map (or series of maps in netcdf format) used to assign lapse rate	CRS and spatial resolution must be the same of mask
dt	Cumulation time [s]	Integer greater than 0. MANDATORY
elevation-drift	Option to apply elevation based correction (lapse rate)	1 = use elevation to interpolate (requires definition of [[dem]]), 0 = no
export	activate grid exporting	1 = export interpolated grid, 0 = do not export interpolated grid MANDATORY
export-dt	time between two exportations (s)	Integer greater than 0
export-epsg	epsg of coordinate reference system of exported grid	Integer. List of accepted values in Section 1.2
export-format		1 = esri_ascii, 2 = esri_binary, 3 = netcdf Integer among 1-3
export-path	folder where to put exported grids	string
export-start	time and date to start exporting	Date and time according to the International Standard ISO 8601 specifications
export-stop	time and date to stop exporting	Date and time according to the International Standard ISO 8601 specifications
file	File that contains data to read	MANDATORY
idw-power	power to be used with idw,	When missing, default = 2.
interpolation	Interpolation method when interpolation-assignment = 1	1 = thiessen, 2 = inverse distance weight (idw), 3 = kriging, 0 = read interpolated field
interpolation-	Defines the way of	1 = one method for the entire

Keyword	Description	Requirements
assignment	interpolation	domain, 2 = a map with interpolation method codes assigned by subsection [[interpolation]]. MANDATORY
kriging-anisotropy	Whether to include anisotropy when fitting semivariogram model	1 = considers anisotropy, default = 0 excludes anisotropy
kriging-lags	number of lag bins for semivariogram	if undefined or set to 0 default to 15
kriging-maxlag	Limit distance (m) to be considered for semivariogram assessment	If undefined or set to 0, it is computed automatically
kriging-variance	Option to export to file variance map associated to kriging interpolation	Set to 1 to export variance, 0 to suppress it. When missing Default = 0
kriging-variogram-model	Semivariogram model to fit for kriging interpolation. When automatic fitting is chosen, the best among spherical and exponential is chosen.	1 = spherical, 2 = exponential, 3 = gaussian, 0 = automatic fitting. default to 2
lapse-rate-assignment	Method to assign lapse rate for elevation based correction	1 = one scalar for the entire domain, 2 = a map that may change in time. Requires the definition of subsection [[lapse-rate-map]]
lapse-rate-scalar	Lapse rate to use for elevation based correction (mm/m)	Real number greater than 0 when variable increase with elevation
nearest-points	number of nearest points to be considered for interpolation	Mandatory for kriging and idw
offset	Add an offset (mm)	Real number greater than zero if variable increase is required, lower than zero if

Keyword	Description	Requirements
		decrease is required.
scale-factor	Apply a scale factor (multiplicative). May be used for unit conversion or for model calibration. It is applied after elevation based correction	real number, optional
standard_name	Standard name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read
valid-threshold	minimum percentage of valid data that must be present to consider valid the aggregated value, when data from several time steps are read.	Percentage (0-1). When it is missing default is 1 that means that all values have to be valid to compute aggregation.
variable	Name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read

The following example uses the minimum number of mandatory keys. It sets the interpolation of data from the file precipitation.txt using thiessen polygon method without drift and grid exportation.

```
[precipitation]
dt = 3600
file = ./meteo/precipitation.txt
interpolation-assignment = 1
interpolation = 1
elevation-drift = 0
export = 0
```

The next example requires to interpolate data using Kriging without anisotropy. Variogram model is automatically chosen, and number of lags, and maximum distance to be considered for semi-variogram assessment are computed automatically, as well. Elevation drift is used during interpolation, with a lapse rate of 0.01 mm/h/m. Interpolated maps of precipitation and variance are exported hourly in netCDF format in subfolder

./risultati/precipitation_grid, from date 2014-07-07T00:00:00+00:00 to date 2014-07-10T00:00:00+00:00.

```
[precipitation]
dt = 3600
file = ./meteo/precipitation.txt
interpolation-assignment = 1
interpolation = 3
kriging-variance = 1
kriging-anisotropy = 0
kriging-variogram-model = 0
kriging-lags = 0
kriging-maxlag = 0
elevation-drift = 1
lapse-rate-assignment = 1
lapse-rate-scalar = 0.01
export = 1
export-path = ./risultati/precipitation_grid
export-start = 2014-07-07T00:00:00+00:00
export-stop = 2014-07-10T00:00:00+00:00
export-dt = 3600
export-format = 3
export-epsg = 3003
```

6.2 Daily precipitation

Daily precipitation properties are set in section [precipitation-daily]. This section is similar to [precipitation] section except dt that is not required. Having both [precipitation] and [precipitation-daily] configured in one simulation is useful when user needs to run simulation at sub-daily time scale and, at the same time, export daily precipitation maps.

6.3 Subdaily air temperature averaged over arbitrary time

This section is defined by [temperature] in meteo configuration file. Unit of input data is degree Celsius. Degree Kelvin data can be used as long as offset is applied in order to convert data to degree Celsius unit (see examples below). The definitions of the keywords are reported in the Table below. Where not specified as MANDATORY, keywords are assumed to be optional. Setting occurs similarly to precipitation data. A specific option of temperature data, not available in precipitation section for example, is set in order to compute vertical lapse rate from station data.

Table 6.2. Definition of keywords in temperature section of meteo configuration file.

Keyword	Description	Requirements
[[interpolation]]	map with interpolation method codes	Used when interpolation-assignment = 2
[[lapse-rate-map]]	Map (or series of maps in netcdf format) used to assign lapse rate	CRS and spatial resolution must be the same of mask
dt	Cumulation time [s]	Integer greater than 0. MANDATORY
elevation-drift	Option to apply elevation based correction (lapse rate)	1 = use elevation to interpolate (requires definition of [[dem]]), 0 = no
export	activate grid exporting	1 = export interpolated grid, 0 = do not export interpolated grid MANDATORY
export-dt	time between two exportations (s)	Integer greater than 0
export-epsg	epsg of coordinate reference system of exported grid	Integer. List of accepted values in Section 1.2
export-format	1 = esri_ascii, 2 = esri_binary, 3 = netcdf	Integer among 1-3
export-path	folder where to put exported grids	string
export-start	time and date to start exporting	Date and time according to the International Standard ISO 8601 specifications
export-stop	time and date to stop exporting	Date and time according to the International Standard ISO 8601 specifications
file	File that contains data to read	MANDATORY
idw-power	power to be used with idw,	When missing, default = 2.
interpolation	Interpolation method when interpolation-assignment = 1	1 = thiessen, 2 = inverse distance weight (idw), 3 =

Keyword	Description	Requirements
		kriging, 0 = read interpolated field
interpolation-assignment	Defines the way of interpolation	1 = one method for the entire domain, 2 = a map with interpolation method codes assigned by subsection [[interpolation]]. MANDATORY
kriging-anisotropy	Whether to include anisotropy when fitting semivariogram model	1 = considers anisotropy, default = 0 excludes anisotropy
kriging-lags	number of lag bins for semivariogram	if undefined or set to 0 default to 15
kriging-maxlag	Limit distance (m) to be considered for semivariogram assessment	If undefined or set to 0, it is computed automatically
kriging-variance	Option to export to file variance map associated to kriging interpolation	Set to 1 to export variance, 0 to suppress it. When missing Default = 0
kriging-variogram-model	Semivariogram model to fit for kriging interpolation. When automatic fitting is chosen, the best among spherical and exponential is chosen.	1 = spherical, 2 = exponential, 3 = gaussian, 0 = automatic fitting. default to 2
lapse-rate-assignment	Method to assign lapse rate for elevation based correction	1 = one scalar for the entire domain, 2 = a map that may change in time. Requires the definition of subsection [[lapse-rate-map]]
lapse-rate-computation	Option to set whether to compute lapse rate from station data or use the assigned value	1 = compute lapse rate from data at each time step, 0 = use assigned lapse rate. Requires the definition of r2min
lapse-rate-scalar	Lapse rate to use for	Real number greater than 0

Keyword	Description	Requirements
	elevation based correction (mm/m)	when variable increase with elevation
nearest-points	Number of nearest points to be considered for interpolation	Mandatory for kriging and idw
offset	Adds an offset (degree Celsius)	Real number greater than zero if variable increase is required, lower than zero if decrease is required.
r2min	Value of linear regression R ² below which value set by lapse-rate-scalar is used instead of computed lapse rate	Real number in the range 0-1
scale-factor	Apply a scale factor (multiplicative). May be used for unit conversion or for model calibration. It is applied after elevation based correction	real number, optional
standard_name	Standard name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read
valid-threshold	minimum percentage of valid data that must be present to consider valid the aggregated value, when data from several time steps are read.	Percentage (0-1). When it is missing default is 1 that means that all values have to be valid to compute aggregation.
variable	Name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read

The following example reads temperature data (unit degree Kelvin) from file `temperature.txt` in `meteo` subfolder (note the relative path notation) by averaging over 12 hours time span (43200 s). So, assuming that data are stored in `temperature.txt` file with hourly time step, each time a new reading is performed, 12 data are read and averaged. In case nodata values are encountered, if less than 60% of data are valid numbers (`valid-threshold = 0.6`), the resulting value is set as nodata. Data are interpolated with inverse distance weighting algorithm (`interpolation = 2`) with power of distance 2 (`idw-power = 2.`) and considering 15 nearest stations (`nearest-points = 15`). An elevation drift is applied (`elevation-drift = 1`) with lapse rate computed from data (`lapse-rate-computation = 1`). If the coefficient of determination of the linear regression applied to compute the lapse rate is less than 0.6 (`r2min = 0.6`), the value `-0.0065 °C/m` is used as lapse rate instead (`lapse-rate-scalar = -0.0065`). An offset of `-273.15 °C` is applied in order to convert map from degree Kelvin to degree Celsius (`offset = -273.15`).

```
[temperature]
dt = 43200
file = ./meteo/temperature.txt
valid-threshold = 0.6
interpolation-assignment = 1
interpolation = 2
idw-power = 2.
nearest-points = 15
elevation-drift = 1
lapse-rate-computation = 1
r2min = 0.6
lapse-rate-scalar = -0.0065
offset = -273.15
export = 0
```

6.4 Daily mean air temperature

Daily mean air temperature properties are set in section `[temperature-daily-mean]`. This section is similar to `[temperature]` section except `dt` that is not required. Having both `[temperature]` and `[temperature-daily-mean]` configured in one simulation is useful when different processes require air temperature data with different time span. For example, computation of evapotranspiration with Hargreaves-Samani equation requires daily mean, minimum and maximum air temperature, and in the same simulation hourly air temperature is required to simulate snow melt and accumulation.

6.5 Daily minimum air temperature

Daily minimum air temperature properties are set in section [temperature-daily-min]. This section is similar to [temperature] section except dt that is not required. Having both [temperature] and [temperature-daily-min] configured in one simulation is useful when different processes require air temperature data with different time span. For example, computation of evapotranspiration with Hargreaves-Samani equation requires daily mean, minimum and maximum air temperature, and in the same simulation hourly air temperature is required to simulate snow melt and accumulation.

6.6 Daily maximum air temperature

Daily maximum air temperature properties are set in section [temperature-daily-max]. This section is similar to [temperature] section except dt that is not required. Having both [temperature] and [temperature-daily-max] configured in one simulation is useful when different processes require air temperature data with different time span. For example, computation of evapotranspiration with Hargreaves-Samani equation requires daily mean, minimum and maximum air temperature, and in the same simulation hourly air temperature is required to simulate snow melt and accumulation.

6.7 Solar radiation

This section is defined by [solar-radiation] in meteo configuration file. Unit of input data is W/m². The definitions of the keywords are reported in the Table below. Where not specified as MANDATORY, keywords are assumed to be optional.

Table 6.3. Definition of keywords in radiation section of meteo configuration file.

Keyword	Description	Requirements
[[interpolation]]	map with interpolation method codes	Used when interpolation-assignment = 2
dt	Cumulation time [s]	Integer greater than 0. MANDATORY
elevation-drift	Option to apply topographic drift	1 = use elevation to interpolate, 0 = no, If missing, default = 0

Keyword	Description	Requirements
export	activate grid exporting	1 = export interpolated grid, 0 = do not export interpolated grid MANDATORY
export-dt	time between two exportations (s)	Integer greater than 0
export-epsg	epsg of coordinate reference system of exported grid	Integer. List of accepted values in Section 1.2
export-format	1 = esri_ascii, 2 = esri_binary, 3 = netcdf	Integer between 1-3
export-path	folder where to put exported grids	string
export-start	time and date to start exporting	Date and time according to the International Standard ISO 8601 specifications
export-stop	time and date to stop exporting	Date and time according to the International Standard ISO 8601 specifications
file	File that contains data to read	MANDATORY
idw-power	power to be used with idw,	When missing, default = 2.
interpolation	Interpolation method when interpolation-assignment = 1	1 = thiessen, 2 = inverse distance weight (idw), 3 = kriging, 0 = read interpolated field
interpolation- assignment	Defines the way of interpolation	1 = one method for the entire domain, 2 = a map with interpolation method codes assigned by subsection [[interpolation]]. MANDATORY
kriging-anisotropy	Wheter to include anisotropy when fitting semivariogram model	1 = considers anisotropy, default = 0 excludes anisotropy
kriging-lags	number of lag bins for	if undefined or set to 0

Keyword	Description	Requirements
	semivariogram	default to 15
kriging-maxlag	Limit distance (m) to be considered for semivariogram assessment	If undefined or set to 0, it is computed automatically
kriging-variance	Option to export to file variance map associated to kriging interpolation	Set to 1 to export variance, 0 to suppress it. When missing Default = 0
kriging-variogram-model	Semivariogram model to fit for kriging interpolation. When automatic fitting is chosen, the best among spherical and exponential is chosen.	1 = spherical, 2 = exponential, 3 = gaussian, 0 = automatic fitting. default to 2
nearest-points	number of nearest points to be considered for interpolation	Mandatory for kriging and idw
offset	Add an offset (mm)	Real number greater than zero if variable increase is required, lower than zero if decrease is required.
scale-factor	Apply a scale factor (multiplicative). May be used for unit conversion or for model calibration. It is applied after elevation based correction	real number, optional
standard_name	Standard name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read
time-zone	Time zone (unit = hour) of local time.	Mandatory when elevation-drift = 1
valid-threshold	minimum percentage of valid data that must be present to consider valid the aggregated value, when	Percentage (0-1). When it is missing default is 1 that means that all values have to be valid to compute

Keyword	Description	Requirements
	data from several time steps are read.	aggregation.
variable	Name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read

The next example requires to interpolate station observations from file `RADD_2000-01-01_2011-12-31.fts` using inverse distance with power 1.5 and 15 closest stations. Elevation drift is applied using 1 hour as time zone to compute local time.

```
[solar-radiation]
dt = 3600
file = ./meteo/RADD_2000-01-01_2011-12-31.fts
interpolation-assignment = 1
interpolation = 2
idw-power = 1.5
nearest-points = 15
elevation-drift = 1
time-zone = 1
export = 0
```

6.8 Air relative humidity

This section is defined by `[relative-humidity]` in meteo configuration file. Unit of input data is percentage in the range 0-100. Interpolation of relative humidity data is similar to other meteorological variables except elevation drift that is not available. Definitions of keywords are reported in the Table below. Where not specified as MANDATORY, keywords are assumed to be optional.

Table 6.4. Definition of keywords in relative humidity section of meteo configuration file.

Keyword	Description	Requirements
<code>[[interpolation]]</code>	map with interpolation method codes	Used when interpolation-assignment = 2
dt	Cumulation time [s]	Integer greater than 0. MANDATORY
export	activate grid exporting	1 = export interpolated grid,

Keyword	Description	Requirements
		0 = do not export interpolated grid MANDATORY
export-dt	time between two exportations (s)	Integer greater than 0
export-epsg	epsg of coordinate reference system of exported grid	Integer. List of accepted values in Section 1.2
export-format	1 = esri_ascii, 2 = esri_binary, 3 = netcdf	Integer between 1-3
export-path	folder where to put exported grids	string
export-start	time and date to start exporting	Date and time according to the International Standard ISO 8601 specifications
export-stop	time and date to stop exporting	Date and time according to the International Standard ISO 8601 specifications
file	File that contains data to read	MANDATORY
idw-power	power to be used with idw,	When missing, default = 2.
interpolation	Interpolation method when interpolation-assignment = 1	1 = thiessen, 2 = inverse distance weight (idw), 3 = kriging, 0 = read interpolated field
interpolation-assignment	Defines the way of interpolation	1 = one method for the entire domain, 2 = a map with interpolation method codes assigned by subsection [[interpolation]]. MANDATORY
kriging-anisotropy	Wheter to include anisotropy when fitting semivariogram model	1 = considers anisotropy, default = 0 excludes anisotropy
kriging-lags	number of lag bins for semivariogram	if undefined or set to 0 default to 15

Keyword	Description	Requirements
kriging-maxlag	Limit distance (m) to be considered for semivariogram assessment	If undefined or set to 0, it is computed automatically
kriging-variance	Option to export variance map associated to kriging interpolation	Set to 1 to export variance, 0 to suppress it. When missing Default = 0
kriging-variogram-model	Semivariogram model to fit for kriging interpolation. When automatic fitting is chosen, the best among spherical and exponential is chosen.	1 = spherical, 2 = exponential, 3 = gaussian, 0 = automatic fitting. default to 2
nearest-points	number of nearest points to be considered for interpolation	Mandatory for kriging and idw
offset	Add an offset (mm)	Real number greater than zero if variable increase is required, lower than zero if decrease is required.
scale-factor	Apply a scale factor (multiplicative). May be used for unit conversion or for model calibration. It is applied after elevation based correction	real number, optional
standard_name	Standard name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read
valid-threshold	minimum percentage of valid data that must be present to consider valid the aggregated value, when data from several time steps are read.	Percentage (0-1). When it is missing default is 1 that means that all values have to be valid to compute aggregation.
variable	Name of variable to be read	“standard_name” or

Keyword	Description	Requirements
	in netcdf file	“variable” must be defined when netcdf file is read

The next example requires to interpolate station observations from file `relative_humidity.fts` (in subfolder `meteo`) using interpolation methods defined in map `interpolation_id.asc`. Assuming `id 2` and `3` are present in `interpolation_id.asc`, two interpolation methods are applied: inverse distance with power `2` and `25` closest stations, and kriging by fitting exponential semivariogram model (`kriging-variogram-model = 2`) with `15` lags (`kriging-lags = 15`) and maximum distance of `100000` m (`kriging-maxlag = 100000`). Interpolated maps are exported hourly (`export-dt = 3600`) in ESRI ASCII format (`export-format = 1`) from `2000-10-12T01:00:00+00:00` to `2000-10-16T23:00:00+00:00`. Maps are converted to Geodetic WGS84 coordinate reference system (`export-epsg = 4326`) and are saved to `./risultati/humidity` folder (`export-path = ./risultati/humidity`).

```
[relative-humidity]
  dt = 3600.
  file = ./meteo/relative_humidity.fts
  interpolation-assignment = 2
  idw-power = 2.
  kriging-anisotropy = 0
  kriging-variogram-model = 2
  kriging-lags = 15
  kriging-maxlag = 100000
  valid-threshold = 1.0
  nearest-points = 25
  export      = 1
  export-path = ./risultati/humidity
  export-start = 2000-10-12T01:00:00+00:00
  export-stop = 2000-10-16T23:00:00+00:00
  export-dt = 3600
  export-format = 1
  export-epsg = 4326
[[interpolation]]
  file = ./dati/interpolation_id.asc
  format = esri-ascii
  epsg = 23032
```

6.9 Wind speed

This section is defined by `[wind-speed]` in meteo configuration file. Unit of input data is m/s. Besides Thiessen, inverse distance and kriging methods to interpolate local measurements, two further methods are available for wind speed data: Micromet algorithm developed by Liston and Elder¹ and the method proposed by González-Longatt². Both methods use topographic features like terrain elevation, slope and curvature to drift interpolated wind speed. Wind direction is required when one of these two methods is chosen. Unit of wind direction data is degree (0-360 meteorological convention, the direction from which wind originates). Definitions of keywords are reported in the Table below. Where not specified as MANDATORY, keywords are assumed to be optional.

Table 6.5. Definition of keywords in wind speed section of meteo configuration file.

Keyword	Description	Requirements
<code>[[interpolation]]</code>	map with interpolation method codes	Used when <code>interpolation-assignment = 2</code>
<code>dt</code>	Cumulation time [s]	Integer greater than 0. MANDATORY
<code>export</code>	activate grid exporting	1 = export interpolated grid, 0 = do not export interpolated grid MANDATORY
<code>export-dt</code>	time between two exportations (s)	Integer greater than 0
<code>export-epsg</code>	epsg of coordinate reference system of exported grid	Integer. List of accepted values in Section 1.2
<code>export-format</code>	1 = esri_ascii, 2 =	Integer between 1-3

¹ Liston, G. E., Elder, K., 1911. A Meteorological Distribution System for High-Resolution Terrestrial Modeling (MicroMet). *Journal of Hydrometeorology*, 7, 217-234.

² González-Longatt, F., Medina, H., Serrano González, J., Spatial interpolation and orographic correction to estimate wind energy resource in Venezuela. *Renewable and Sustainable Energy Reviews*, 48, 1-16, 2015.

Keyword	Description	Requirements
	esri_binary, 3 = netcdf	
export-path	folder where to put exported grids	string
export-start	time and date to start exporting	Date and time according to the International Standard ISO 8601 specifications
export-stop	time and date to stop exporting	Date and time according to the International Standard ISO 8601 specifications
file	File that contains data to read	MANDATORY
idw-power	power to be used with idw,	When missing, default = 2.
interpolation	Interpolation method when interpolation-assignment = 1	1 = thiessen, 2 = idw, 3 = kriging, 4 = micromet, 5 = gonzalez, 0 = read interpolated field
interpolation-assignment	Defines the way of interpolation	1 = one method for the entire domain, 2 = a map with interpolation method codes assigned by subsection [[interpolation]]. MANDATORY
kriging-anisotropy	Wheter to include anisotropy when fitting semivariogram model	1 = considers anisotropy, default = 0 excludes anisotropy
kriging-lags	number of lag bins for semivariogram	if undefined or set to 0 default to 15
kriging-maxlag	Limit distance (m) to be considered for semivariogram assessment	If undefined or set to 0, it is computed automatically
kriging-variance	Option to export to file variance map associated to kriging interpolation	Set to 1 to export variance, 0 to suppress it. When missing Default = 0
kriging-variogram-model	Semivariogram model to fit for kriging interpolation.	1 = spherical, 2 = exponential, 3 = gaussian, 0

Keyword	Description	Requirements
	When automatic fitting is chosen, the best among spherical and exponential is chosen.	= automatic fitting. default to 2
micromet-length-scale	Length scale [m] used to compute curvature when micromet method is required	If undefined default to 5000 m
micromet-slopet	slope weighting factor used by micromet	If undefined default value = 0.5
micromet-curvet	curvature weighting factor used by micromet	If undefined default value = 0.5
nearest-points	number of nearest points to be considered for interpolation	Mandatory for kriging and idw
offset	Add an offset (mm)	Real number greater than zero if variable increase is required, lower than zero if decrease is required.
scale-factor	Apply a scale factor (multiplicative). May be used for unit conversion or for model calibration. It is applied after elevation based correction	real number, optional
standard_name	Standard name of variable to be read in netcdf file	“standard_name” or “variable” must be defined when netcdf file is read
valid-threshold	minimum percentage of valid data that must be present to consider valid the aggregated value, when data from several time steps are read.	Percentage (0-1). When it is missing default is 1 that means that all values have to be valid to compute aggregation.
variable	Name of variable to be read in netcdf file	“standard_name” or

Keyword	Description	Requirements
		“variable” must be defined when netcdf file is read
wind-direction-file	File that contains wind direction data to read	Required when Micromet or Gonzalez-Longatt methods are chosen

The next example requires to interpolate station observations from file `windspeed.fts` (in subfolder `meteo`) using interpolation methods defined in `map_interpolation_wind.asc`. Assuming `id 2` and `4` are present in `interpolation_wind.asc`, two interpolation methods are applied: inverse distance (`id = 2`) with power 2 (`idw-power = 2.`) and 5 closest stations (`nearest-points = 5`), and Micromet (`id = 4`) with length scale 6000 m (`micromet-length-scale = 6000.`), slope weighting factor = 0.6 (`micromet-slopewt = 0.5`) and curvature weighting factor = 0.4 (`micromet-curvewt = 0.4`).

```
[wind-speed]
dt = 3600
file = ./meteo/windspeed.fts
interpolation-assignment = 2
idw-power = 2.
micromet-length-scale = 6000.
micromet-slopewt = 0.5
micromet-curvewt = 0.5
wind-direction-file = ./meteo/winddirection.fts
valid-threshold = 1.0
nearest-points = 5
export = 0
[[interpolation]]
file = ./dati/interpolation_wind.asc
format = esri-ascii
epsg = 23032
```

CHAPTER 7

SNOW ACCUMULATION AND MELTING

The *FeST* model can simulate the snow accumulation and melting. The algorithms implemented in the current version of the model are based on the air temperature. For the snow melting, the classical degree-day model is implemented. For snow accumulation, the precipitation is partitioned into liquid (rainfall) and solid (snow) components based on air temperature thresholds: a lower threshold defines the air temperature below which precipitation is totally solid, an upper threshold defines the air temperature above which precipitation is totally liquid. In between the two threshold values, a linear variation of the percentage of rainfall and snow is assumed. Snow simulation is configured through a specific file. In the configuration file the user must define 7 sections. Each section sets a parameter that can be assigned as a scalar value or as a grid map. Some of the parameters can change within the simulation period: [melt-coefficient], [melt-threshold-temperature], [partitioning-upper-temperature], [partitioning-lower-temperature], and [hydraulic-conductivity]. In this case the user must use the netCDF format for the input maps that contain changing parameter values.

Two sections define initial value of state variables: [snow-water-equivalent], and [water-in-snow]. These two sections are optional: if they are not defined, a map is created with value = 0.

Keywords in the snow configuration file (usually named `snow.ini`) are listed and described in the following tables.

Table 7.1. Definition of [melt-model] section in the snow configuration file.

Keyword	Description	Requirements
[melt-model]	Currently only the degree-day model based on air temperature data is	Mandatory

Keyword	Description	Requirements
	implemented: 1=Degree-Day.	
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

Table 7.2. Definition of [snow-water-equivalent] section in the snow configuration file.

Keyword	Description	Requirements
[snow-water-equivalent]	Snow water equivalent initial value (m)	Optional. Default value = 0.
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map

Keyword	Description	Requirements
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 7.3. Definition of `[melt-coefficient]` section in the snow configuration file.

Keyword	Description	Requirements
<code>[melt-coefficient]</code>	Snow melt coefficient (mm/day/°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 7.4. Definition of [melt-threshold-temperature] section in the snow configuration file.

Keyword	Description	Requirements
[melt-threshold-temperature]	air temperature above which snow melt starts (°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

Table 7.5. Definition of [partitioning-upper-temperature] section in the snow configuration file.

Keyword	Description	Requirements
[partitioning-upper-temperature]	air temperature above which only rainfall occurs (°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf

Keyword	Description	Requirements
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 7.6. Definition of [partitioning-lower-temperature] section in the snow configuration file.

Keyword	Description	Requirements
[partitioning-lower-temperature]	air temperature below which only snowfall occurs (°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 7.7. Definition of [hydraulic-conductivity] section in the snow configuration file.

Keyword	Description	Requirements
[hydraulic-conductivity]	Snow hydraulic conductivity (m/s) used to calculate intercell lateral flow	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

Table 7.8. Definition of [water-in-snow] section in the snow configuration file.

Keyword	Description	Requirements
[water-in-snow]	Liquid phase inside snowpack initial value (m)	Optional. Default value = 0.
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map

Keyword	Description	Requirements
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

An example of snow.ini configuration file follows.

```
[melt-model]
  scalar = 1 # 1 = degree-day

[snow-water-equivalent]
  file = ./data/initial_snow_depth.asc
  format = esri-ascii
  epsg = 32632

[melt-coefficient]
  file = ./data/melt_factor.nc
  format = net-cdf
  variable = melt_factor
  epsg = 32632
  sync-initial-time = 1

[melt-threshold-temperature]
  scalar = 0.

[partitioning-upper-temperature]
  scalar = 1.

[partitioning-lower-temperature]
  scalar = -1.

[hydraulic-conductivity]
  scalar = 0.01
```

Example of snow configuration file.

CHAPTER 8

GLACIER

ACCUMULATION AND

ABLATION

The FEST model can simulate the glacier accumulation and ablation. Glacier ablation is simulated by using the models implemented for snow simulation. The keyword `doy-snow-ice-transformation` defines the day of the year (1-365) in which snow water equivalent still available is transformed to ice water equivalent. In the configuration file the user must define 5 sections. Each section sets a parameter that can be assigned as a scalar value or as a grid map. Some of the parameters can change within the simulation period: `[melt-coefficient]`, `[melt-threshold-temperature]`, and `[hydraulic-conductivity]`. In this case the user must use the netCDF format for the input maps that contain changing parameter values. Keywords in the glacier configuration file (usually named `glacier.ini`) are listed and described in the following tables.

Table 8.1. Definition of `doy-snow-ice-transformation` keyword in the snow configuration file.

Keyword	Description	Requirements
<code>doy-snow-ice-transformation</code>	day of the year (1-365) in which snow water equivalent still available is transformed to ice water equivalent	Optional. If keyword is missing, or <code>doy-snow-ice-transformation = 0</code> , ice accumulation is not simulated.

Table 8.2. Definition of `[melt-model]` section in the glacier configuration file.

Keyword	Description	Requirements
---------	-------------	--------------

Keyword	Description	Requirements
[melt-model]	Currently only the degree-day model based on air temperature data is implemented: 1=Degree-Day.	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 8.3. Definition of [initial-condition] section in the glacier configuration file.

Keyword	Description	Requirements
[initial-condition]	Snow water equivalent initial value (m)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf

Keyword	Description	Requirements
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 8.4. Definition of `[melt-coefficient]` section in the glacier configuration file.

Keyword	Description	Requirements
<code>[melt-coefficient]</code>	Snow melt coefficient (mm/day/°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to <code>time</code> . Available options: 1 = map is synced, 0 = map is not synced.

Table 8.5. Definition of [melt-threshold-temperature] section in the glacier configuration file.

Keyword	Description	Requirements
[melt-threshold-temperature]	air temperature above which snow melt starts (°C)	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

Table 8.6. Definition of [hydraulic-conductivity] section in the glacier configuration file.

Keyword	Description	Requirements
[hydraulic-conductivity]	Snow hydraulic conductivity (m/s) used to calculate intercell lateral flow	Mandatory
scalar	Scalar value to be used on the entire domain	optional
file	Name of file of the grid map	Required when parameter values are assigned through a grid map

Keyword	Description	Requirements
format	Input file format	Available options: esri-ascii, esri-binary, net-cdf
epsg	epsg coordinate reference system code.	Required when parameter values are assigned through a grid map
variable	Variable name in net-cdf file	Required when input map is in net-cdf format
time	Date and time of the first map to read from net-cdf file	optional
sync-initial-time	Sync the initial map with the simulation initial time.	Alternative option to time. Available options: 1 = map is synced, 0 = map is not synced.

An example of glacier.ini configuration file follows.

```
doy-snow-ice-transformation = 274 # 1st October

[melt-model]
  scalar = 1 # 1 = degree-day

[initial-condition]
  file = ./data/initial_ice_depth.asc
  format = esri-ascii
  epsg = 32632

[melt-coefficient]
  file = ./data/melt_factor.nc
  format = net-cdf
  variable = melt_factor
  epsg = 32632
  sync-initial-time = 1

[melt-threshold-temperature]
  scalar = 0.

[hydraulic-conductivity]
  scalar = 0.01
```

Example of glacier configuration file.

CHAPTER 9

PLANTS

The plants module in the FEST model is used in two ways. The first way is to set plants parameters used by other processes. One example is the leaf area index, a parameter that is used by soil balance module to compute evapotranspiration using Penman-Monteith equation. When multiple values of the same parameter are available for different time, the user can pack all values in a multidimensional net-cdf file, so that the FEST model can update the parameter value when a new map supersedes the old one. The second way of using the plants module is to simulate the plants growth and mortality with a dynamic model approach. In this case, the plants parameter are treated as state variables that are updated in time by the FEST model.

The plants module is activated by filling the specific section in the main configuration file (3.6). This chapter describes the plants configuration file.

The parameters to define are listed and described in the following table.

Table 9.1. Definition of keywords in plants configuration file.

Keyword	Description	Requirements
<code>plants-simulation</code>	Set whether to simulate plants dynamic. 0 = plants dynamic is not simulated	MANDATORY
<code>[vegetation-fraction]</code>	Map of percentage of pixel covered by vegetation. (0-1)	Optional. Required by soil balance to compute evaporation and transpiration components. It can be set with scalar keyword
<code>[lai]</code>	Map of leaf area index (m ² /m ²)	Optional. Required by soil balance to compute evaporation with Penman-Monteith or energy balance

Keyword	Description	Requirements
		solving. It can be set with scalar keyword
[vegetation-height]	Map of vegetation height (m)	Optional. Required by soil balance to compute evaporation with Penman-Monteith or energy balance solving. It can be set with scalar keyword
[min-stomatal-resistance]	Map of minimum leaf stomatal resistance (s/m)	Optional. Required by soil balance to compute evaporation with Penman-Monteith. It can be set with scalar keyword

An example of `plants.ini` configuration file follows.

```

plants-simulation = 0

[vegetation-fraction]
file = ./data/fv.asc
format = esri-ascii
epsg = 3003

[lai]
file = ./data/lai.nc
format = net-cdf
variable = lai
epsg = 3003
sync-initial-time = 1

[vegetation-height]
scalar = 2.3

[min-stomatal-resistance]
scalar = 30.

```

Example of plants configuration file.

CHAPTER 10

SOIL WATER BALANCE

The soil water balance module is aimed at computing the water (and energy fluxes, optionally) and updating the soil water content. It is activated by filling the specific section in the main configuration file (3.9). This chapter describes the soil water balance configuration file.

```

threshold-storm-start = 1.
interstorm = 10.
infiltration = ./conf/infiltration.ini
evapotranspiration = ./conf/evapotranspiration.ini

[balance-id]
  file = ./data/balance_id.asc
  format = esri-ascii
  epsg = 3003

[soil-depth]
  file = ./data/sd.asc
  format = esri-ascii
  epsg = 3003

[root-zone-depth]
  scalar = 0.1

[ksat-subsurface]
  file = ./data/kprof.asc
  format = esri-ascii
  epsg = 3003

[deep-percolation-factor]
  scalar = 0.1

#####
# state variables initialization
#####

[saturation-rz]
  scalar = 0.3

[saturation-tz]
  scalar = 0.3

```

Example of soil water balance configuration file.

The parameters to define are listed and described in the following table. For setting state variables initial value see section 10.2.

Table 10.1. Definition of keywords in soil water balance configuration file.

Keyword	Description	Requirements
threshold-storm-start	threshold to consider storm initiated [mm/h]	MANDATORY
interstorm	duration of interstorm period to terminate an event [h]	MANDATORY
infiltration	Name of file to configure infiltration simulation. See	MANDATORY

Keyword	Description	Requirements
	10.3	
evapotranspiration	Name of file to configure infiltration simulation. See 10.4.	MANDATORY
[ksat-subsurface]	Map of saturated conductivity used to compute lateral subsurface flux (m/s)	MANDATORY. It can be set with <code>scalar</code> keyword
[balance-id]	Map of balance id. 1=normal cell (hillslopes or channel); 2=lake; 3=landplain. See 10.1 for details.	MANDATORY.
[soil-depth]	Map of total soil depth (m)	MANDATORY. It can be set with <code>scalar</code> keyword
[root-zone-depth]	Map of root zone depth (m)	MANDATORY. It can be set with <code>scalar</code> keyword
[deep-percolation-factor]	Map of deep percolation factor, used as a limiter of deep percolation from transmission zone (-)	OPTIONAL. It can be set with <code>scalar</code> keyword. Default value = 1.

10.1 Balance id

Specific scheme for solving soil balance is applied according to balance id:

- Id = 1, denotes hillslope and channel (normal) cells. Vertical and lateral flows are computed and used for updating soil moisture. When id = 1 cell bounds a id=3 cell lateral flow is passed to id = 3 cell as boundary flux condition (Neumann type boundary condition).
- Id = 2, denotes lake cells. Soil moisture is set to saturated content, evaporation is set to potential, runoff is computed as precipitation – evaporation (negative values can occur), percolation is null.
- Id = 3 denotes landplain cells that may interact with groundwater at the bottom boundary. Lateral fluxes are null, capillary rise is computed and used for

updating soil moisture. Percolation is computed and passed as source term of the underlying groundwater.

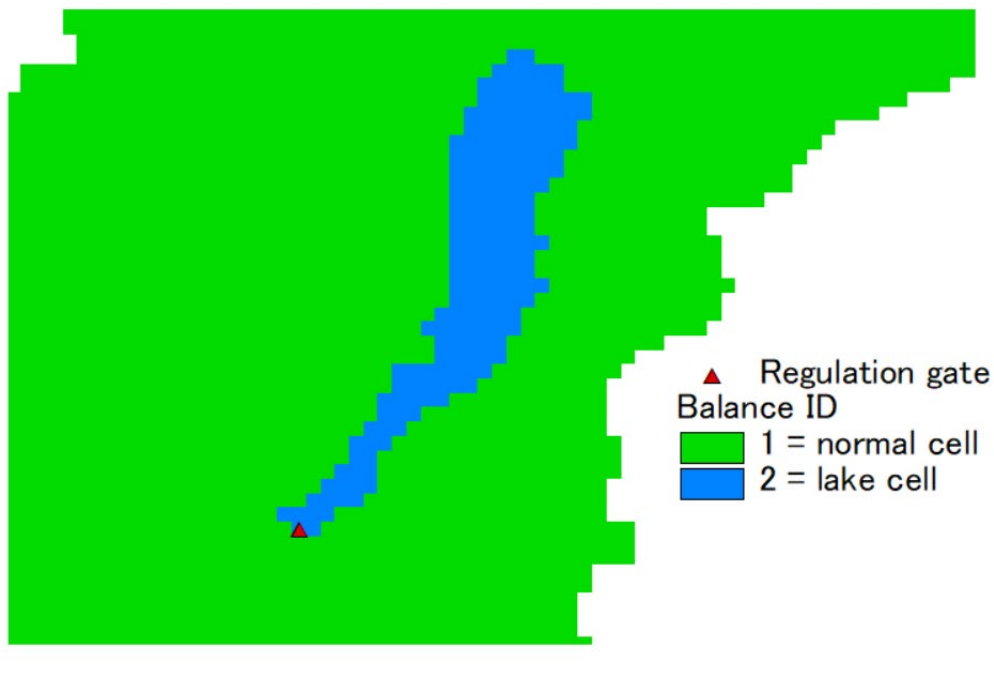


Figure 10.1 Example of Balance id map for the simulation of the Idro lake basin, in Italy. Blue cells mark lake cells. Note the location of gate that regulates outflow and lake water surface elevation.

10.2 State variables initialization

State variables must be initialized when simulation starts. Initial state can be set to an arbitrary value or to a value saved from a previous simulation run.

It is mandatory to initialize two variables: root zone soil saturation degree ([saturation-rz]), and transmission zone soil saturation degree ([saturation-tz]), either by setting a constant value (set with `scalar` keyword) or a map saved from a previous simulation run.

The actual soil water content in each cell, both in root and transmission zones, is computed by the model according to the soil hydrological properties of the given cell.

Two state variables can be optionally set to an initial value: [precipitation-status] and [interstorm-duration]. Other optional state variables are required by different infiltration models (see table below). When an optional state variable is not assigned an initial value in the configuration file, the default value, 0, is assigned. A constant value can be set with `scalar` keyword.

Table 10.2. Maps to be assigned for initializing state variables.

Keyword	Description	Requirements
saturation-rz	Root zone soil saturation degree	Mandatory.
saturation-tz	Transmission zone soil saturation degree	Mandatory.
precipitation-status	Precipitation status. Defines if in storm or interstorm period.	Optional
interstorm-duration	Interstorm duration [mm]. Defines time from the end of the last precipitation event.	Optional
cumulative-precipitation	Cumulative precipitation since the event start [mm]	Optional. Used by SCS-CN model
soil-retention	Actual soil retention capacity at the beginning of precipitation [mm].	Optional. Used by SCS-CN model
cumulative-infiltration	Cumulative infiltration [mm]	Optional. Used by Philips and Green-Ampt infiltration models

10.3 Infiltration

Infiltration is defined as the water movement from the ground surface into the soil. Different infiltration equations have been implemented in the FEST model. It's up to the user to select the equation that he desires to use depending on required outputs and available inputs. The available infiltration models are as follows:

1. SCS-modified curve number (SCS-CN): according to the Soil Conservation Service (SCS) (1985) modified for continuous simulation (Ravazzani et al., 2015)
2. Philip: according to Philip numerical solution (1957)
3. Green and Ampt_ according to Green and Ampt solution (1911)
4. Ross-Brooks and Corey: solved according to Ross (2003) fast and non-iterative solution for Richard equation using water retention curve parameters according to Brooks and Corey (1964) equation

5. Ross-Van Genuchten solved according to Ross (2003) fast and non-iterative solution for Richard equation using water retention curve parameters according to van Genuchten (1980) equation

Keywords in the infiltration configuration file (usually named `infiltration.ini`) are listed and described in the following table..

Table 10.3. Definition of keywords in infiltration configuration file.

Keyword	Description	Requirements
<code>model</code>	Infiltration model to be selected by the user: 1=SCS-CN, 2=Philip, 3=Green-Ampt, 4=Ross Brooks and Corey, 5=Ross Van Genuchten.	The user should check the available soil data before the selection of the infiltration model to be used for the simulations
<code>parameter-assigning-method</code>	Soil parameters could be assigned from single file for each parameter (method number 1) or soil parameters could be assigned from soil type map (method number 2)	For method 1 the user should provide a map for each required soil parameter, depending on the selected model. For method 2, the user should provide soil data input parameters in soil-types file.
<code>soil-types-file</code>	Soil type file used when <code>parameter-assigning-method = 2</code>	This keyword is mandatory if parameter assigning method = 2
<code>ross-divisions</code>	Number of the subdivisions of the soil layer	Required by Ross-Brooks and Corey, and Ross Van Genuchten models.
<code>ross-dsmax</code>	Refers to the maximum change in the effective saturation (S), of any unsaturated layer to aim for each time step, controls time step size. This parameter is used by Ross model.	Required by Ross-Brooks and Corey, and Ross Van Genuchten models. If not specified a default value of 0.05 is used.
<code>ross-hpondzero</code>	Refers to the bottom boundary condition for	Required by Ross-Brooks and Corey, and Ross Van

Keyword	Description	Requirements
	water; "free drainage" (means zero gradient of matric head), "seepage", or "zero flux".	Genuchten models
[soil-type-map]	Map of soil type	this section is mandatory if parameter-assigning-method = 2
[conductivity]	Map of soil hydraulic conductivity at saturation (m/s)	Required by all infiltration models
[residual-water-content]	Map of residual water content (m ³ /m ³)	Required by all infiltration models
[saturated-water-content]	Map of water content at saturation (m ³ /m ³)	Required by all infiltration models
[field-capacity]	Map of field capacity (m ³ /m ³)	Required by all infiltration models
[wilting-point]	Map of wilting point (m ³ /m ³)	Required by all infiltration models
[pore-size-index]	Map of pore size distribution index of Brooks and Corey (-)	Required by all infiltration models
[bubble-pressure]	Map of bubbling pressure (m)	Required by all infiltration models
[curve-number]	Map of curve number (-)	Required by SCS-CN
[abstraction-ratio]	Map of abstraction ratio to compute initial loss (-). Standard value = 0.2	Required by SCS-CN
[storativity]	Map of curve number storativity (S ₀) (mm). Standard value = 254	Required by SCS-CN
[front-suction-head]	Map of front suction head (m)	Required by Green-Ampt
[n-van-genuchten]	Map of <i>n</i> shape coefficient of Van Genuchten retention curve (-)	Required by Ross Van Genuchten

Keyword	Description	Requirements
[m-van-genuchten]	Map of m shape coefficient of Van Genuchten retention curve (-)	Required by Ross Van Genuchten
[tortuosity-index]	Map of pore tortuosity index (-)	Required by Ross Van Genuchten
[conductivity-matrix]	Map of conductivity at saturation of soil matrix (m/s)	Required by Ross Van Genuchten

In the next example, the user selected Philip equation for the simulation of the infiltration which corresponds to the method number 2. For the determination of the soil parameter the user selected the method 1 that implies assigning the soil parameters from single file for each required parameter. A `scale_factor` is applied to soil conductivity in order to convert the input map from cm/h to m/s unit.

```

model = 2 # Philip infiltration model

parameter-assigning-method = 1 # 1 = read each parameter from
single file; 2 = assign parameter from soil type map

# this keyword is mandatory if parameter-assigning-method = 2
soil-types-file = ./conf/soil-types.ini

divisions = 1 # number of subdivisions of soil layer

# max change in S (the "effective saturation") of any unsaturated
# layer to aim for each time step; controls time step size
# If not specified default value used = 0.05
# used by Ross model
dSmax = 0.05

#initial pond depth [m] if not given default to zero
# used by Ross model
hpondzero = 0.

# used by Ross model
botbc = free drainage
#botbc = zero flux
#botbc = seepage

```

Example of infiltration configuration file (part 1/2).

```
# alternative to assign soil type map is assigning single map
for each parameter
[conductivity]
  file = ./dati/toce_kscmh.asc
  format = esri-ascii
  epsg = 23032
  scale_factor = 0.0000027777

[residual-water-content]
  file = ./dati/toce_tr_200.asc
  format = esri-ascii
  epsg = 23032

[saturated-water-content]
  file = ./dati/toce_ts_200.asc
  format = esri-ascii
  epsg = 23032

[field-capacity]
  file = ./dati/toce_fc_200.asc
  format = esri-ascii
  epsg = 23032

[wilting-point]
  file = ./dati/toce_wp_200.asc
  format = esri-ascii
  epsg = 23032

[pore-size-index]
  file = ./dati/toce_bc_200.asc
  format = esri-ascii
  epsg = 23032

[bubble-pressure]
  file = ./dati/toce_bp_200.asc
  format = esri-ascii
  epsg = 23032
```

Example of infiltration configuration file (part 2/2).

In case the user selects `parameter-assigning-method = 2` the file assigned by `soil-types-file` must be prepared together with map assigned by `[soil-type-map]` section in the infiltration configuration file. The list of parameters to be included in this files depends on the selected infiltration model previously chosen. These parameters are reported in the table below.

Table 10.4. Parameters to be included in `soil-types-file`.

Soil parameter	Definition	Unit	Model
<code>ksat</code>	Saturated hydraulic conductivity	m/s	all
<code>thetas</code>	saturated volumetric water content	m ³ /m ³	all
<code>thetar</code>	residual volumetric water content	m ³ /m ³	all
<code>fc</code>	Water content at field capacity	m ³ /m ³	all
<code>wp</code>	Water content at wilting point	m ³ /m ³	all
<code>smax</code>	maximum soil storage	m	all
<code>psdi</code>	pore-size distribution index	-	all
<code>cn</code>	Curve number	-	Curve Number
<code>c</code>	abstraction-ratio, default value=0.2	-	Curve Number
<code>S0</code>	Storativity	mm	Curve Number
<code>psic</code>	air entry value, bubbling pressure	m	Philips, ROSS-BC and ROSS-VG
<code>phy</code>	Suction head at the wetting front	m	Green and Ampt
<code>n</code>	vG retention function shape parameter	-	ROSS-VG
<code>m</code>	vG retention function shape parameter	-	ROSS-VG
<code>p</code>	tortuosity index	-	ROSS-VG
<code>ksat-matrix</code>	saturated conductivity of soil "matrix" (m/s). Different from <code>ksat</code> when macropores impact		ROSS-VG

The example below reports all parameters required by the Philips equation. The number of the soil types for the following example has been set to 2. So, the user in this case should include two sets of soil parameters.


```
#####  
# soil types database #  
#####  
soil-types = 2  
  
[1] # soil type number 1  
ksat = 1.74E-05 #saturated conductivity (m/s)  
thetas = 0.462 #saturated volumetric water content (m3/m3)  
thetar = 0.01 #residual volumetric water content (m3/m3)  
psdi = 0.288 #brooks and corey pore size distribution index (-)  
psic = 0.00452 # air entry value, bubbling pressure (m)  
wp = 0.079 # wilting point (m3/m3)  
fc = 0.278 # field capacity (m3/m3)  
smax = 0.2 # maximum soil storage (m)  
  
[2] # soil type number 2  
ksat = 5.48E-06 #saturated conductivity (m/s)  
thetas = 0.434 #saturated volumetric water content (m3/m3)  
thetar = 0.01 #residual volumetric water content (m3/m3)  
psdi = 0.248 #brooks and corey pore size distribution index (-)  
psic = 0.00488 # air entry value, bubbling pressure (m)  
wp = 0.0611 # wilting point (m3/m3)  
fc = 0.297 # field capacity (m3/m3)  
smax = 0.2 # maximum soil storage (m)
```

Example of file defined by soil-types-file.

10.4 Evapotranspiration

Different equations have been implemented in the FEST model for computing evapotranspiration. The available models are as follows:

1. Penman-Monteith (Allen et al., 1998);
2. Priestley and Taylor (1972);
3. Hargreaves and Samani (1982);
4. Hargreaves and Samani modified with elevation correction (Ravazzani et al., 2012);
5. FAO-56 Penman-Monteith (Allen et al., 1998);
6. Energy balance. (To be implemented in the new code)

Keywords in the evapotranspiration configuration file (usually named `evapotranspiration.ini`) are listed and described in the following table.

Table 10.5. Definition of keywords in evapotranspiration configuration file.

Keyword	Description	Requirements
model-assignment	1 = one method for the entire domain, 2 = a map with model codes	Mandatory
model	Evapotranspiration model: 1=Penman-Monteith, 2= Priestley-Taylor, 3=Hargreaves-Samani, 4=Hargreaves-Samani modified, 5=FAO-56 Penman-Monteith., 6=energy-balance	Required when model-assignment = 1
dt	Computation time step (s)	Mandatory
use-crop-coefficient	0 = no, 1 = yes.	Optional. If not specified crop coefficient is not applied.
[model-map]	map of model id (see model)	Required when model-assignment = 2

When use-crop-coefficient = 1 the user must configure how to assign crop coefficient values in section [crop-coefficient]. Crop coefficient values can be assigned in two ways:

- A map of ids and a related file with crop coefficient time series value for each id in the map. When a new value of crop coefficient is read from file, the value is assigned to all cells with the same id in the map.
- A time variable map encoded in net-Cdf format.

Table 10.6. Definition of keywords for configuring crop coefficient.

Keyword	Description	Requirements
[crop-coefficient]	Section to configure crop coefficient use.	Required when use-crop-coefficient = 1
file	Sub-keyword in section [crop-coefficient] to define file with crop coefficient values in fest time	mandatory

Keyword	Description	Requirements
	series format or net-Cdf.	
interpolation	1 = use code-map, 0 = use netcdf grid data	mandatory
variable	1 = use code-map, 0 = use netcdf grid data	Required when interpolation = 0
[[code-map]]	Subsection that defines the map with id code	Required when interpolation = 1

In the next example, the modified Hargreaves Samani model (`model = 4`) is used to compute evapotranspiration on the entire domain (`model-assignment = 1`) at daily time scale (`dt = 86400`). Crop coefficient values are defined by reading values from `./meteo/kc.txt` (see below) file and assigned to the corresponding code in `./dati/toce_kc_code.asc` map.

```
dt = 86400 # time step computation (s)
model-assignment = 1 # one method for the entire domain
model = 4 # modified Hargreaves model
use-crop-coefficient = 1 # 0 = no, 1 = yes

[crop-coefficient]
  file = ./meteo/kc.txt #file containing crop coefficient
  interpolation = 1 # 1 = use code-map
  [[code-map]]
    file = ./dati/toce_kc_code.asc
    format = esri-ascii
    epsg = 23032
```

Example of evapotranspiration configuration file.

```
description =      crop coefficient
unit =          -
epsg =         23032
count =         2
dt =           3600
missing-data   =      -999.9
offsetz        =      0

metadata
code1 1        0      0      0
code2 2        0      0      0

data
date&time     code1 code2
2000-01-01T00:00:00+01:00    0.26  1.05
2000-01-01T01:00:00+01:00    0.26  1.05
2000-01-01T02:00:00+01:00    0.26  1.05
2000-01-01T03:00:00+01:00    0.26  1.05
2000-01-01T04:00:00+01:00    0.26  1.05
2000-01-01T05:00:00+01:00    0.26  1.05
2000-01-01T06:00:00+01:00    0.26  1.05
2000-01-01T07:00:00+01:00    0.26  1.05
2000-01-01T08:00:00+01:00    0.26  1.05
2000-01-01T09:00:00+01:00    0.26  1.05
2000-01-01T10:00:00+01:00    0.26  1.05
2000-01-01T11:00:00+01:00    0.26  1.05
```

Example of file in fest time series format with crop coefficient value to assign to id map.

CHAPTER 11

DISCHARGE ROUTING

The *FeST* model can route surface runoff to compute discharge using the Muskingum-Cunge-Todini equation (Todini, 2007), following the stream network as delineated in morphological properties module. Discharge routing is activated by filling the specific section in the main configuration file (3.10). This chapter describes the discharge routing configuration file, usually named `discharge-routing.ini`.

```

export-channel-grid = 0

masks-number = 1

[reservoirs]
  file = ./conf/reservoirs.ini
  dt = 10
  dt-out = 3600

[diversions]
  file = ./conf/diversions.ini
  dt = 0
  dt-out = 3600

[discharge-in]
  scalar = 0.0

[discharge-out]
  scalar = 0.0

[discharge-lat]
  scalar = 0.0

[base-mask]
  channel-initiation-method = area
  channel-initiation-threshold = 4000000.
  hillslope-width = 200.
  hillslope-alpha = 45.
  hillslope-ks = 2.

Table Start
Title: channel properties
Id: base-mask
Columns:      [count]      [threshold]      [width]      [alpha]      [ks]
Units:        [-]          [m^2]           [m]          [deg]        [m^1/3s^-1]
              1            5000000         5            45           20
              2            10000000        7            45           25
              3            15000000        10           45           30
              4            20000000        20           45           35
              5            30000000        25           45           40
              6            100000000       35           45           45
              7            500000000       50           45           45
              8            1000000000      65           45           45
              9            2000000000      80           45           45
Table End

```

Example of discharge routing configuration file.

The parameters to define are listed and described in the following table.

Table 11.1. Definition of keywords in discharge routing configuration file.

Keyword	Description	Requirements
---------	-------------	--------------

Keyword	Description	Requirements
export-channel-grid	1 = file channel.asc is written 0 = no any file is exported	MANDATORY
masks-number	number of masks to assign channel parameters (at least 1 for the base-mask must exist)	MANDATORY
[reservoirs]	Section to configure reservoirs	MANDATORY
file	File with information about reservoirs (see 11.1)	MANDATORY
dt	Computation time step (s)	MANDATORY. When dt=0 reservoirs are not solved
dt-out	Time step for writing reservoirs simulation results (s).	OPTIONAL. default value = 0. When keyword is not defined or =0, files are not written
[diversions]	Section to configure diversions	MANDATORY
file	File with information about diversions (see 11.2)	MANDATORY
dt	Computation time step (s)	MANDATORY. When dt=0 diversions are not solved. For every values other than 0, dt is set equals to discharge routing dt
dt-out	Time step for writing diversions simulation results (s).	OPTIONAL. default value = 0. When keyword is not defined or =0, files are not written
[discharge-in]	Map of input discharge initial value (m ³ /s)	OPTIONAL. default value = 0. It can be set to a constant value using the scalar keyword
[discharge-out]	Map of output discharge initial value (m ³ /s)	OPTIONAL. default value = 0. It can be set to a constant

Keyword	Description	Requirements
		value using the scalar keyword
[discharge-lat]	Map of lateral discharge initial value (m ³ /s)	OPTIONAL. default value = 0. It can be set to a constant value using the scalar keyword
[base-mask]	Section for assigning discharge routing parameters to the entire simulation domain	MANDATORY
channel-initiation-method	Method to define channel initiation. Available methods: area = a fixed threshold area is used (m ²); ask = a threshold of the expression area*slope ^k (m ²) is used, with k=1.7.	MANDATORY
channel-initiation-threshold	Threshold value to initiate channel (m ²).	MANDATORY
hillslope-width	Hillslope cross section width (m)	MANDATORY
hillslope-alpha	Hillslope slope of trapezoidal section side bank (degree)	MANDATORY.
hillslope-ks	Hillslope Strickler roughness coefficient (m ^{1/3} s ⁻¹)	MANDATORY

A table with `id = base-mask` is required to define routing parameters to be used on channel cells of the whole simulation domain. The user must include the same parameters specified for hillslope cells (section width, bank slope, Strickler coefficient) that can vary with basin area (m²). The parameter values are linearly interpolated between boundary values according to the basin area of the current cell. The `[count]` column with an incremental counter is required in the table.

Different hillslope and channel parameters can be assigned to a specific subbasin within the simulation domain. To do so, assuming the user needs to assign parameters on N subbasins, new sections with name `[maskX]` must be added, with $X= 1, N$. The total number of masks

(`masks-number`) must be updated accordingly to account for the *base-mask* and the additional subbasins. A table with id name equals to the section name (example `mask1`) is used to assign channel parameters to the subbasin. In the following example, routing parameters are assigned to the base mask and an additional subbasin.

```

masks-number = 2

[base-mask]
  channel-initiation-method = area
  channel-initiation-threshold = 4000000.
  hillslope-width = 200.
  hillslope-alpha = 45.
  hillslope-ks = 2.

[mask1]
  file = ./data/subbasin1.asc
  format = esri-ascii
  epsg = 32633
  channel-initiation-method = area
  channel-initiation-threshold = 400000.
  hillslope-width = 200.
  hillslope-alpha = 45.
  hillslope-ks = 5.

Table Start
Title: channel properties
Id: base-mask
Columns:      [count]      [threshold]      [width]      [alpha]      [ks]
Units:        [-]          [m^2]            [m]          [deg]
[m^1/3s^-1]
              1            5000000          5            45           20
              2            10000000         7            45           25
              3            15000000         10           45           30
              4            20000000         20           45           35
Table End

Table Start
Title: channel properties
Id: mask1
Columns:      [count]      [threshold]      [width]      [alpha]      [ks]
Units:        [-]          [m^2]            [m]          [deg]
[m^1/3s^-1]
              1            3000000          10           45           10
              2            12000000         15           45           15
              3            20000000         20           45           20
              4            30000000         30           45           25
              5            40000000         40           45           30
Table End

```

Example of discharge routing configuration file with `base-mask` and the additional subbasin `mask1`.

11.1 Reservoirs

When reservoirs are activated in discharge routing configuration file, the user must provide information of reservoirs in a specific file (see example below). Two types of reservoirs are available, on-stream and off-stream reservoirs. On-stream reservoirs are the ones that are located across a river. An off-stream reservoir is a reservoir that is not located on a streambed, and is supplied by an artificial canal or pipeline. In case of off-stream reservoirs, the water stored can be released in a downstream section of the same river from which water was withdrawn, or in a different water courses.

The reservoirs configuration file contains three main keywords that configure general properties common to all reservoirs (Table below).

Table 11.2. Definition of common keywords in reservoirs configuration file.

Keyword	Description	Requirements
nreservoirs	Number of reservoirs to configure	MANDATORY
hotsart	cold=start from assigned stage, hot=restart from a previous simulation, read from external file	MANDATORY
epsg	Epsg coordinate system id	MANDATORY
path-hotstart	Path to file saved from a previously run simulation	Required when hotstart=hot

For each reservoir the user must configure the specific section numbered from 1 to the total number of reservoirs, filling in the required information according to the reservoir type, as listed and described in the following tables.

Table 11.3. Information to provide for on-stream basin (dam, lake or flood detention basin).

Keyword	Description	Requirements
id	Number Id of reservoir. Integer number	MANDATORY.
type	available options: on for on-stream reservoir, off for off-stream reservoir,	MANDATORY

Keyword	Description	Requirements
	bypass for by-pass channel.	
name	Name of the reservoir	MANDATORY
rk	Runge-kutta integration order. Available options: 3, 4	MANDATORY
easting	x-coordinate of reservoir	MANDATORY
northing	y-coordinate of reservoir	MANDATORY
stage	Initial water surface elevation of reservoir	MANDATORY
stage-target-file	The name of file of stage values in fest time series format that is treated as a target stage for on-stream reservoir, outlet discharge is adjusted to reach the target (on-stream type 2 reservoir).	OPTIONAL
discharge-downstream-file	The name of file of observed reservoir downstream discharge. The read value is used to overwrite the value computed by the FeST. The reservoir mass conservation equation does not change.	OPTIONAL
discharge-diverted-file	The name of file of observed reservoir diverted discharge. The read value is used to overwrite the value computed by the FeST. The reservoir mass conservation equation does not change.	OPTIONAL
e-flow	environmental flow (m ³ /s), to be released from reservoir. It is used when stage-target-file assigns a file with reservoir stage to follow.	Required to be used in combination with stage-target-file option

Keyword	Description	Requirements
	To assign a changeable value during the year, a table on external file must be assigned (see Chapter 14)	
free-flow	free flow discharge (m ³ /s). When $Q_{in} < \text{free flow}$ and $\text{stage} \leq \text{free flow elevation}$ $Q_{out} = Q_{in}$	OPTIONAL. When not defined, default value = 0
free-flow-elevation	free flow elevation (m asl). When $Q_{in} < \text{free flow}$ and $\text{stage} \leq \text{free flow elevation}$ $Q_{out} = Q_{in}$	OPTIONAL. When not defined, default value = 0
geometry	File containing information of the stage-volume, stage-area, and stage-outlet discharge of the reservoir. See example below.	MANDATORY

```

Table      Start
Title:    reservoir
Id:       pusiano # mandatory
Columns:  [h]      [area]    [volume]  [Qout]
Units:    [m]      [m2]     [m3]      [m3/s]
          200.0  5500000  77000000  0.0
          259.0  5500000  77000000  0.0
          260.05 5500000  77000000  10.0
          260.55 5500000  77000000  15.0
          261.0  5500000  77000000  20.0
          261.37 5500000  77000000  25.0
          261.65 5500000  77000000  30.0
          261.93 5500000  77000000  35.0
          262.17 5500000  77000000  40.0
Table      End

```

Example of geometry file of a reservoir

On-stream reservoirs may have two optional subsections, one to manage high flow condition, and the second one to include in the reservoir the simulation of a channel that diverts flow

from the reservoir itself (like in the example of dam for hydropower production where flow is diverted to the power production plant).

Table 11.4. Optional subsections of on-stream reservoir for managing high flow condition, and flow diversion from reservoir.

Keyword	Description	Requirements
[[manage-high-level]]	Marks the beginning of subsection to manage high flow condition of on-stream reservoir	OPTIONAL.
full-reservoir-level	full reservoir level (m)	MANDATORY
qout	option to manage reservoir outflow. Only option available is qin	MANDATORY
rising	when rising = 1 qout is overridden when qin is rising, when rising = 0 qout is always overridden	MANDATORY
[[diversion]]	Marks the beginning of subsection to manage flow diversion from reservoir	OPTIONAL.
weir-change-doy	Day of year (doy) of the change of the weir table are set. When only one doy is assigned, the same weir table is used throughout the whole year. At least one number should be assigned. More doys are assigned in ascending order.	MANDATORY
weir	File containing table of stream-diverted discharges relationship	MANDATORY
xout	x-coordinate corresponding to the cell where discharge is released	MANDATORY
yout	y-coordinate corresponding	MANDATORY

Keyword	Description	Requirements
	to the cell where discharge is released	
e-flow	environmental flow (m ³ /s), minimum value of discharge to be released in the river downstream the diversion. To assign a changeable value during the year, a table on external file must be assigned (see Chapter 14)	OPTIONAL
channel-length	Channel length (m)	MANDATORY
channel-slope	Channel slope (m/m)	MANDATORY
channel-manning	Channel Manning roughness coefficient (s m ^{-1/3})	MANDATORY
section-bottom-width	Channel section bottom width (m)	MANDATORY
section-bank-slope	Channel section bank slope (degree)	MANDATORY

```
[1]
id = 1
type = on # on-stream reservoir
name = santa_caterina
rk = 4
easting = 305461.27
northing = 5157052.89
stage-target-file = ./data/santa_caterina_stage.fts
stage = 803.
e-flow = 0.852930122 # environmental flow [m3/s]
geometry = ./data/reservoir_geometry/santa_caterina_diga.tab
[[manage-high-level]]
full-reservoir-level = 826.2
qout = qin
rising = 1
[[diversion]]
weir-change-doy = 31, 45, 118 #change doy in ascending order
weir = ./data/reservoir_weir/diversion-weir.tab
xout = 304514.806 # x coordinate of outflow
yout = 5151740.539 # y coordinate of outflow
channel-length = 7200 # [m]
channel-slope = 0.017 # [m/m]
channel-manning = 0.025 #s m^-1/3
section-bottom-width = 10 # [m]
section-bank-slope = 45 # [degree]
```

Example of on-stream reservoir with optional subsections for managing high flow and diversion channel

```

Table Start
Title:      weir
Id:   G_0001- # mandatory
Columns: [Qstream] [31] [45] [118]
Units:  [m3/s] [m3/s] [m3/s] [m3/s]
        0. 0. 0. 0.
        0.853 0. 0. 0.
        11.64 10.787 15.0 5.0
        10000 10.787 15.0 5.0
Table End

```

Content of diversion-weir.tab file

Table 11.5. Information to provide for off-stream detention basin.

Keyword	Description	Requirements
id	Number Id of reservoir. Integer number	MANDATORY.
type	available options: on for on-stream reservoir, off for off-stream reservoir	MANDATORY
name	Name of the reservoir	MANDATORY
rk	Runge-kutta integration order. Available options: 3, 4	MANDATORY
easting	x-coordinate of reservoir	MANDATORY
northing	y-coordinate of reservoir	MANDATORY
stage	Initial water surface elevation of reservoir	MANDATORY
stage-max	this is the maximum stage for off-stream reservoir. When maximum stage is reached, discharge cannot enter the detention basin anymore.	MANDATORY
geometry	File containing information of the stage-volume, stage- area, and stage-outlet	MANDATORY

Keyword	Description	Requirements
	discharge of the reservoir. See example below.	
weir	File containing table of stream-diverted discharges relationship	Required when <code>type=off</code>
xout	x-coordinate corresponding to the cell where discharge is released	Required when <code>type=off</code>
yout	y-coordinate corresponding to the cell where discharge is released	Required when <code>type=off</code>

```

Table  Start
Title:  weir
Id:    weir_csno  #  mandatory
Columns:  [Qstream]          [Qdiverted]
Units:    [m3/s]            [m3/s]
          4.2                0.2
          5.1                1.3
          5.7                2.2
          6.4                3.0
          7.1                4.0
          7.8                5.0
          8.5                5.9
          9.2                6.8
          9.9                7.7
          10.6               8.5
          11.5               9.4
          12.4               10.3
          13.1               11.1
Table  End

```

Some examples of the different type of reservoirs that can be simulated by the FEST model are described in the following sections.

INFO

Since version 1.5 of the Reservoirs module, reservoir volume is written to output file alongside water surface elevation.

11.1.1 Dam and lake simulation

Lake Idro or Eridio is a lake of glacial origin located in the province of Brescia on the border with Trentino, in Northern Italy. Situated at 368 meters above sea level, it is formed by the waters of the Chiese river which is also its outlet. Its surface is 10.9 km² and reaches a maximum depth of 122 meters.

Lake Idro is the first natural Italian lake, to have been subjected to artificial regulation. The original idea of constructing a dam dates back to 1855, but the concession was given jointly to Società Elettrica Bresciana (SEB) and the University of Naviglio Grande Bresciano in 1917 to reduce Lake Idro to a regulated reservoir, in order to produce electricity and have greater volumes of water for the summer irrigation of the Brescia and Mantua areas. The regulation work was built in the 1920s and came into operation in 1933 with a regulation which provides for a level excursion of up to 3.5 meters, later raised to 7 meters. In the period between 1950 and 1960, the company SEB (now HDE) was granted the right to build two new hydroelectric plants upstream of Lake Idro, in the Alto Chiese basin in the province of Trento, including the construction of the artificial reservoirs of Malga Bissina (1791 meters above sea level 60 million m³) and Malga Boazzo (1225 meters above sea level, 12 million m³) for a total of 72 million m³.

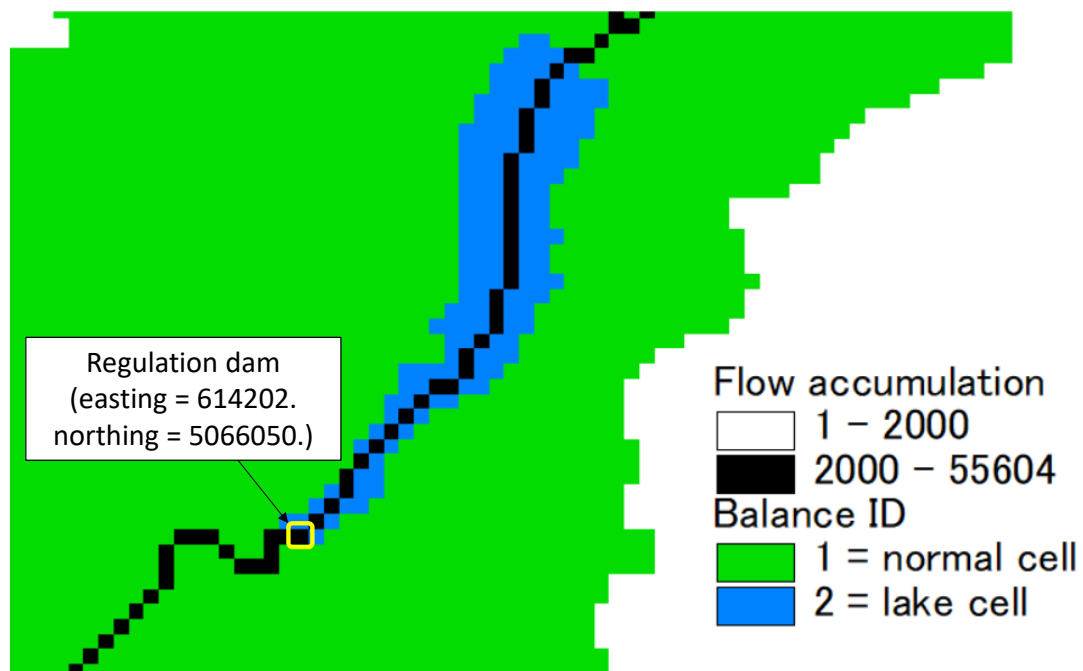


Figure 11.1 Location of the Idro lake regulation dam along the flow accumulation map of the Chiese river basin.

The reservoirs.ini file to include the Idro lake along the Chiese river course is shown hereafter. Coordinates of the lake match the location of the regulation dam.

```
nreservoirs = 1
hotstart = cold
epsg = 32632

[1]
  id = 1
  type = on
  name = idro
  rk = 4
  easting = 614202.
  northing = 5066050.
  stage = 366.0
  geometry = ./data/lake_idro.tab
```

The reservoirs.ini file to assign the Idro lake.

The lake_idro.tab file is shown hereafter.

```
Table Start
Title:      reservoir
Id:         idro
Columns:    [h]          [area]          [volume]          [Qout]
Units:      [m]          [m2]            [m3]              [m3/s]
           364.00       10900000.0     1308000000.0     0.0
           364.50       10900000.0     1313450000.0     0.0
           365.00       10900000.0     1318900000.0     5.0
           365.50       10900000.0     1324350000.0     10.0
           366.00       10900000.0     1329800000.0     15.0
           366.50       10900000.0     1335250000.0     20.0
           367.00       10900000.0     1340700000.0     25.0
           367.50       10900000.0     1346150000.0     30.0
           368.00       10900000.0     1351600000.0     35.0
           368.50       10900000.0     1357050000.0     40.0
           369.00       10900000.0     1362500000.0     45.0
           369.50       10900000.0     1367950000.0     50.0
           370.00       10900000.0     1373400000.0     55.0
           370.50       10900000.0     1378850000.0     60.0
           371.00       10900000.0     1384300000.0     65.0
           371.50       10900000.0     1389750000.0     70.0
           372.00       10900000.0     1395200000.0     75.0
           372.50       10900000.0     1400650000.0     80.0
Table End
```

The lake_idro.tab file.

When the model runs produces a file that contains water elevation inside the basin, upstream discharge and downstream discharge as shown hereafter. Note that the upstream discharge, the one that enters the lake, when the lake surface is assigned the balanca id = 2, may be

negative when the evapotranspiration is greater than runoff. This is likely to happen at initial time steps when discharge is zero and rainfall is not occurring on the basin.

```

FEST: reservoir routing
reservoir: idro
id: 1

data
DateTime      h[m]          Qupstream[m3/s]    Qdownstream[m3/s]
2014-11-01T00:00:00+00:00    365.999        -0.001             14.991
2014-11-01T01:00:00+00:00    365.995        -0.001             14.954
2014-11-01T02:00:00+00:00    365.992        -0.001             14.918
2014-11-01T03:00:00+00:00    365.988        -0.001             14.881
...
2014-11-10T13:00:00+00:00    365.706         5.603             12.056
2014-11-10T14:00:00+00:00    365.703         7.105             12.032
2014-11-10T15:00:00+00:00    365.703        10.624            12.032
2014-11-10T16:00:00+00:00    365.703        14.249            12.032
2014-11-10T17:00:00+00:00    365.703        16.049            12.032
2014-11-10T18:00:00+00:00    365.703        16.914            12.032
2014-11-10T19:00:00+00:00    365.705        18.193            12.045
2014-11-10T20:00:00+00:00    365.708        20.989            12.082
2014-11-10T21:00:00+00:00    365.712        27.141            12.119
2014-11-10T22:00:00+00:00    365.719        38.665            12.185
2014-11-10T23:00:00+00:00    365.730        56.333            12.302
2014-11-11T00:00:00+00:00    365.747        71.968            12.473
2014-11-11T01:00:00+00:00    365.769        80.812            12.688
...

```

Output file.

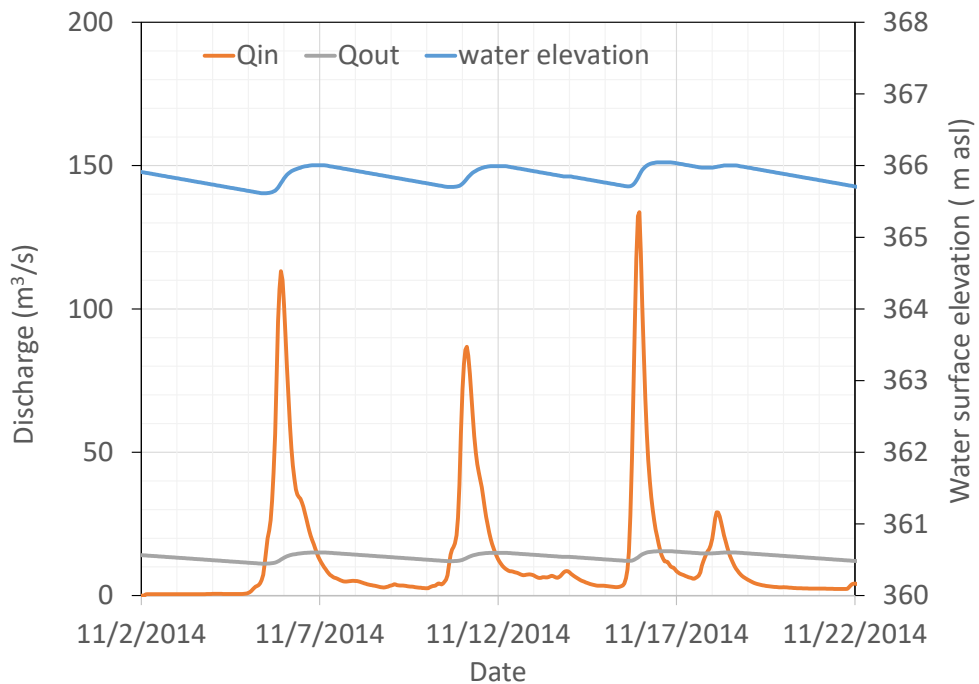


Figure 11.2 Input and output discharge and water elevation inside the Idro lake simulated by FEST model.

11.1.2 Dam with an assigned level in time

Malga Bissina dam is located in the Trento province, and in the Chiese river basin. It has a volume of about 61 million m³ that is used for hydropower production. In this application the purpose is to perform a simulation following a prescribed target water level that defines the usual dam regulation. The used target water levels are not real observations, they are synthetic data generated just for demonstration purposes. When a target stage is assigned in a on-stream dam, the simulation of the water surface elevation within the basin solves the mass balance equation by setting the outflow discharge as:

- When water surface is lower than target water level, outflow is computed as the minimum between the inflow discharge and the environmental flow.
- When water surface is greater than target water level, outflow is computed as the maximum between the environmental flow and the value retrieved from the dam geometry table.



Figure 11.3 The Malga Bissina dam on the Cjiese river for hydropower production. (*image source:*

https://dgdighe.mit.gov.it/categoria/articolo/_dighe_di_rilievo/diga_malga_bissina.

The `reservoirs.ini` file to include the Malga Bissina dam is shown hereafter.

```
nreservoirs = 1
hotstart = cold
epsg = 32632

[1]
  id = 2
  type = on
  name = bissina
  rk = 4
  easting = 617452.
  northing = 5101300.
  stage-target-file = ./data/bissina_stage.fts
  stage = 1779.
  e-flow = 0.08 # environmental flow [m3/s]
  geometry = ./data/bissina.tab
```

The `reservoirs.ini` file to assign the Malga Bissina dam

The `bissina.tab` file is shown hereafter.

```
Table Start
Title: reservoir
Id: pusiano # mandatory
Columns: [h] [area] [volume] [Qout]
Units: [m] [m2] [m3] [m3/s]
      1740.0 762500.0 24400000.0 1.0
      1741.0 762500.0 25162500.0 1.0
      1742.0 762500.0 25925000.0 1.0
      1743.0 762500.0 26687500.0 1.0
      1744.0 762500.0 27450000.0 1.0
      ...
      1775.0 762500.0 51087500.0 4.0
      1776.0 762500.0 51850000.0 5.0
      1777.0 762500.0 52612500.0 6.0
      1778.0 762500.0 53375000.0 7.0
      1779.0 762500.0 54137500.0 10.0
      1780.0 762500.0 54900000.0 15.0
      1781.0 762500.0 55662500.0 30.0
      1782.0 762500.0 56425000.0 50.0
      1783.0 762500.0 57187500.0 100.0
      1784.0 762500.0 57950000.0 313.69
      1785.0 762500.0 58712500.0 336.14
      1786.0 762500.0 59475000.0 393.57
      1787.0 762500.0 60237500.0 470.69
      1788.0 762500.0 61000000.0 563.22
      1789.0 762500.0 61762500.0 706.65
Table End
```

The `bissina.tab` file.

The `bissina_stage.fts` file is shown hereafter.

```
description =      water surface elevation
unit =          m asl
epsg =         32632
count =        1
dt =           3600
missing-data   =      -999
offsetz        =      0

metadata
Malga_Bissina_Dam 1      0      0      0

data
DateTime      1
2003-01-01T00:00:00+01:00      1782.498
2003-01-01T01:00:00+01:00      1782.498
2003-01-01T02:00:00+01:00      1782.498
2003-01-01T03:00:00+01:00      1782.498
...
2007-04-16T20-00-00+01:00      1779.516
2007-04-16T21-00-00+01:00      1779.516
2007-04-16T22-00-00+01:00      1779.516
2007-04-16T23-00-00+01:00      1779.516
2007-04-17T00-00-00+01:00      1779.486
2007-04-17T01-00-00+01:00      1779.486
2007-04-17T02-00-00+01:00      1779.486
2007-04-17T03-00-00+01:00      1779.486
2007-04-17T04-00-00+01:00      1779.486
2007-04-17T05-00-00+01:00      1779.486
2007-04-17T06-00-00+01:00      1779.486
...
```

The `bissina_stage.fts` file.

When the model runs produces a file that contains water elevation inside the basin upstream discharge and downstream discharge as shown hereafter.

```

FEST: reservoir routing
reservoir: bissina
id:      2

data
DateTime  h[m]  Qupstream[m3/s]  Qdownstream[m3/s]
2004-01-01T01:00:00+00:00  1779.000  0.000  0.000
2004-01-01T02:00:00+00:00  1779.000  0.000  0.000
2004-01-01T03:00:00+00:00  1779.000  0.000  0.000
...
2008-04-11T03:00:00+00:00  1779.574  3.675  0.020
2008-04-11T04:00:00+00:00  1779.574  3.562  0.020
2008-04-11T05:00:00+00:00  1779.574  3.197  0.020
2008-04-11T06:00:00+00:00  1779.574  2.902  0.020
2008-04-11T07:00:00+00:00  1779.574  3.572  0.020
2008-04-11T08:00:00+00:00  1779.574  8.151  0.020
2008-04-11T09:00:00+00:00  1779.575  11.380  12.873
2008-04-11T10:00:00+00:00  1779.575  10.492  12.873
2008-04-11T11:00:00+00:00  1779.574  14.306  12.872
2008-04-11T12:00:00+00:00  1779.574  12.495  12.872
2008-04-11T13:00:00+00:00  1779.575  9.716  12.874
2008-04-11T14:00:00+00:00  1779.575  8.743  12.874
2008-04-11T15:00:00+00:00  1779.575  10.809  12.874
...

```

Output file.

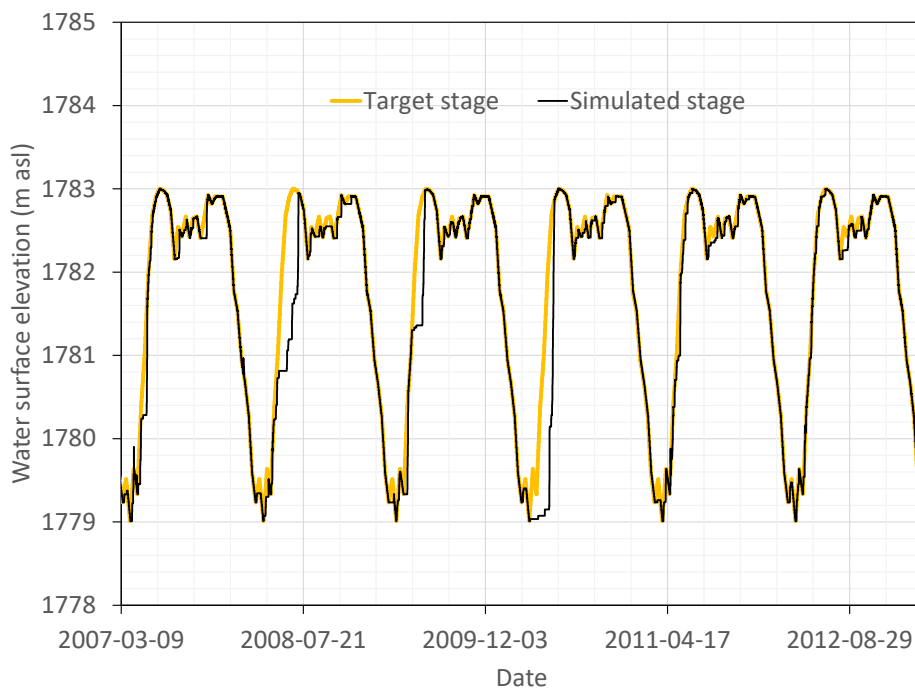


Figure 11.4 Water surface elevation simulated by FEST model and assigned as target.

11.1.3 On stream detention basin

The Gurone dam is an example of on stream detention basin that was put into operation in 2010 to mitigate flood risk on the Olona river, in northern Italy. The basin stores a total volume of 1.79 Mm³. Two gates regulate the basin outflow to keep the maximum discharge below 36 m³/s. When the water elevation inside the basin exceeds 289.3 m asl, water is evacuated from a 114 m length spillway with a maximum capacity of 175 m³/s at the maximum water elevation of 290.57 m asl. The minimum water level in the basin is 278.9 m asl.



Figure 11.5 The Gurone dam on the Olona river for flood risk mitigation. (*image source: PIANO EMERGENZA DIGA – PED DIGA DI OLONA (VA).*)

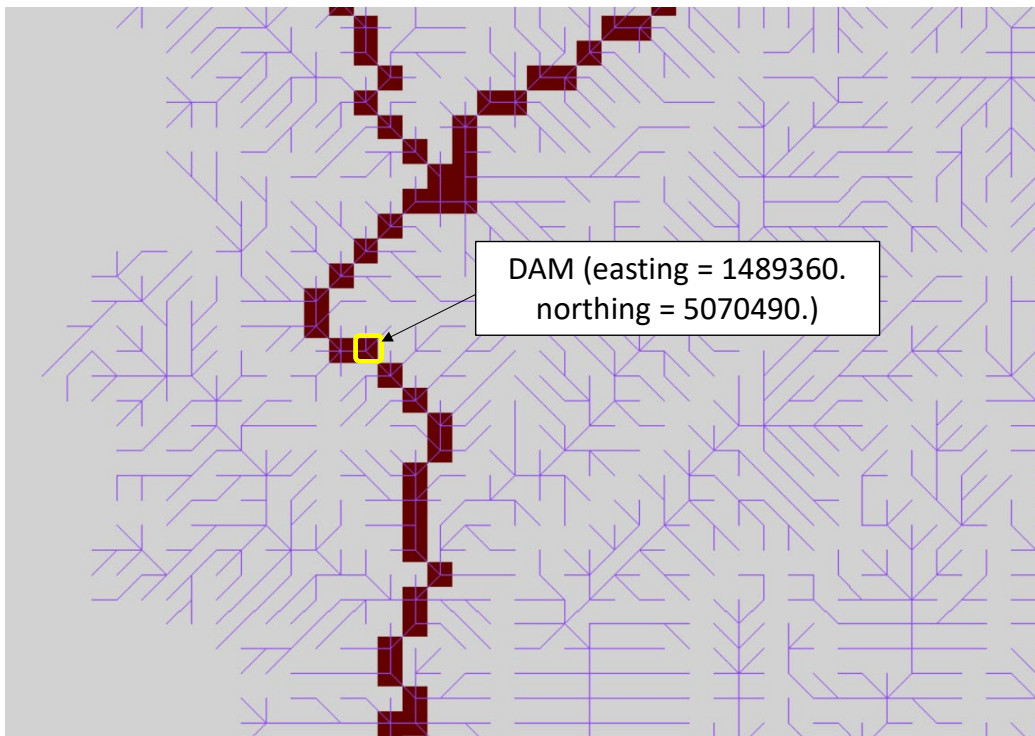


Figure 11.6 Location of the Gurone dam along the flow accumulation map of the Olona river basin.

The `reservoirs.ini` file to include the Gurone detention basin along the Olona river course is shown hereafter.

```
nreservoirs = 1
hotstart = cold
epsg = 3003

[1]
id = 3
type = on #on-stream
name = gurone
rk = 4 #runge-kutta order
easting = 1489360.
northing = 5070490.
stage = 278.9 #initial stage [m asl]
free-flow = 10. #[m3/s]
free-flow-elevation = 278.9 #[m asl]
geometry = ./data/gurone.tab
```

The `reservoirs.ini` file to assign the Gurone dam

The `gurone.tab` file is shown hereafter.

```

Table Start
Title:      reservoir
Id:        gurone
Columns:    [h]          [area]          [volume]        [Qout]
Units:      [m]          [m2]            [m3]            [m3/s]
           278.9         153385          0                0
           279.0         153385          15338.5          10
           279.1         153385          30677            15
           279.2         153385          46015.5          36
           289.3         153385          1595204          36
           290.57        153385          1790002.95       211
Table End

```

The gurone.tab file.

When the model runs produces a file that contains water elevation inside the basin upstream discharge and downstream discharge as shown hereafter.

```

FEST: reservoir routing
reservoir: gurone
id:          3

data
#           h[m]   Qupstream[m3/s]   Qdownstream[m3/s]
2014-11-01T00:00:00+00:00  278.900   0.000   0.000
2014-11-01T01:00:00+00:00  278.900   0.000   0.000
2014-11-01T02:00:00+00:00  278.900   0.000   0.000
...
...
2014-11-10T07:00:00+00:00  279.101   15.705   15.237
2014-11-10T08:00:00+00:00  279.111   17.758   17.256
2014-11-10T09:00:00+00:00  279.122   20.046   19.684
2014-11-10T10:00:00+00:00  279.137   23.618   22.825
2014-11-10T11:00:00+00:00  279.159   28.280   27.381
2014-11-10T12:00:00+00:00  279.184   33.519   32.584
2014-11-10T13:00:00+00:00  279.198   35.738   35.513
2014-11-10T14:00:00+00:00  279.217   37.841   36.000
2014-11-10T15:00:00+00:00  279.289   39.639   36.000
2014-11-10T16:00:00+00:00  279.380   39.258   36.000
2014-11-10T17:00:00+00:00  279.481   41.277   36.000
2014-11-10T18:00:00+00:00  279.652   44.199   36.000
...

```

Output file.

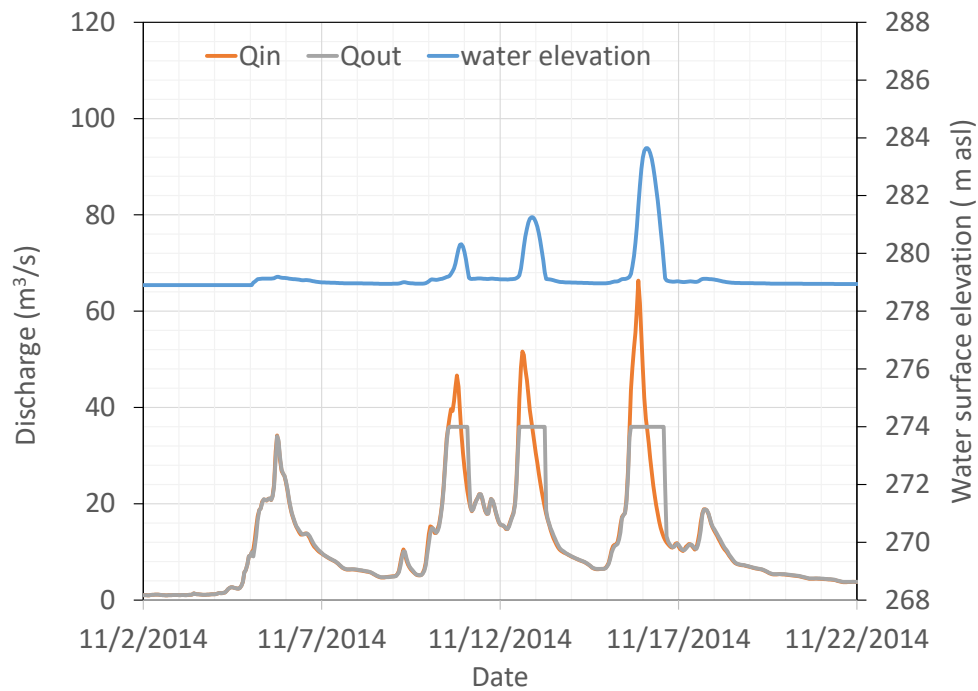


Figure 11.7 Input and output discharge and water elevation inside the basin simulated by FEST model.

11.1.4 Dam with flow diversion

Water stored within a dam is often used for hydropower generation or several further purposes such as, providing drinking water, or water for crop irrigation. To this purpose, a given amount of water is diverted from the reservoir and conveyed, in case of dam for hydropower generation, to the hydropower plant, usually located downstream in the river valley, sometimes in a different river basin.

The Santa Caterina dam, located in Auronzo di Cadore, in northern Italy, was built in 1930 and it is approximately 55m high. Water is diverted for hydropower production.



Figure 11.8 Santa Caterina dam, seen from upstream (source: <https://progettodighe.it/dighe/santa-caterina/>).

The `reservoirs.ini` file to include the Santa Caterina dam is shown hereafter.

```
#info to configure reservoirs
nreservoirs = 1 # number of reservoirs
hotstart = cold
epsg = 32633

[1]
id = 1
type = on
name = santa_caterina
rk = 4
easting = 305461.273
northing = 5157052.895
stage-target-file = ./data/santa_caterina_stage.fts
stage = 803
e-flow = 0.852930122
geometry = ./data/santa_caterina.tab
[[manage-high-level]]
full-reservoir-level = 826.2
qout = qin
rising = 1
[[diversion]]
weir-change-doy = 31, 45, 118
weir = ./data/weir.tab
xout = 304514.806 # x coordinate of outflow
yout = 5151740.539 # y coordinate of outflow
e-flow = 0.2 # environmental flow [m3/s]
channel-length = 7200 # [m]
channel-slope = 0.017 # [m/m]
channel-manning = 0.025 #s m^-1/3
section-bottom-width = 10 # [m]
section-bank-slope = 45
```

The `reservoirs.ini` file to configure the Santa Caterina dam

The `santa_caterina.tab` file is shown hereafter.

Table	Start			
Title:	Santa Caterina dam			
Id:	dam1			
Columns:	[h]	[area]	[volume]	[Qout]
Units:	[m]	[m2]	[m3]	[m3/s]
793.46	1.00	0.00	0	
793.50	1.30	0.05	0	
794	5.00	1.64	0.85	
795	14.00	11.19	0.85	
796	41.00	38.82	0.85	
797	78.01	98.52	0.85	
798	122.01	198.75	0.85	
799	188.02	354.10	0.85	
800	277.03	587.07	0.85	
801	407.05	929.76	0.85	
802	800.10	1535.30	0.85	
802.9	4991.00	4162.25	0.85	
803	5456.66	4686.96	11.64	
804	38893.67	27029.31	11.64	
805	58570.03	75859.54	11.64	
806	71119.54	140767.08	11.64	
807	81790.82	217275.62	11.64	
808	90933.92	303683.71	11.64	
809	98855.87	398618.21	11.64	
810	106459.79	501314.06	11.64	
811	113556.64	611357.76	11.64	
812	120569.48	728455.89	11.64	
813	136478.39	857059.37	11.64	
814	150338.06	1000536.89	11.64	
815	170029.42	1160819.09	11.64	
816	203804.48	1347904.91	11.64	
817	232801.96	1566353.12	11.64	
818	252030.27	1808865.38	11.64	
819	280846.73	2075447.97	11.64	
820	323800.89	2377986.55	11.64	
821	356845.86	2718475.15	11.64	
822	382726.97	3088390.97	11.64	
823	409483.18	3484629.83	11.64	
824	429354.57	3904148.07	11.64	
825	444312.37	4341056.32	11.64	
826	458461.07	4792513.78	11.64	
826.1	458461.07	4838359.89	11.64	
826.2	458461.07	4884206.00	11.64	
826.3	458461.07	4930052.10	18.90	
826.4	458461.07	4975898.21	32.71	
826.5	458461.07	5021744.32	51.18	
826.6	458461.07	5067590.42	73.59	
826.7	458461.07	5113436.53	99.11	
826.9	458461.07	5205128.74	157.87	
827	458461.07	5250974.85	190.64	
827.1	458461.07	5296820.96	225.35	
827.2	458461.07	5342667.06	261.91	
827.3	458461.07	5388513.17	300.22	
827.4	458461.07	5434359.28	340.10	
827.5	458461.07	5480205.38	381.48	
827.6	458461.07	5526051.49	424.32	
827.7	458461.07	5571897.60	468.45	
Table	End			

The `santa_caterina.tab` file.

When the model runs produces a file that contains water elevation and volume inside the reservoir, upstream and downstream discharge, and input and output discharge conveyed through the diversion, as shown hereafter.

```
FEST: reservoir routing
reservoir: santa_caterina
id: 1

data
DateTime h[m] Volume[m3] Qupstream[m3/s] Qdownstream[m3/s]
QinChannel[m3/s] QoutChannel[m3/s]
2018-10-15T00:00:00+00:00 803.0 4686.9 0.0 0.0 0.0 0.0
2018-10-15T01:00:00+00:00 803.0 4686.9 0.0 0.0 0.0 0.0
2018-10-15T02:00:00+00:00 803.0 4686.9 0.0 0.0 0.0 0.0
...
...
2018-10-28T04:00:00+00:00 820.2 2458827.7 92.2 0.8 0.0 0.0
2018-10-28T05:00:00+00:00 821.2 2808854.5 100.3 0.8 0.0 0.0
2018-10-28T06:00:00+00:00 822.2 3168030.5 102.8 0.8 0.0 0.0
2018-10-28T07:00:00+00:00 823.1 3564902.5 122.7 0.8 0.0 0.0
2018-10-28T08:00:00+00:00 824.3 4058442.0 151.9 0.8 0.0 0.0
2018-10-28T09:00:00+00:00 825.7 4659342.0 178.4 0.8 0.0 0.0
2018-10-28T10:00:00+00:00 826.4 4981831.5 189.2 184.2 5.0 2.5
2018-10-28T11:00:00+00:00 826.4 4981831.5 196.6 191.6 5.0 4.9
2018-10-28T12:00:00+00:00 826.9 5226652.5 183.6 168.2 5.0 4.9
2018-10-28T13:00:00+00:00 826.9 5223965.5 165.8 166.3 5.0 5.0
2018-10-28T14:00:00+00:00 826.9 5207004.0 155.3 154.2 5.0 5.0
2018-10-28T15:00:00+00:00 826.8 5203114.0 155.0 151.5 5.0 5.0
2018-10-28T16:00:00+00:00 826.8 5202386.5 163.6 158.6 5.0 5.0
2018-10-28T17:00:00+00:00 826.9 5206052.0 157.8 152.8 5.0 5.0
2018-10-28T18:00:00+00:00 826.9 5206052.0 163.2 158.2 5.0 5.0
2018-10-28T19:00:00+00:00 826.9 5217192.0 167.6 161.4 5.0 5.0
2018-10-28T20:00:00+00:00 826.9 5205016.5 152.5 152.7 5.0 5.0
2018-10-28T21:00:00+00:00 826.8 5172475.5 126.0 131.9 5.0 5.0
2018-10-28T22:00:00+00:00 826.7 5120627.5 88.5 98.7 5.0 5.0
2018-10-28T23:00:00+00:00 826.6 5071842.0 63.7 70.9 5.0 5.0
...
```

Output file.

11.1.5 Off stream detention basin

11.2 Diversions

The diversion is an hydraulic structure that diverts water from a river section to convey it to a downstream section of the same river (bypass channel) or to a different river (diversion channel). When diversions are activated in discharge routing configuration file, the user must provide information of diversions in a specific file (see example below).

The diversions configuration file contains two main keywords that configure general properties common to all diversions (Table below).

Table 11.6. Definition of common keywords in diversions configuration file.

Keyword	Description	Requirements
ndiversions	Number of diversion channels to configure	MANDATORY
epsg	Epsg coordinate system id	MANDATORY

For each diversion the user must configure the specific section numbered from 1 to the total number of diversions, filling in the required information, as listed and described in the following table.

Table 11.7. Information to provide for configuring a diversion channel.

Keyword	Description	Requirements
id	Number Id of diversion. Integer number.	MANDATORY.
name	Name of the diversion channel	MANDATORY
easting	x-coordinate of diversion	MANDATORY
northing	y-coordinate of diversion	MANDATORY
weir-change-doy	Day of year (doy) of the change of the weir table are set. When only one doy is assigned, the same weir table is used throughout the whole year. At least one number should be assigned. More doys are assigned in ascending order.	MANDATORY
weir	File containing table of	MANDATORY

Keyword	Description	Requirements
	stream-diverted discharges relationship	
e-flow	environmental flow (m ³ /s), minimum value of discharge to be released in the river downstream the diversion. To assign a changeable value during the year, a table on external file must be assigned (see Chapter 14)	OPTIONAL
xout	x-coordinate corresponding to the cell where discharge is released	MANDATORY
yout	y-coordinate corresponding to the cell where discharge is released	MANDATORY
channel-length	Channel length (m)	MANDATORY
channel-slope	Channel slope (m/m)	MANDATORY
channel-manning	Channel Manning roughness coefficient (s m ^{-1/3})	MANDATORY
section-bottom-width	Channel section bottom width (m)	MANDATORY
section-bank-slope	Channel section bank slope (degree)	MANDATORY

Some examples of diversion channels that can be simulated by the *FeST* model are described in the following sections.

11.2.1 Diversion channel

The Seveso river, in Northern Italy, is a small river that flows into Milan. This area is frequently hit by high rainfall intensity events that cause severe floods. The urban development after the second World War, has reduced the river basin soil infiltration capacity and exacerbated the flood occurrences. In 1980 the canale scolmatore di nord ovest (CSNO) bypass channel was put into operation to mitigate the flood risk in Milan. It is a 34

km length channel that deviates a maximum discharge of 30 m³/s from the Seveso river to convey it into the Ticino river.



Figure 11.9 The CSNO bypass channel on the Seveso river. Source: Stefano Stabile, CC BY-SA 3.0 <<https://creativecommons.org/licenses/by-sa/3.0/>>, via Wikimedia Commons.

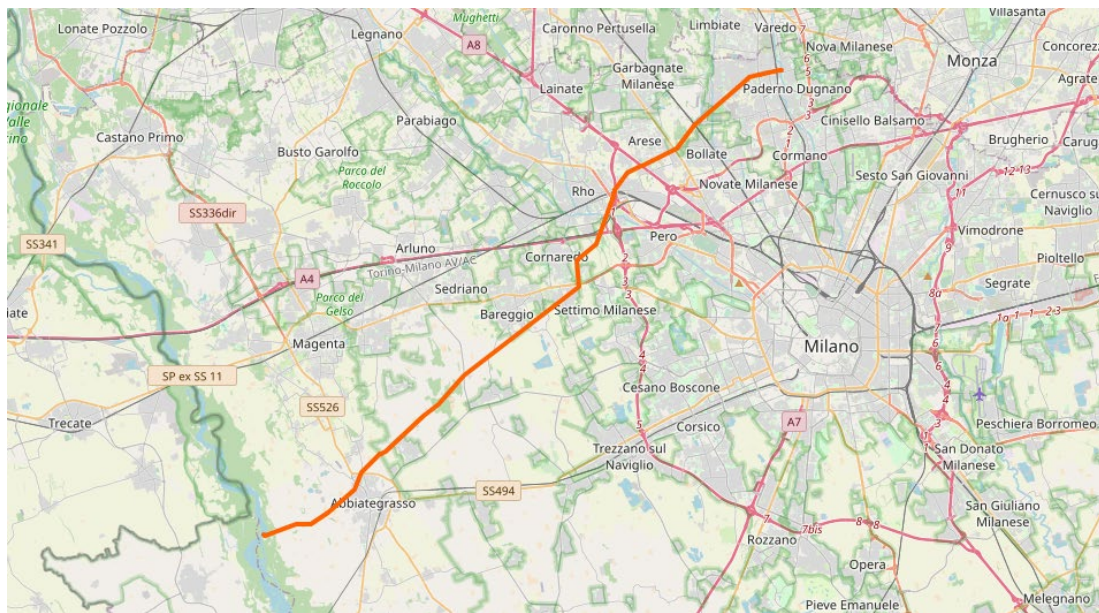


Figure 11.10 Path of the CSNO bypass channel. Source: <https://www.openstreetmap.org/relation/4633456>.

The `diversions.ini` file to include the CSNO by-pass channel along the Seveso river is shown hereafter.

```
ndiversions = 1
epsg = 3003

[1]
id = 2
name = csno
easting = 1512560.
northing = 5047490.
weir-change-doy = 1
weir = ./data/weir_csno.tab
xout = 0 # x coordinate of outflow
yout = 0 # y coordinate of outflow
channel-length = 34000 # [m]
channel-slope = 0.001 # [m/m]
channel-manning = 0.0222 #s m^-1/3
section-bottom-width = 10. # [m]
```

The `diversionss.ini` file to assign the CSNO by-pass channel. Note that `xout` and `yout` are set to 0 because the outlet section of the by-pass channel is outside the simulation domain

The `weir_csno.tab` file is shown hereafter. Note that there is one column associated to `doy`

1. User must provide one column for diverted discharge for every `weir-change-doy` listed in the configuration file. The column header name is the `doy` itself.

```
Table Start
Title:      weir
Id:   weir_csno #      mandatory
Columns:   [Qstream]      [1]
Units:     [m3/s]         [m3/s]
           0.0           0.0
           4.2           0.2
           5.1           1.3
           5.7           2.2
           6.4           3.0
           7.1           4.0
           7.8           5.0
           8.5           5.9
           9.2           6.8
           9.9           7.7
          10.6           8.5
           ...           ...
           ...           ...
          138.0          30.1
          139.9          30.1
          141.8          30.1
          143.8          30.1
          145.7          30.1
          147.7          30.1
          149.6          30.1
Table End
```

The weir_csno.tab file.

When the model runs produces a file that contains upstream and downstream discharge and input and output discharge in and from the diversion channel as shown hereafter.

```
FEST: diversion routing
diversion name: csno
diversion id:      2

data
DateTime Qupstream[m3/s]      Qdownstream[m3/s]  QinChannel [m3/s]
QoutChannel [m3/s]
2014-11-01T00:00:00+00:00    0.000      0.000      0.000      0.000
2014-11-01T01:00:00+00:00    0.000      0.000      0.000      0.000
2014-11-01T02:00:00+00:00    0.000      0.000      0.000      0.000
...
2014-11-15T13:00:00+00:00    11.319     2.100      9.219      0.054
2014-11-15T14:00:00+00:00    14.208     2.100     12.108     0.376
2014-11-15T15:00:00+00:00    18.267     2.087     16.180     0.949
2014-11-15T16:00:00+00:00    22.833     2.104     20.729     2.701
2014-11-15T17:00:00+00:00    28.560     2.781     25.779     5.741
2014-11-15T18:00:00+00:00    35.337     6.279     29.057    11.028
2014-11-15T19:00:00+00:00    40.972    10.872     30.100    17.341
2014-11-15T20:00:00+00:00    44.818    14.718     30.100    22.241
2014-11-15T21:00:00+00:00    45.403    15.303     30.100    25.306
...
```

Output file.

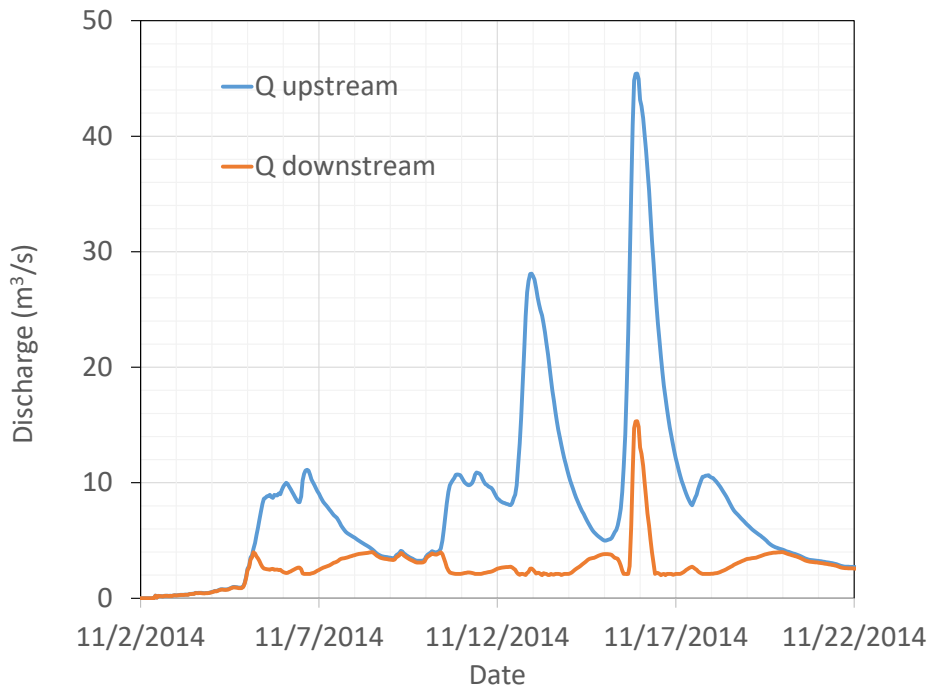


Figure 11.11 Discharge in the Seveso river upstream and downstream the diversion channel intake section.

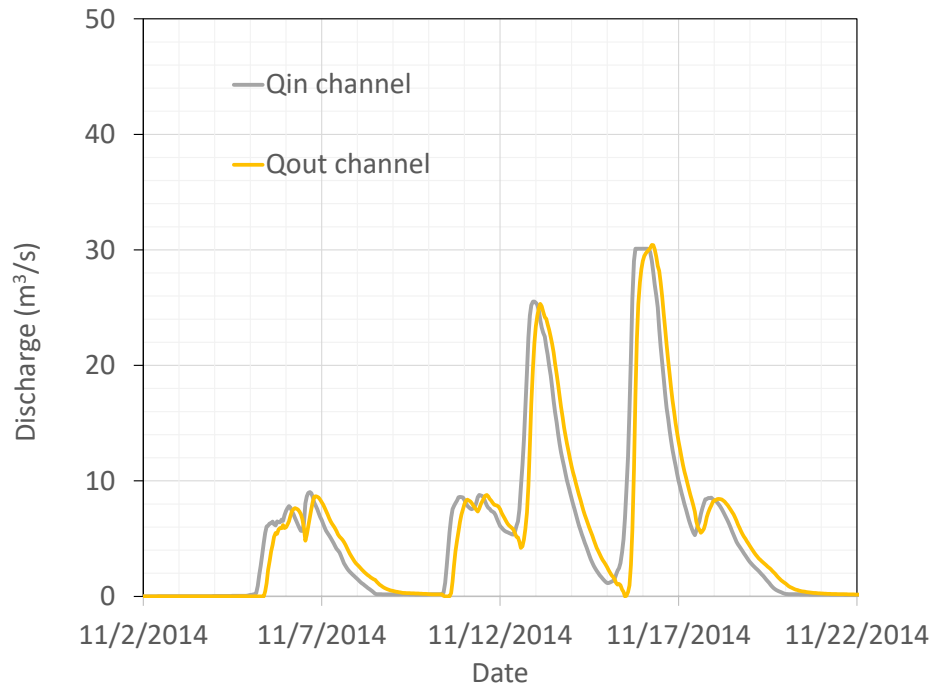


Figure 11.12 Input and output discharge in and from the CSNO diversion channel.

CHAPTER 12

GROUNDWATER

The FEST model can simulate groundwater flow with a quasi 3D scheme based on macroscopic cellular automata (Ravazzani et al., 2011). Groundwater is simulated as one or more aquifers that can interact through an aquitard. Aquitard depth is computed as the difference between bottom of upper aquifer and top of lower aquifer. Aquifers are enumerated starting from number 1 at top. At least one aquifer must be present in order to simulate groundwater. Optionally, the mutual flux exchange between river and groundwater can be simulated.

Groundwater simulation is activated by filling the specific section in the main configuration file (3.10). This chapter describes the groundwater configuration file, usually named `groundwater.ini`. Aquifers configuration is explained in Table 11.1, river-groundwater interaction is explained in Table 11.2

Table 12.1. How to configure aquifers to simulate groundwater.

Keyword	Description	Requirements
<code>aquifers</code>	Number of aquifers in the groundwater basin	Mandatory
<code>[aquifer_n]</code>	Section that configure the aquifer number n with $n = 1, \dots, \text{aquifers}$.	Mandatory
<code>[[boundary-condition-id]]</code>	Map of boundary condition and active cells definition. Available options: 1 = active cell, 2 = Dirichlet type boundary condition (assigned head), 3 =	Mandatory. The user can set a map with usual <code>file</code> , <code>format</code> , and <code>epsg</code> keywords, or he can assign a constant value using the <code>scalar</code> keyword

Keyword	Description	Requirements
	Neumann type boundary condition (flux assigned)	
[[boundary-condition-value]]	Map of boundary condition head values to be assigned to cells of Dirichlet type boundary condition (id = 2). For Neumann type boundary condition cells (id = 3), a flux is assigned internally at every time step from the soil water balance module.	Mandatory. The user can set a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword. This map can change in time by assigning a netCDF multitemporal layer. In this case the user can set syncinitial = 1 option to synchronize the simulation to the proper initial map
[[top-elevation]]	Top of the aquifer.	Mandatory. The user can set a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword
[[bottom-elevation]]	Bottom of the aquifer	Mandatory. The user can set a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword
[[hydraulic-conductivity]]	Aquifer hydraulic conductivity (m/s)	Mandatory. The user can set a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword
[[specific-yield]]	Aquifer specific yield (m/m)	Mandatory. The user can set

Keyword	Description	Requirements
		a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword
[[aquitard-conductivity]]	Aquitard hydraulic conductivity (m/s)	Required when more than one aquifer are simulated. The last (lower) aquifer does not need aquitard definition. The user can set a map with usual file, format, and epsg keywords, or he can assign a constant value using the scalar keyword

In the next example, one aquifer is configured. `boundary-condition-id`, `initial-head`, and `top-elevation`, are assigned as raster esri ascii maps. `bottom-elevation`, `hydraulic-conductivity`, and `specific-yield`, are assigned as a scalar constant. `boundary-condition-value` is assigned as a multitemporal net-cdf file with option `sync-initial-time = 1` to start from the proper initial value.

```
aquifers = 1

[aquifer_1]
  [[boundary-condition-id]]
    file = ./data/aquifer1_bc_id.asc
    format = esri-ascii
    epsg = 32632
  [[boundary-condition-value]]
    file = ./data/head_bc.nc
    format = net-cdf
    variable = head
    epsg = 32632
    sync-initial-time = 1
  [[initial-head]]
    file = ./data/dem-3m.asc
    format = esri-ascii
    epsg = 32632
  [[top-elevation]]
    file = ./data/dem.asc
    format = esri-ascii
    epsg = 32632
  [[bottom-elevation]]
    scalar = 50.
  [[hydraulic-conductivity]]
    scalar = 0.0003
  [[specific-yield]]
    scalar = 0.3
```

Example of groundwater configuration file.

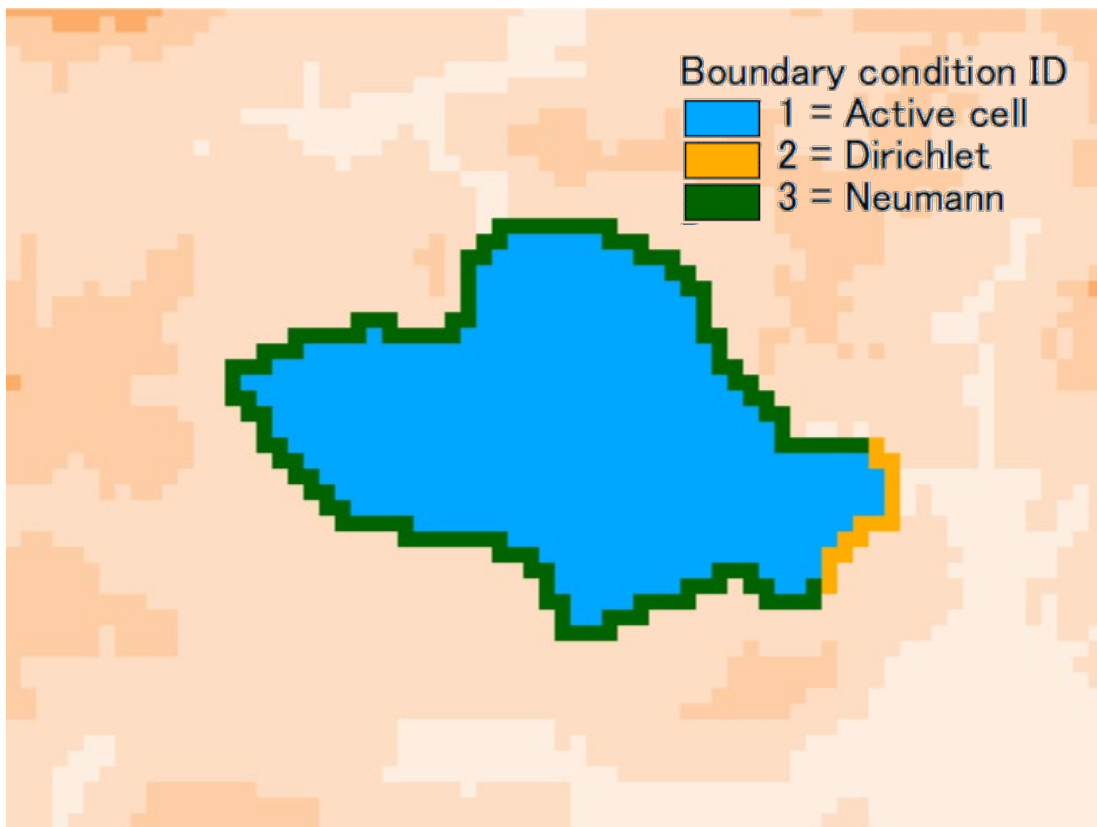


Figure 12.1 Example of map to set boundary condition and active cells.

12.1 River-groundwater flux exchange

Table 12.2. How to configure flux exchange between river and groundwater.

Keyword	Description	Requirements
[river-groundwater]	It starts section to configure river-groundwater interaction	Optional
[[river-id]]	Map that defines the cells where river-groundwater interaction is simulated. 1=river-groundwater interaction cell, nodata = no interaction.	Mandatory.
[[river-dem]]	Map that specifies the river	Mandatory

Keyword	Description	Requirements
	thalweg elevation. It may be different from digital elevation model assigned in Morphological properties section.	

A table with `id = river-groundwater` is required to define riverbed conductivity and thickness. In the following example two maps are assigned as `[[river-id]]` and `[[river-dem]]`. Table `river-groundwater` defines two ids with 0.0001 and 0.0003 m/s streambed conductivity, respectively and a streambed thickness of 1 m. `[[river-id]]` map is shown in Figure 11.2

```
[river-groundwater]
[[river-id]]
  file = ./data/river_aquifer_id.asc
  format = esri-ascii
  epsg = 32632

[[river-dem]]
  file = ./data/dem-5.asc
  format = esri-ascii
  epsg = 32632

Table Start
Title: river groundwater exchange parameters
Id: river-groundwater

Columns: [id]      [streambed-conductivity]  [streambed-thickness]
Units:   [-]       [m/s]                       [m]
         1         0.0001                    1.0
         2         0.0003                    1.0

Table End
```

Example of `[[river-groundwater]]` section in groundwater configuration file.

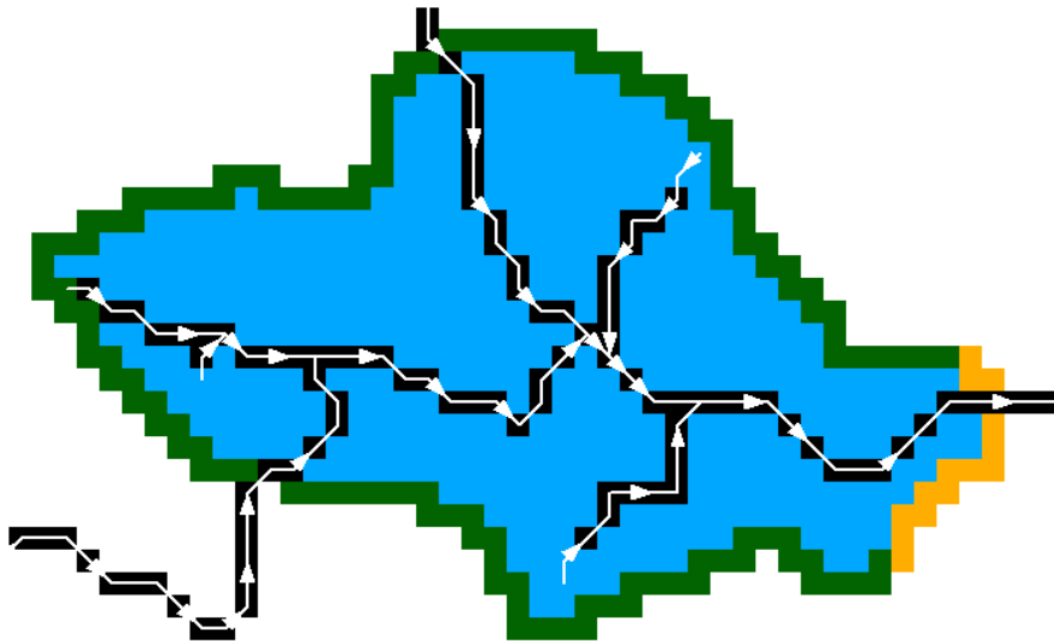


Figure 12.2 Map of flow accumulation (black cells) and river direction (white arrow) overlaid to boundary condition id map of Figure 11.1.

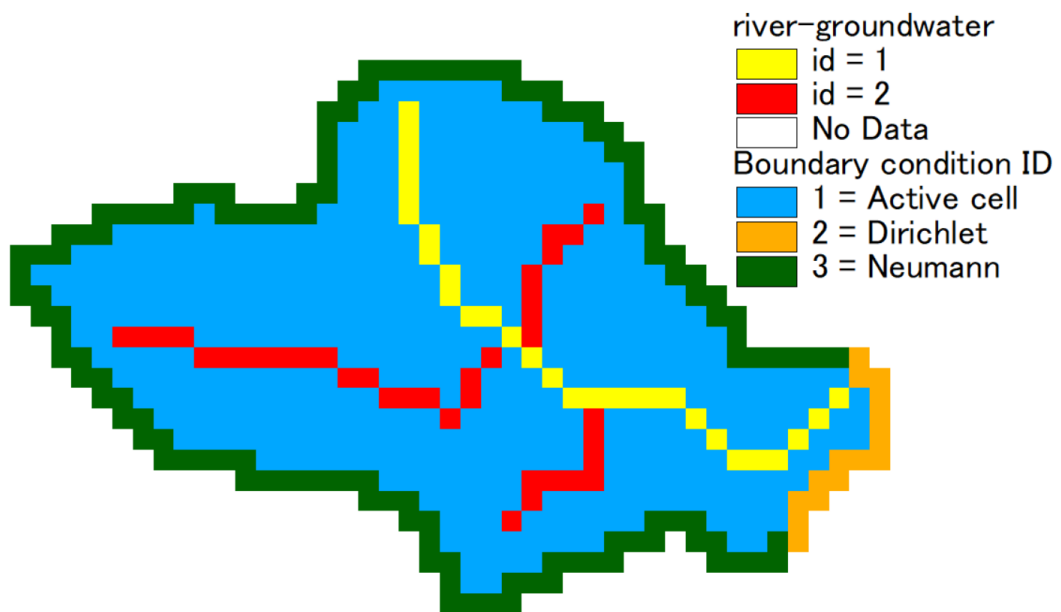


Figure 12.3 Map of flow river-groundwater id overlaid to boundary condition id map of Figure 11.1.

CHAPTER 13

SPATIAL AVERAGE

This file is used to write spatial average results of variables computed by the FEST model. The file contains a table of map that define the spatial extent to compute the average and the keyword `epsg` that define the reference system of maps, as in the example below.

```
epsg = 32632

Table Start
Title: mask grids for output
Id: masks
Columns:      [count]  [id]      [name]      [file]
Units:        [-]       [-]       [-]         [-]
              1         01        lago        "./bacino_lago.asc"
              2         02        gavardo     "./gavardo.asc"
              3         03        mezzane     "./bacino_mezzane.asc"
              4         04        asola       "./bacino_asola.asc"
Table End
```

Example of table of spatial extents in spatial average configuration file

For every spatial extent, the average is computed and exported on file of the variables chosen by user in the configuration file. There are specific sections for meteorological, soil balance, snow, glaciers, canopy, plants and sediment variables, as in the examples below. The value is computed for all variables marked with 1. When one variable is marked by 1 but it is not allocated because not computed by the FEST model according to options defined in the configuration files, value is not exported. For example, if user set to export wind speed in the meteorological section but wind speed is not used in the current simulation, values of wind speed are not written in the output file.

```
[meteo]
precipitation = 1           # gross precipitation (mm)
daily-precipitation = 0    # daily precipitation(mm)
temperature = 1            # air temperature(°C)
temperature-daily-mean = 1 # mean daily temperature (°C)
temperature-daily-max = 1  # maximum daily temperature (°C)
temperature-daily-min = 1  # minimum daily temperature (°C)
relative-humidity = 0      # air relative humidity (% [0-1])
solar-radiation = 0        #shortwave radiation (w/m2)
net-radiation = 0          #net radiation (w/m2)
wind-speed = 0             #wind speed (m/s)
irrigation = 0             #irrigation amount (mm)
```

Example of [meteo] variables marked for exporting spatial average on file.

```
[soil-balance]
soil-moisture = 1 # soil moisture(m3/m3)
runoff = 1        # runoff(mm)
infiltration = 1 # infiltration(mm)
percolation = 1  # percolation(mm)
actual-ET = 1    # actual evapotranspiration(mm)
potential-ET = 1 # potential evapotranspiration(mm)
capillary-rise = 0 # capillary flux(mm)
error = 1        # balance error (mm)
```

Example of [soil-balance] variables marked for exporting spatial average on file.

```
[snow]
rain = 1 # liquid precipitation(mm)
snow-water-equivalent = 1 # snow water equivalent(mm)
melt-coefficient = 1 # snow melt coefficient (mm/day/°C)
snow-covered-area = 1 # percentage of snow cover (0-1)
water-in-snow = 1 # water in snowpack (mm)
snow-melt = 1 # snow melt (mm)
```

Example of [snow] variables marked for exporting spatial average on file.

```
[glacier]
ice-water-equivalent = 1 # snow water equivalent(mm)
ice-covered-area = 1 # percentage of glacial cover (0-1)
water-in-ice = 1 # water in glaciers (mm)
ice-melt = 1 # ice melt (mm)
```


Example of [glaciers] variables marked for exporting spatial average on file.

```
[sediment]
detachment-rate = 0 # eroded sediment amount (kg)
```

Example of [sediment] variables marked for exporting spatial average on file.

```
[canopy]
canopy-storage = 0 # canopy water storage (mm)
throughfall = 0 # canopy throughfall (mm)
transpiration = 0 # canopy transpiration (mm)
```

Example of [canopy] variables marked for exporting spatial average on file.

```
[plants]
lai = 0 # leaf area index (m2/m2)
gpp = 0 # gross primary production (t)
npp = 0 # net primary production (t)
stem = 0 # stem mass (t)
root = 0 # root mass (t)
leaf = 0 # leaf mass (t)
cover = 0 # canopy cover (0-1)
dbh = 0 # plant diameter at breast height (cm)
height = 0 # plant height (m)
density = 0 # plant density (tree/hectare)
stem-yield = 0 # stem yield (t)
```

Example of [plants] variables marked for exporting spatial average on file.

The name of output files is the concatenation of result folder defined in the main configuration file <folder>, the name of the spatial extent <name>, and the name of the process related to the variables, as listed in the following table.

Table 13.1. spatial average file name.

variables	Output file name
meteorological	<folder><name>_meteo.out
soil balance	<folder><name>_balance.out
snow	<folder><name>_snow.out
glaciers	<folder><name>_glaciers.out
sediment	<folder><name>_sediment.out
canopy	<folder><name>_canopy.out

variables	Output file name
plants	<folder><name>_plants.out

CHAPTER 14

IRRIGATION

The *FeST* model can simulate water derivation from rivers and distribution on irrigation districts. Irrigation simulation is activated by filling in the specific section in the main configuration file (3.13). This chapter describes the irrigation configuration file, usually named `intakes.ini`. The irrigation configuration file contains two main keywords as described in the following Table.

Table 14.1. Definition of main keywords in irrigation configuration file.

Keyword	Description	Requirements
<code>count</code>	Number of intakes to configure	MANDATORY
<code>epsg</code>	EPSG code of the coordinate reference system used for intake coordinates. It is used only to write EPSG code in output file.	MANDATORY

For each intake the user must configure the specific section numbered from 1 to the total number of intakes, filling in the required information as listed and described in the following table.

Table 14.2. Information to provide for each intake.

Keyword	Description	Requirements
<code>id</code>	Label Id of intake.	MANDATORY.
<code>name</code>	Name of the intake	MANDATORY
<code>easting</code>	x-coordinate of intake on the watercourse	MANDATORY
<code>northing</code>	y-coordinate of intake on the	MANDATORY

Keyword	Description	Requirements
	watercourse	
e-flow	environmental flow (m ³ /s), minimum value of discharge to be released downstream the intake. To assign a changeable value during the year, a table on external file must be assigned (see example below)	MANDATORY
max-discharge	Maximum discharge (m ³ /s) that can be diverted from the river. To assign a changeable value during the year, a table on external file must be assigned (see example below)	MANDATORY
doy-start	Day of year (1-365) when irrigation starts.	MANDATORY
doy-stop	Day of year (1-365) when irrigation stops.	MANDATORY
sat-max	Maximum mean saturation of the irrigation district above which irrigation water is not distributed (option not yet implemented in the model).	MANDATORY
[[mask]]	Map of the irrigation district	MANDATORY

In the following examples two intakes are configured. In the first one, maximum diverted flow and ecological flow change in time and are assigned with a table provided from external files. In the second intake, maximum flow and ecological flow are assigned as a constant value. Water diverted from both intakes is used for irrigation of the same irrigation district.

```
#####
#      Intakes configuration file      #
#####
count = 2
epsg = 32633

[1]
  name = intake_1
  id = 01
  easting = 301950.9
  northing = 5064960.3
  max-discharge = ./data/qmax_intake1.tab
  e-flow = ./data/eflow_intake1.tab
  doy-start = 105
  doy-stop = 258
  sat-max = 0.5
  eta = 0.6
  [[mask]] # mask of irrigated district
    file = ./data/district.asc
    format = esri-ascii
    epsg = 32633

[2]
  name = intake_2
  id = 02
  easting = 311050.9
  northing = 5065380.2
  max-discharge = 100. # [m3/s]
  e-flow = 8. # [m3/s]
  doy-start = 100
  doy-stop = 220
  sat-max = 0.5
  eta = 0.8
  [[mask]] # mask of irrigated district
    file = ./data/district.asc
    format = esri-ascii
    epsg = 32633
```

Example of intake configuration for managing irrigation.

Content of `qmax_intake1.tab` is reported as follows. In this example time span between 31 and 90 `doy` is not included in the table. In this period a value of zero is assigned to maximum flow.

Columns:	[count]	[doy-start]	[doy-stop]	[value]
Units:	[-]	[day]	[day]	[m3/s]
	1	1	30	15
	2	91	200	35
	3	201	365	18

Content of qmax_intake1.tab file.

Content of eflow_intake1.tab is reported as follows. In this example a discharge value is assigned for each month of the year.

Table	Start			
Title:	eflow intake 1			
id:	eflow			
Columns:	[count]	[doy-start]	[doy-stop]	[value]
Units:	[-]	[day]	[day]	[m3/s]
	1	1	31	1
	2	32	59	1.5
	3	60	90	1.6
	4	91	120	2
	5	121	151	1.8
	6	152	181	1.7
	7	182	212	1.9
	8	213	243	1.8
	9	244	273	1.5
	10	274	304	1.3
	11	305	334	1.2
	12	335	365	1
Table	End			

Content of eflow_intake1.tab file.

An output file is created with name <folder>_irrigation_discharge.fts, where <folder> is the output folder (and prefix) for writing output files (see 3.2). The output file contains the time series of diverted discharge from the water courses. An example of output file is reported as follows.

```

description = irrigation discharge diverted from water courses
unit = m3/s
epsg = 32633
count =          2
dt =          3600
missing-data = -999.900
offsetz =          0.000

metadata
intake_1 01 301950.9 5064960.3 0.0
intake_2 02 311050.9 5065380.2 0.0

data
DateTime intake_1 intake_2
2011-01-01T00:00:00+00:00 0.00 0.00
2011-01-01T01:00:00+00:00 0.00 0.00
2011-01-01T02:00:00+00:00 0.00 0.00
2011-01-01T03:00:00+00:00 0.00 0.00
2011-01-01T04:00:00+00:00 0.00 0.00
2011-01-01T05:00:00+00:00 0.00 0.00
2011-01-01T06:00:00+00:00 0.00 0.00
...
...
2011-05-01T00:00:00+00:00 28.18 32.01
2011-05-01T01:00:00+00:00 32.24 33.12
2011-05-01T02:00:00+00:00 34.45 34.15
2011-05-01T03:00:00+00:00 35.00 33.34
2011-05-01T04:00:00+00:00 35.00 38.10
2011-05-01T05:00:00+00:00 35.00 42.06
2011-05-01T06:00:00+00:00 35.00 44.78

```

Example of irrigation output file.

CHAPTER 15

BASIN AVERAGE

This file is used to write variables computed by the *FeST* model averaged over a list of river basins defined by outlet section. The file contains a list of keywords, one for each variable the user can export. The keyword `raster-export` set to 1 enables the *FeST* model to write basin mask in esri-ascii format (see example below).

```
raster-export = 0 # OPTIONAL default = 0

#meteo
precipitation = 1
daily-precipitation = 0
temperature = 1
temperature-daily-mean = 0
temperature-daily-max = 0
temperature-daily-min = 0
relative-humidity = 0
solar-radiation = 0
net-radiation = 0
wind-speed = 1
irrigation = 0

#snow
snow-water-equivalent = 1

#soil balance
soil-moisture = 1
delta-soil-moisture = 1
runoff = 1
infiltration = 1
percolation = 1
actual-ET = 1
potential-ET = 0
```

Example of basin-average configuration file

When `raster-export = 1` the *FeST* model writes one file for each basin in the list. Files are saved in the root simulation directory with name `basin_mask_id_<basin-id>.asc` where `<basin-id>` is the id label of river basin set in the coordinate list file.

The average value is computed for all variables marked with 1. When one variable is marked by 1 but it is not allocated because not computed by the *FeST* model according to options defined in the configuration files, value is not exported. For example, if user set to export wind-speed but windspeed is not used in the current simulation, values of windspeed are not written in the output file. One output file is created for each variable. So average temperature values for all points are written in a file, precipitation values are written in a different file, and so on.

Variables that can be exported, description, and unit are listed in the following table.

Table 15.1. basin average variable description and unit.

variable	Description	Unit
precipitation	Precipitation fallen in the current time step	mm
daily-precipitation	Precipitation fallen in 24 hours	mm
temperature	Air temperature of the current time step	Celsius degree
temperature-daily-mean	Mean daily air temperature	Celsius degree
temperature-daily-max	Maximum daily air temperature	Celsius degree
temperature-daily-min	Maximum daily air temperature	Celsius degree
relative-humidity	Air relative humidity of the current time step	% (0-100)
solar-radiation	Solar radiation of the current time step	w/m ²
net-radiation	Net radiation of the current time step	w/m ²
wind-speed	Wind speed of the current time step	m/s
irrigation	Irrigation amount of the current time step	mm
snow-water-equivalent	Snow water equivalent of the current time step	mm
soil-moisture	Soil moisture of the current time step	-
runoff	Runoff of the current time step	mm
infiltration	Infiltration into soil of the current time	mm

variable	Description	Unit
	step	
percolation	Deep percolation out of transmission zone of the current time step	mm
actual-ET	Actual evapotranspiration of the current time step	mm
potential-ET	Potential evapotranspiration of the current time step	mm
delta-soil-moisture	Change in soil water storage of the current time step	mm

The name of output files is the concatenation of result folder name defined in the main configuration file <folder>, and a suffix that reminds the name of variable, as listed in the following table.

Table 15.2. basin average file name.

variable	Output file name
precipitation	<folder>mean_precipitation.fts
daily-precipitation	<folder>mean_pdaily.fts
temperature	<folder>mean_temperature.fts
temperature-daily-mean	<folder>mean_tmean.fts
temperature-daily-max	<folder>mean_tmax.fts
temperature-daily-min	<folder>mean_tmin.fts
relative-humidity	<folder>mean_rh.fts
solar-radiation	<folder>mean_rad.fts
net-radiation	<folder>mean_netrad.fts
wind-speed	<folder>mean_windspeed.fts
irrigation	<folder>mean_irrigation.fts
snow-water-equivalent	<folder>mean_swe.fts
soil-moisture	<folder>mean_soil-moisture.fts
runoff	<folder>mean_runoff.fts
infiltration	<folder>mean_infiltration.fts
percolation	<folder>mean_percolation.fts
actual-ET	<folder>mean_et.fts
potential-ET	<folder>mean_pet.fts

variable	Output file name
delta-soil-moisture	<folder>mean_delta-soil-moisture.fts

CHAPTER 16

RASTER EXPORTING

This file is used to write raster of variables computed by the *FeST*. The file contains a list of keywords, one for each variable the user can export. The keyword `time` set times when raster maps are written to output in folder specified by `folder` keyword. The section `[map-template]` (optional) allows to re-mapping raster maps to a given map template before files are written to output folder. This allows to change map extent, spatial resolution or spatial reference system. (see example below).

```
# configure variables for raster export

time = 0 0,12 * * *

folder = ./results/raster_maps/

[map-template]
  file = ./data/template_wgs84.asc
  format = esri-ascii
  epsg = 4326

[soil-balance]
  soil-moisture = 0
  runoff = 0
  infiltration = 0
  percolation = 0
  actual-ET = 0
  potential-ET = 0

[meteo]
  precipitation = 1
  temperature = 1
  relative-humidity = 0
  solar-radiation = 0
  net-radiation = 0
  wind-speed = 0


[snow]
  snow-water-equivalent = 0
```

Example of raster-export configuration file

The raster map is computed and written to output folder for all variables marked with 1. When one variable is marked by 1 but it is not allocated because not computed by the *FeST* model according to options defined in the configuration files, file is not exported. For example, if user set to export wind-speed but windspeed is not used in the current simulation, map of windspeed is not written to output folder. Currently maps are exported in *esri-ascii* format, one map for each variable and for each time step. Raster maps are processed before being written to output file in order to compute the average value or the cumulated value between to time steps, according to the specific variable (see table below).

Exporting time steps are assigned with a string that mimics the cron-table syntax on Linux operating systems, a configuration file that specifies shell commands to run periodically on a given schedule.

The syntax expects a string made of five fields which represent the time to write files to output folder, as described below:

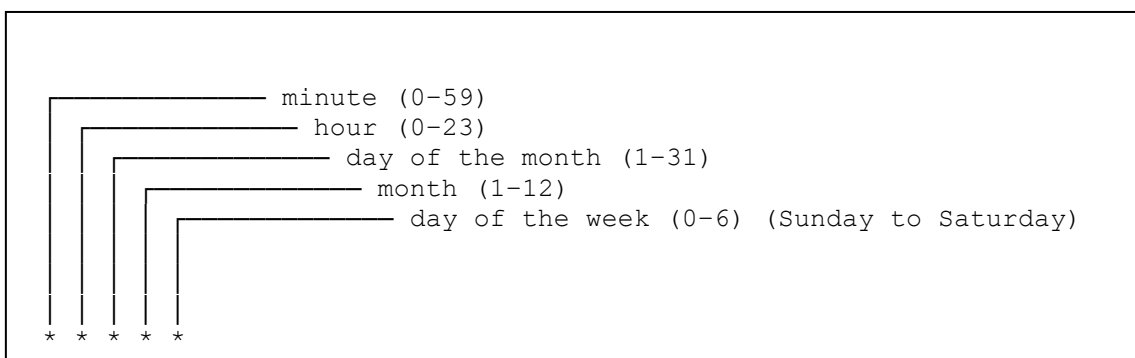

Description of the string to configure time to export maps.

Some examples:

- 0 * * * * once an hour at the beginning of the hour
- 0 0 * * * once a day at midnight
- 0 0 * * 0 once a week at midnight on Sunday
- 0 0 1 * * once a month at midnight of the first day of the month
- 0 0 1 1 * once a year at midnight of 1 January

Specifying multiple specific time intervals can be done with commas (e.g., 1, 2, 3) or with hyphen to assign a range of values (e.g. 7-10).

Variables that can be exported, description, and unit are listed in the following table.

Table 16.1. raster variables that can be exported: description and unit.

variable	Description	Unit
precipitation	Precipitation fallen in the time step	mm

variable	Description	Unit
	(cumulated)	
temperature	Air temperature (average)	Celsius degree
relative-humidity	Air relative humidity (average)	% (0-100)
solar-radiation	Solar radiation (average)	w/m ²
net-radiation	Net radiation (average)	w/m ²
wind-speed	Wind speed (average)	m/s
snow-water-equivalent	Snow water equivalent (average)	mm
soil-moisture	Soil moisture (average)	-
runoff	Runoff (cumulated)	mm
infiltration	Infiltration (cumulated)	mm
percolation	Deep percolation out of transmission zone (cumulated)	mm
actual-ET	Actual evapotranspiration (cumulated)	mm
potential-ET	Potential evapotranspiration (cumulated)	mm

The name of output files is the concatenation of folder name defined in the configuration file <folder>, a suffix in the form YYYY-MM-DDThh-mm that reminds date and time of the current time step <time>, and a suffix that reminds the name of variable, as listed in the following table.

Table 16.2. raster file name.

variable	Output file name
precipitation	<folder><time>_precipitation.asc
temperature	<folder><time>_temperature.asc
relative-humidity	<folder><time>_rh.asc
solar-radiation	<folder><time>_rad.asc
net-radiation	<folder><time>_netrad.asc
wind-speed	<folder><time>_windspeed.asc
snow-water-equivalent	<folder><time>_swe.asc
soil-moisture	<folder><time>_soil-moisture.asc
runoff	<folder><time>_runoff.asc
infiltration	<folder><time>_infiltration.asc

variable	Output file name
percolation	<folder><time>_percolation.asc
actual-ET	<folder><time>_et.asc
potential-ET	<folder><time>_pet.asc

References

- [1] Allen, R.G.; Pereira, L.S.; Raes, D.; Smith, M. Crop Evapotranspiration-Guidelines for Computing Crop Water Requirements-FAO Irrigation and Drainage Paper 56, 9th ed.; Food and Agriculture Organization of the United Nations: Rome, Italy, 1998; ISBN 92-5-104219-5.
- [2] Brooks, R.H., and Corey A.T., 1964. Hydraulic properties of porous media. Hydrol. Paper 3. Colorado State Univ., Fort Collins, CO, USA
- [3] Ceppi, A., Gambini, E., Lombardi, G., Ravazzani, G., & Mancini, M.. (2022). Sol40: forty years of simulations under climate and land use change. *Water*, 14(6).
- [4] González-Longatt, F., Medina, H., Serrano González, J., Spatial interpolation and orographic correction to estimate wind energy resource in Venezuela. *Renewable and Sustainable Energy Reviews*, 48, 1-16, 2015.
- [5] Green,W.H.; Ampt, G.A. Studies on soil physics I. Flow of air and water through soils. *J. Agric. Sci.* 1911, 4, 1–24.
- [6] Hargreaves, G.H., and Z.A. Samani (1982). “Estimating potential evapotranspiration.” *J. Irrig. Drain. Eng.*, ASCE, 108(3), 223-230.
- [7] Jenson, S. K., and Domingue, J. O. 1988. "Extracting Topographic Structure from Digital Elevation Data for Geographic Information System Analysis." *Photogrammetric Engineering and Remote Sensing* 54 (11): 1593–1600

- [8] Liston, G. E., Elder, K., 1911. A Meteorological Distribution System for High-Resolution Terrestrial Modeling (MicroMet). *Journal of Hydrometeorology*, 7, 217-234.
- [9] Greta Moretti and Alberto Montanari. Affdef: a spatially distributed grid based rainfall-runoff model for continuous time simulations of river discharge. *Environmental Modelling & Software*, 22(6):823-836, 2007. URL: <https://www.sciencedirect.com/science/article/pii/S136481520600082X>, doi:<https://doi.org/10.1016/j.envsoft.2006.02.012>.
- [10] Philip, J.R. Numerical solution of equations of the diffusion type with diffusivity concentration-dependent II. *Aust. J. Phys.* 1957, 10, 29-42.
- [11] Priestley, C. H. B., and R. J. Taylor, On the assessment of surface heat flux and evaporation using large-scale parameters, *Month. Weather Rev.*, 100, 81-92, 1972.
- [12] R. Ranzi, B. Bacchi, and G. Grossi. Runoff measurements and hydrological modelling for the estimation of rainfall volumes in an Alpine basin. *Quarterly Journal of the Royal Meteorological Society*, 129(588):653-672, January 2003. doi:10.1256/qj.02.60.
- [13] Ravazzani, G., Amengual, A., Ceppi, A., Homar, V., Romero, R., Lombardi, G., & Mancini, M.. (2016). Potentialities of ensemble strategies for flood forecasting over the Milano urban area. *Journal of hydrology*, 539, 237-253.
- [14] Ravazzani, G., Corbari, C., Morella, S., Gianoli, P., & Mancini, M.. (2012). Modified Hargreaves-Samani equation for the assessment of reference evapotranspiration in Alpine river basins. *Journal of irrigation and drainage engineering*, 138(7), 592-599.
- [15] Ravazzani, G., Gianoli, P., Meucci, S., & Mancini, M.. (2014). Indirect estimation of design flood in urbanized river basins using a distributed hydrological model. *Journal of hydrologic engineering*, 19(1), 235-242.
- [16] Ravazzani, G., Rametta, D., & Mancini, M.. (2011). Macroscopic cellular automata for groundwater modelling: a first approach. *Environmental modelling & software*, 26(5), 634-643.
- [17] Richards, L.A., 1931. Capillary conduction of liquids in porous mediums. *Physics* 1, 318-333.
- [18] Ross, P.J., 2003. Modeling soil water and solute transport - fast simplified numerical solutions *Agron J.* 95:1352-1361.
- [19] Soil Conservation Service (SCS). *Hydrology, National Engineering Handbook*; Soil Conservation Service: Washington, DC, USA, 1985
- [20] Van Genuchten, M. Th., 1980. A closed form equation for predicting the hydraulic conductivity of unsaturated soils. *Soil Sci. Soc. Am. J.*, 44: 892-898.

